


TV STANDS

ASSEMBLY INSTRUCTIONS

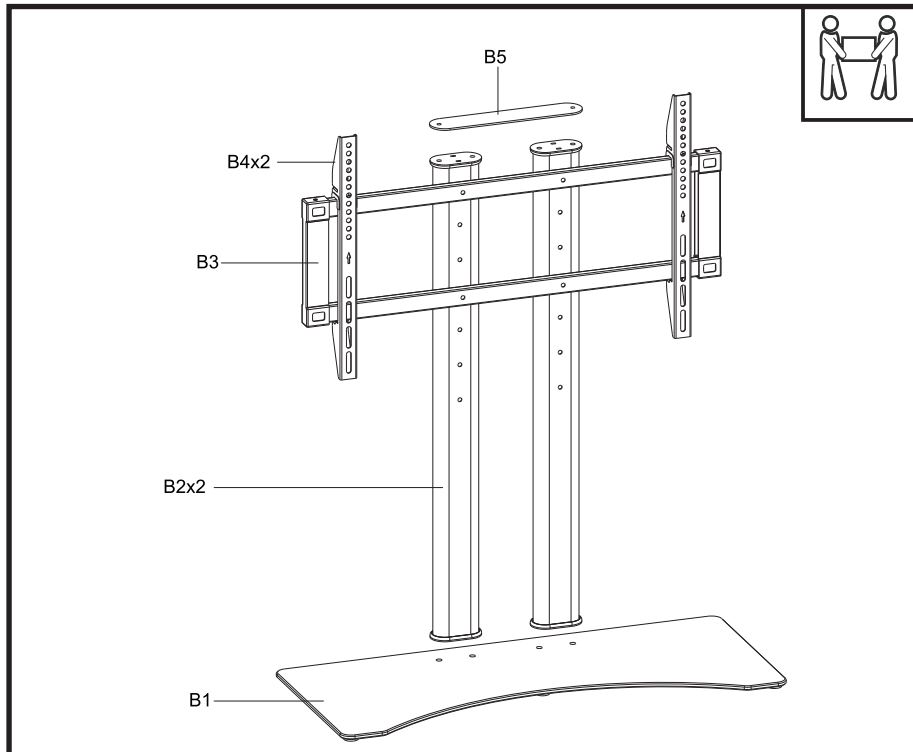

A1x4 	A2x4 	A3x4 	A4x4
A5x6 	A6x14 	A7x8 	A8x6
A9x1 			
M5x14 (x4) M-A 	M6x14 (x4) M-B 	M6x30 (x4) M-C 	M8x30 (x4) M-D
M8x50 (x4) M-E 	(x4) M-F 	(x8) M-G 	(x8) M-H

