

# СПИСОК КОДОВ ДЛЯ РАЗЛИЧНЫХ УСТРОЙСТВ

## КОДЫ ДЛЯ ТЕЛЕВИЗОРОВ

Бренд	Код
DEXP	000,006,007,008,009,010,011,014,015,016,017,025,026,028,029,032,033,034,045,046,051,052,054,057,058,067,069,071,075,076,077,078,079,080,081,086,087,088,091,092,093,100,102,103,105,107,113,115,116,117,128,129,130,131,138,139,157,159,162,163,164,165,171,172,173,174,177,182,183,184,185,186,187,188,189,190,191,210,224,225,226,233,235,250,251,252,253,254,255,256,257,265,266,269,270,271,273,274,288,289,290,291,292,297,299,300,301,302,303,304,305,306,307,309,318,319,321,323,324,336,337,338,339,340,341,342,345,348,372,385,386,392
CHANGHONG	000,008,009,091,092,093,010,011,014,016,026,028,033,051,052,057,058,067,071,086,087,088,100,159,162,182,183,184
KONKA	011,017,029,032,034,054,067,069,071,075,076,077,078,079,080,081,107,113,117,157,163,164,165,177,210
SKYWORTH --RGB	011,025,033,045,046,060,070,071,072,073,074,079,083,101,107,108,109,143,160,168,169,170,176,180,194,195,196,197,198,199,200
TCL	051,053,068,071,073,082,083,084,085,110,111,144,156
XIAHUA	011,016,024,027,025,033,053,054,055,056,060,098,080,095,079,073,211,209
HISENSE	000,006,007,008,010,014,015,025,045,046,103,105,107,115,116,128,129,130,131,138,139,171,172,173,174,185,186,187,188,189,190,191
Haier	103,112,118,119,175,185,186,187,188,201,205,206
JINXING	007,008,011,013,024,025,032,033,039,051,065,071,073,079,091,097,138
PANDA	001,011,016,021,022,023,024,025,026,028,033,040,043,053,056,009,057,058,051,062,073,079,089,091,061,124,125,181,203,204,208
SONY	041,049,005,094,106,148
PANASONIC (NATIONAL)	020,001,002,014,015,021,022,059,066
HITACHI	007,015,014,027,000,006,008,010,048,179
SHARP	003,018,016,025,135,136,137
MITSUBISHI	011,051
TOSHIBA	000,014,016,027,033,053,056,007,008,015,028,030,089,090,091,079
PHILIPS	013,023,024,039,040,043,141

Бренд	Код
SAMSUNG	008,011,016,021,025,037,039,040,043,050,033,024,051,091,123,113
SANYO	008,000,007,014,015,033,035,053,056,079,105,132,133,134,202
NEC	006,011,016,004,025,033,053,056,024,079
DAYU	012,042,031
BEIJING	008,012,011,019,016,023,024,025,027,028,029,030,031,033,040,043,050,053,056,026,079,091,039,042,051,021,122,126
XIHU	011,023,024,033,038,040,043,053,079,098
CONROWA	000,006,007,008,010,016,025,033,053,055,056,045,046,048,073,099
ROWA	011,016,023,024,025,040,043,096,127
TOBO	016,025,033,053,056,079,101,103
HITCHI	007,011,015,023,024,028,033,034,040,043,053,056,060,061,065,079
FUFIAN	017,001,032,047
ANHUA	016,025,033,053,056,079
BAIHUA	023,024,040,043
BAIHEHUA	016,025,012,019,026,027,028,029,030,031,042
BAILE	011,025,016
BAOSHENG	033,053,056,079
BaoHuaShi	011,025,016
CAIHONG	023,024,040,043
CAIXING	011,016,017,023,024,025,033,040,043,053,056,001,012,019,027,026,028,029,030,031,042,079
CHANGCHENG	011,025
CHENGDU	011,053,056,045,046,024,079,033
CHANGFENG	011,016,025,042,123
CHANGFEI	011,025,016,123
CHANGHAI	142
CHUNLAN	016,025,033,053,056,079,124
CHUNFENG	011,025,016
CHUNSUN	016,025
DONGDA	016,025
DONGHAI	011,016,025
FEILU	011,016,023,024,025,040,043,125
HUANGHE	016,025
HUANGHAIMEI	011,016,023,024,025,032,033,040,043,053,056,079
HUANGSHAN	016,025
HUANGLONG	011,016,023,024,025,032,033,040,043,053,056,079
HUARI	007,033,053,056,079
HAIYAN	011,023,024,033,040,043,053,056,079
HAIHONG	016,025,026,027,028,029,030

Бренд	Код
HAILE	032,047
HUANYU	011,015,023,024,033,040,043,053,056,009,057,058,079
HONGMEI	003,011,016,018,023,024,025,033,040,043,056,009,057,058,079
HONGYAN	011,033,053,056,079
JUHUA	011,023,024,033,040,043,053,056,079
JINGHAI	009,057,058
JINFENG	001,011,021,022
JINTA	016,023,024,025,033,040,043,053,056,009,057,058,079
JINQUE	011,025,016
JINQUE	032,033,053,056,079
JIAHUA	017,047,001,032,149,207
KUNLUN	001,011,021,022,033,025,012,042,040,039
KAIGE	011,016,023,024,025,033,040,043,053,056,079
KANGLI	027,012,019,025,026,028,030,031,033,120
KANGHONG	009,058,057
KANGLI	016,023,024,025,040,043,011,026,027,028,029,042,005
KANGYI	016,025,033,053,056,079,121
KONGQUE	011,016,023,024,025,033,040,041,043,124
KUAILE	016,025,033,053,056,079
LONGJIANG	011,033,053,056,079
LIHUA	001,002,011,016,020,021,022,025,032,033,040,043,053,056,059,063,065,079,145,146
MUDAN	011,023,024,033,040,043,053,056,009,057,058,079
MEILE	023,024,040,043,011,033,053,056,079
MENGMEI	001,011,021,022,033,053,056,079
NANSHENG	011,015,023,024,040,043,007,016,025,033,053,056,079
QINGDAO	011,033,053,056,079
RUYI	009,011,016,017,022,023,024,025,033,040,043,053,056,057,058,079,123
SHENCAI	011,015,000,006,007,023,024,040,043,011,033,053,056,079
SHANCHA	011,033,053,056,079
SHANGHAI	009,011,016,017,022,023,024,025,033,040,043,053,056,057,058,079,123
SHAOFENG	011,015,000,006,007,023,024,040,043,011,016,025,046,045,033
SHENYANG	011,025,016
SAIGE	003,011,016,018,023,024,025,040,043
SONGBAI	033,053,056,079
SANYUAN	016,025
SANJIAN	003,011,016,018,023,024,025,040,043
TAISHAN	033,053,056,079
TAISHAN	011,016,025,042,038,031,030,029,028,027
TIANE	003,011,018
TONGGUANG	033,053,056,079
WEIPAI	016,025

Бренд	Код
XIANGYU	016,025,032
XUELIAN	023,024,040,043,009,057,058
XINAGHAI	016,025,033,053,056,079
XIANGYANG	033,053,056,079
XINGFU	016,025
XINRISONG	009,057,058
YINGGE	016,023,024,025,040,043
YUHANG	016,025
YONGGU	016,023,024,025,040,043
YONGBAO	009,057,058
ZHUHAI	016,025,042
888	033,053,056,079
GANXIN	011,017,023,024,040,041,043
HUAFA	007,016,025
HUAQIANG	033,053,056,079
JVC	089,161
FEIYUE	011,016,023,024,025,040,043
FEILANG	016,025
NANBAO	016,025,033,053,056,009,057,058,079
FEIYAN	033,053,056,079
XINSIDA	123
NEC	089,140
CAILING	102
AOLINPU	104
SHANGGUANGDIAN	158,166,167
WARUMAIA	031,012,042
YOULANASI	011,023,024,040,043
GOLDSTAR	009,019,023,024,040,043,098,140
YOUSIDA	016,025,009,057,058
AIWA	009,057,058
HUODATEJI	032,001,017,047
JIALICAI	016,025,028,033,053,056,079,124
AOLINPIYA	033,053,056,079
SHENGLI	004
SHERWOOD	016,025
AKAI	033,053,056,079
IMPERIAL	033,053,056,012,019,025,026,027,028,029,030,031,042,079
COWN	011,033,053,056,079
FUJITSU	048
FULI	047
NIKON	009,057,058
LG	040,043,140
OTHER BRAND	036,044,114

## КОДЫ ДЛЯ VCD-ПЛЕЕРОВ

Бренд	Код
QISHENG	000,005,008,020,025
YINGZHIBAO	001
SONY	002,013,014,081,110,140

Бренд	Код
DODA	003,005
SHINCO	007,012,026,027,047,090,110
BBK	010,044,046,085,089,127
CHANGHONG	028,029,042,124
KENNOOD	032,093
ONKYO	033,080
DIHE	034
HITACHI	035
JINGE	036
Amoisonic	038,040,045,054,092,101,123,125
PHILIPS	039,056,101,106
IDALL	043,048,057,068,072,084,091,061,122,113
MALATA	009,011,049,051,053,055,062,145,146,147,120,121
PANASONIC	050,098,097,099,052,112,052
TOSHIBA	058,067,069,073
AIWA	059,070,133,134
SAST	060,061
ZAOWEI	063
SMC	065
MALANSHI	066
PIONEER	071,073,129,130
JVC	074,082,109
DENON	075,137,139
DONGPENG	076,117
SHARP	077,138
CAINI	078
VICTOM	079
RMS	020,030,083
NINTAUS	086,088,095,096,103,143,144
THAKRAL	100
RISHENG	105
YITONG	023,115
SKYWORTH	148
PANDA	107,108
JIABAO	111
SAMSUNG	094
SHANSHUI	128
VCD3.0	141,142
SUBOR	119
TCL	104
JX2026G	116
DONGAN	024
ROWA	043
KONGQUE	102
GOLDSTAR	136
OTHER BRAND	004,006,015,017,018,019,021,023,024,030,037,061,064,080,083,087,110,112,114,118,131,115

## КОДЫ ДЛЯ DVD-ПЛЕЕРОВ

Бренд	Код
TCL	000,015,039,054,055
SHINCO	001,010
MALATA	002,009,023,024,073
NINTAUS	003,071,079,080,081,082,090,093
SAMSUNG	004,017,049
QISHENG	005,037
AKAI	006
LG	008
SAST	011
PHILIPS	012
SHANSHUI	013,046
PANASONIC	014
BBK	018,021,027,028,033,048,078,091
SAST	020,059,060,076
SKYWORTH --RGB	018,022,025,032,034,058,096,097
DANSAI	026,074
HUABAO	018,029,061,062,063
KETAI	030
JINGEWANGPAI	018
JINWANG	035
LINSHUMA	036
PANDA	038,051,052,053
SONY	040
TOSHIBA	041,069
DENON	042
ONKYO	043
PIONEER	044
JVC	045
Victor	047,084
QINGHUATONGFANG	056,057
BRAND	064,065
EMERSON	066,067
Haoji	068
DIHE	070,077
OKON	072
KENNOOD	075
THOMSON	083
XINDAI	085
DAYU	086,087
CAIXING	088,095
JIEKE	089
QIXING	092
WEIFA	050
OTHER BRAND	007,016,019