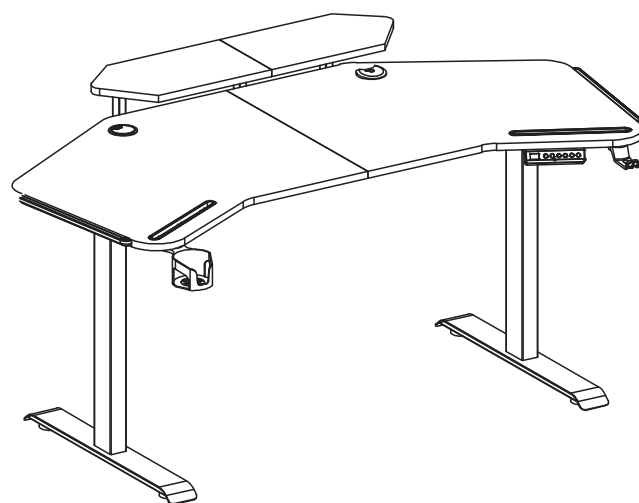 
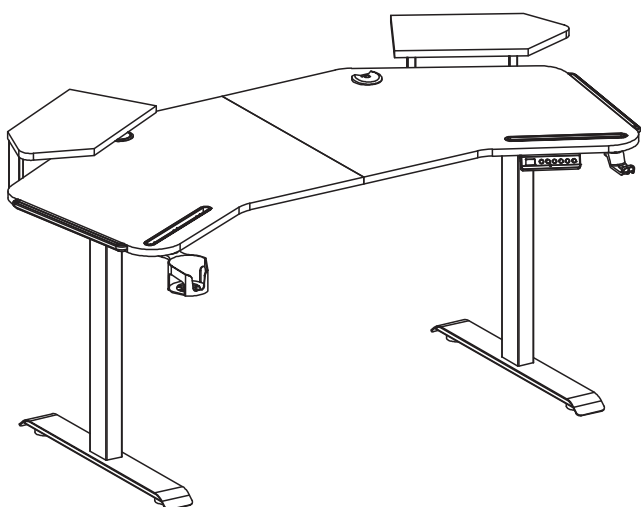 


 
 
 
 
 
 
 
 
 
 
 

 
 
 
 



 

 
 



 
 
USER MANUAL

AD-D-DD1-1600L-02-B

anda seat




ACCESSORIES LIST


A  x1	B  x1	C  x1	D  x1	E  x1
F  x1	G  x1	H  x2	I  x4	J  x2
K  x2	L  x1	M  x2	O  x4	
①  x1	②  x1	③  x1	④  x2	⑤  x8
⑥  x4	⑦  x48	⑧  x14	⑨  x14	⑩  x8
⑪  x20	⑫  x1	⑬  x1	⑭  x4	

ASSEMBLE GUIDE

 
01

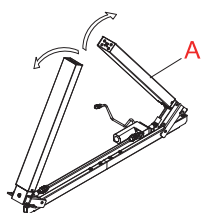


02

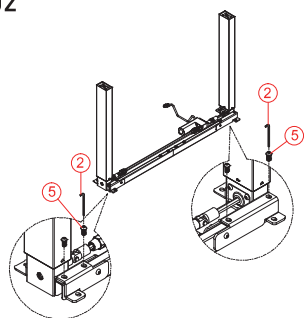 


03

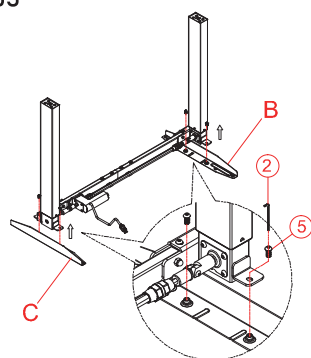 


04

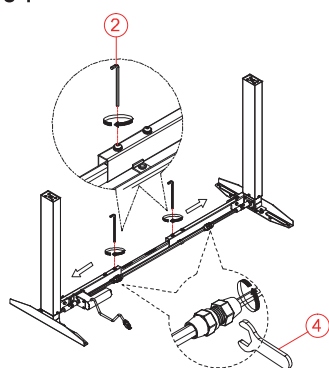 


05

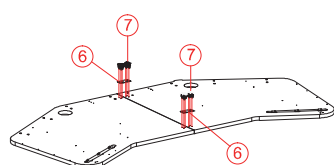 


06

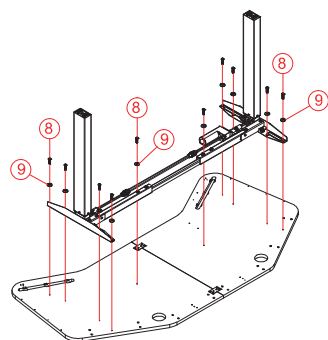 


07

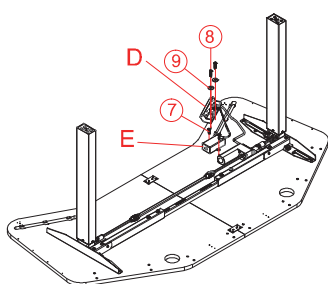 


08

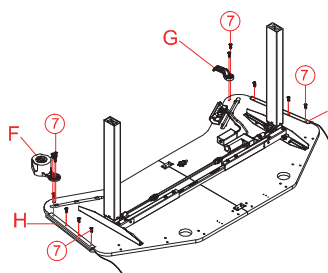 


09

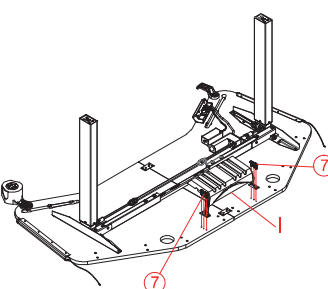 


10

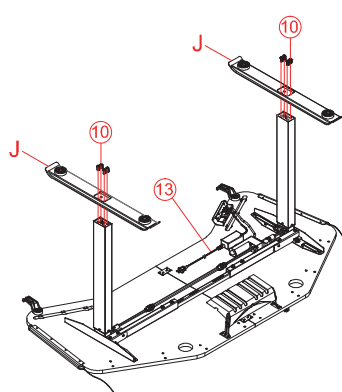 


11

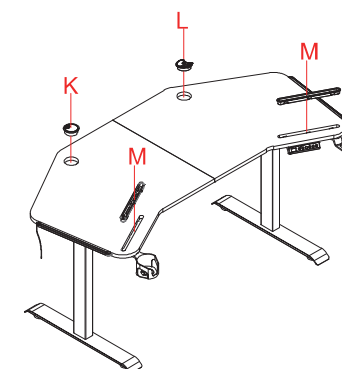 


12

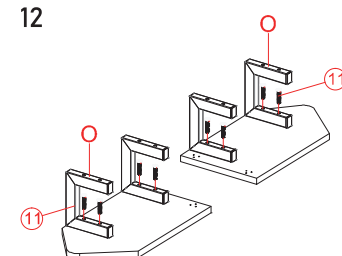 


13

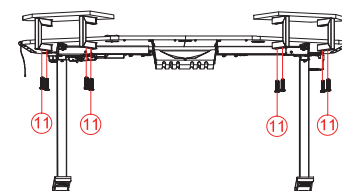 


14

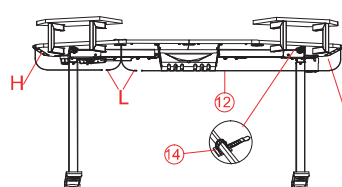 


11

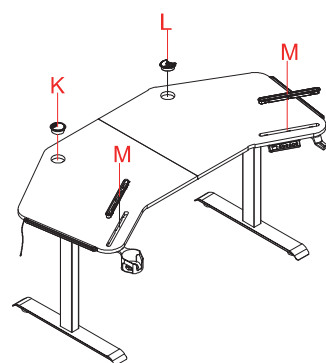 


12

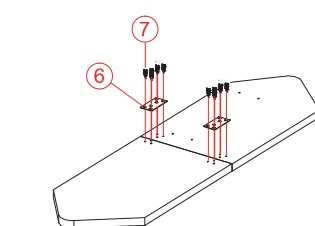 

13

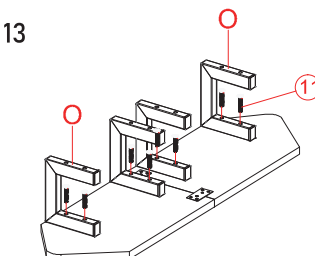 

14

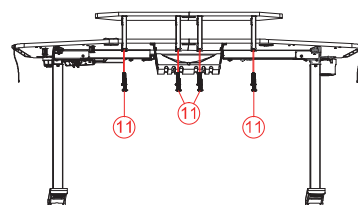 

15

