 


MDRILL DOME | CONNECTION GUIDE

 
PC

1

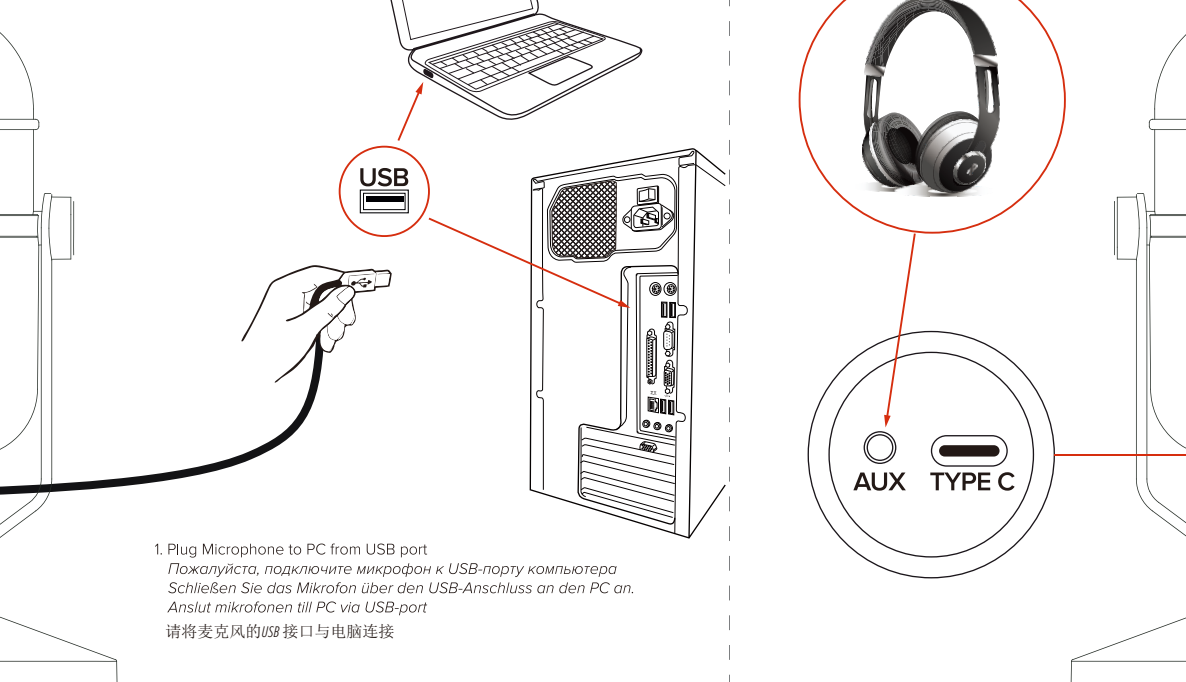

1. Plug Microphone to PC from USB port
Пожалуйста, подключите микрофон к USB-порту компьютера
Schließen Sie das Mikrofon über den USB-Anschluss an den PC an.
Anslut mikrofonen till PC via USB-port
请将麦克风的USB接口与电脑连接

2

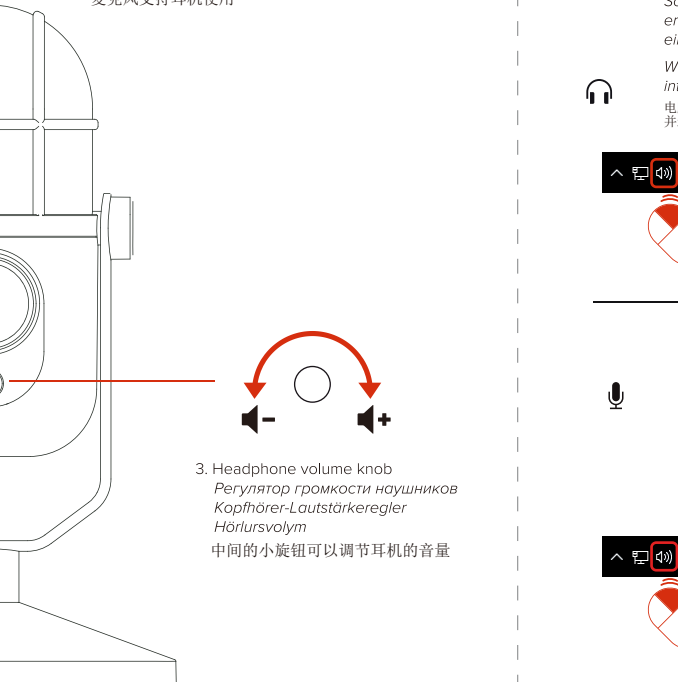


3. Headphone volume knob
Регулятор громкости наушников
Kopfhörer-Lautstärkereger
Hörlursvolym
中间的小旋鈕可以調節耳机的音量

3




Open Volume Mixer
Playback devices
Recording devices
Sounds
Troubleshoot sound problems

 4

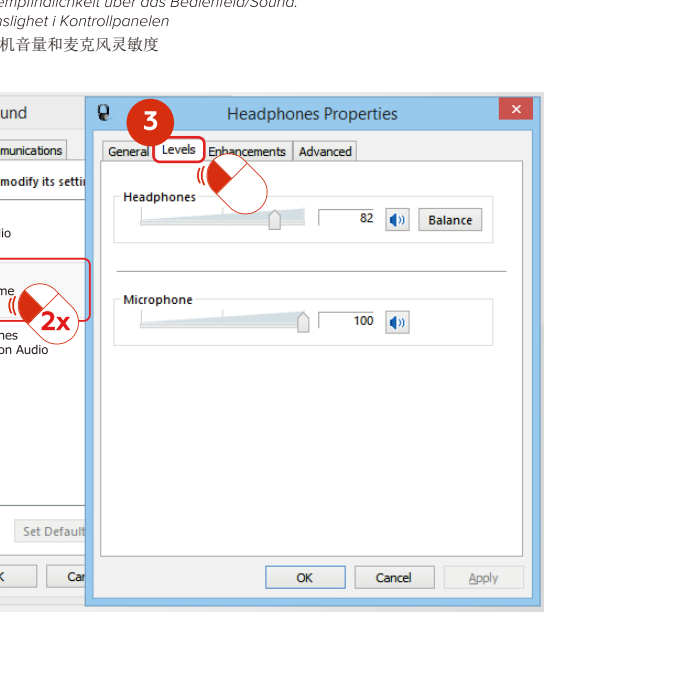


Open Volume Mixer
Playback devices
Recording devices
Sounds
Troubleshoot sound problems

 5

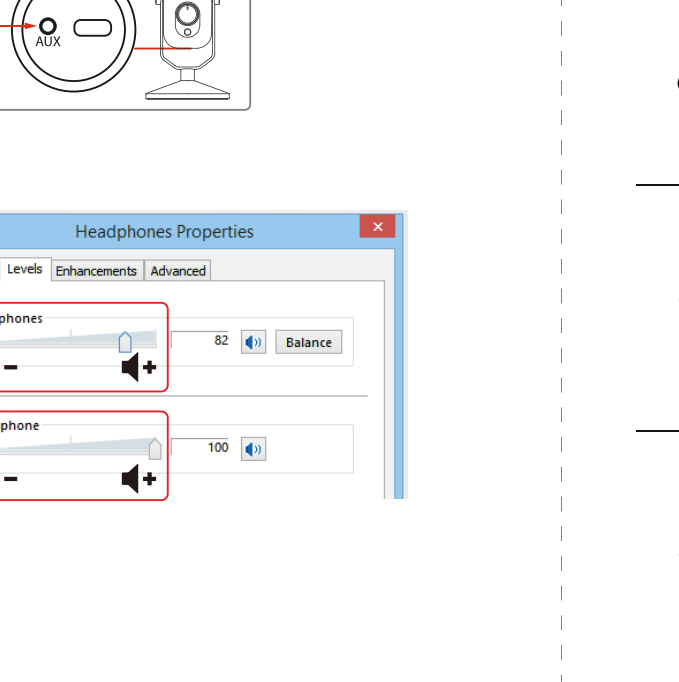


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

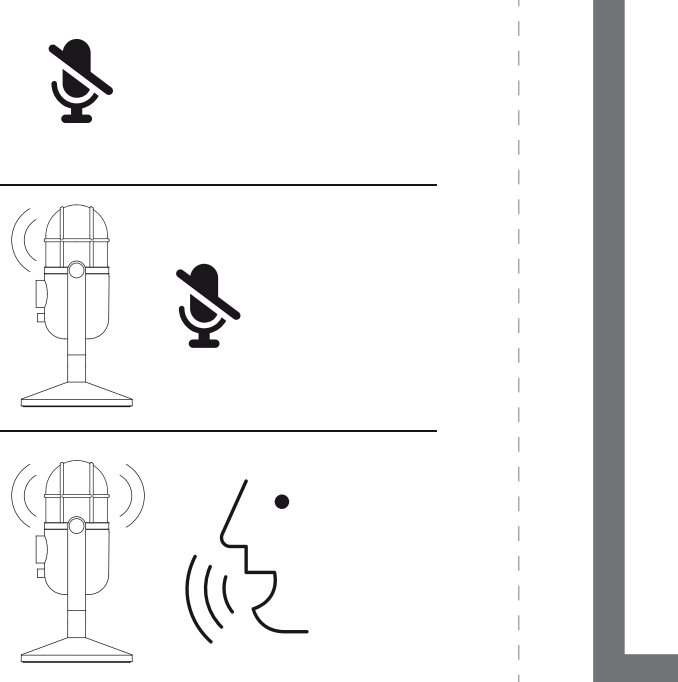


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

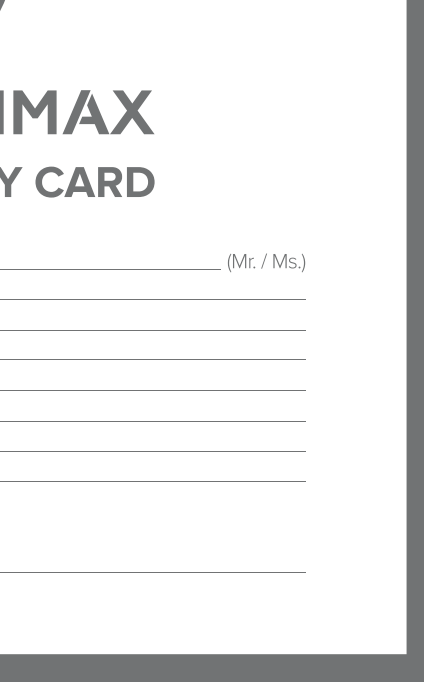


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

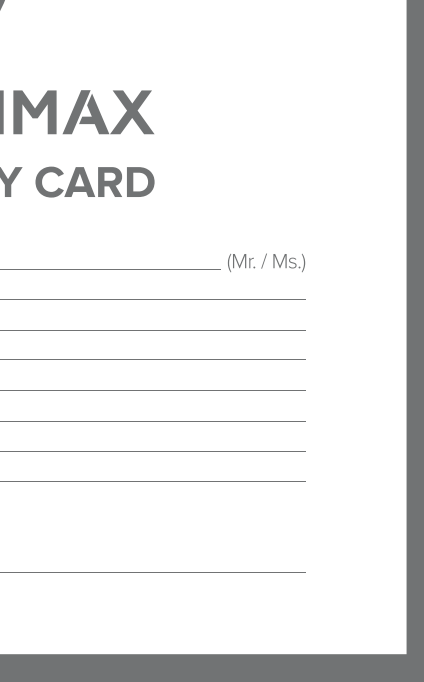


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

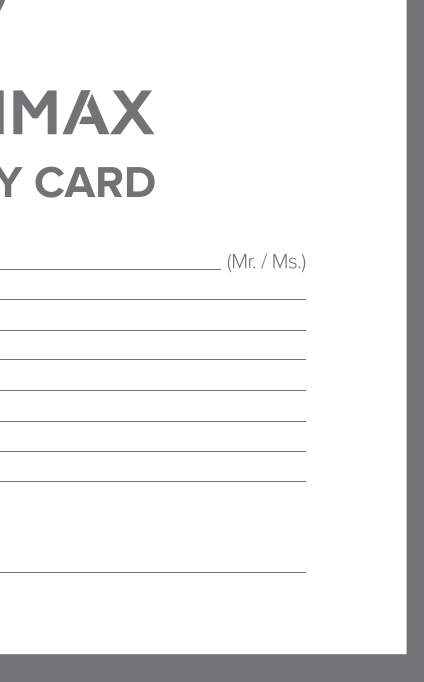


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

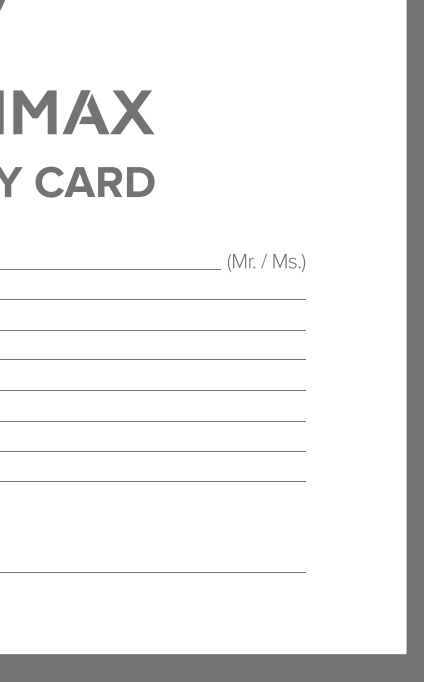


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

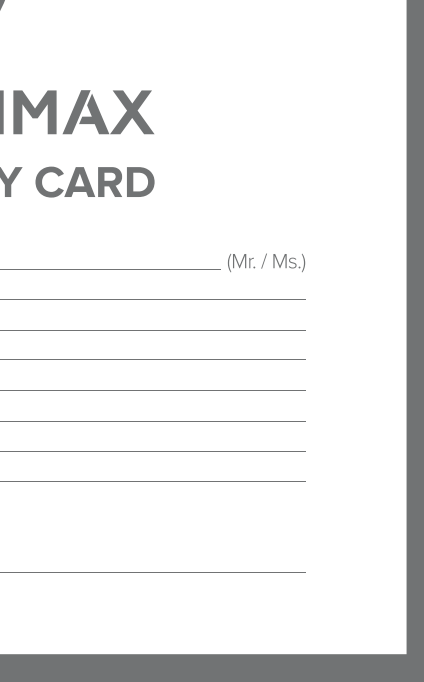


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

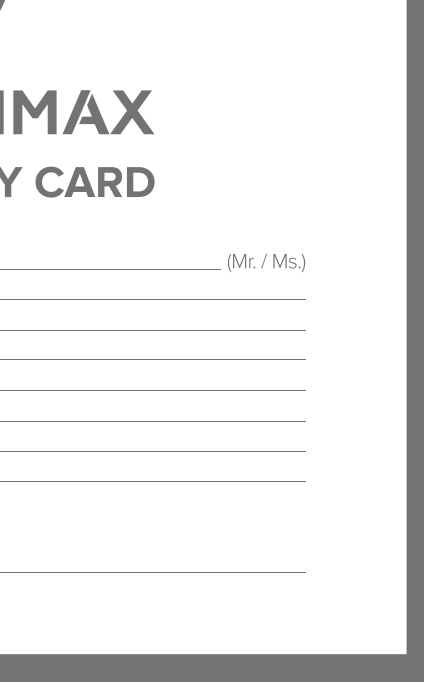


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

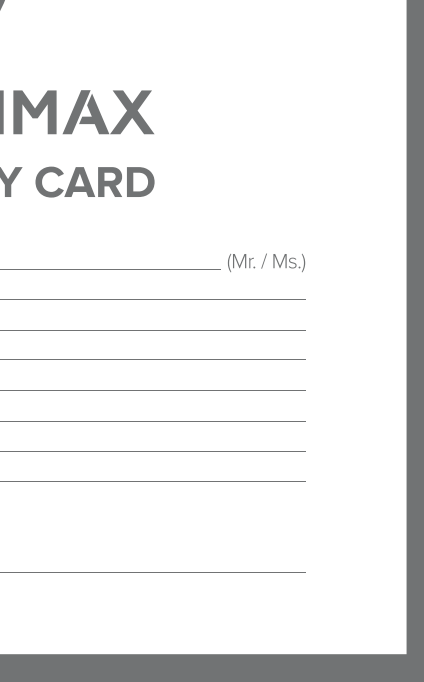


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

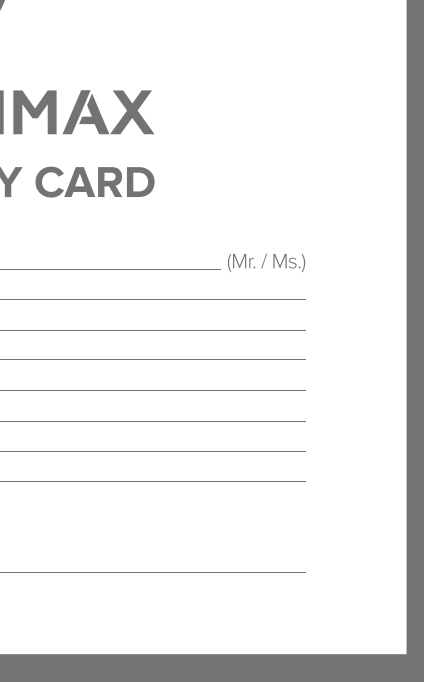


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

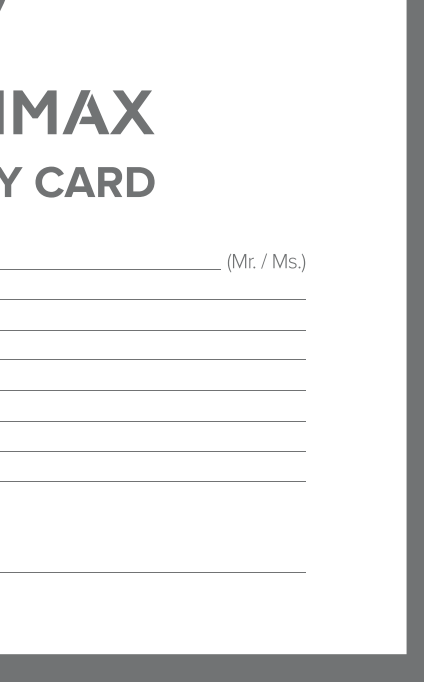


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

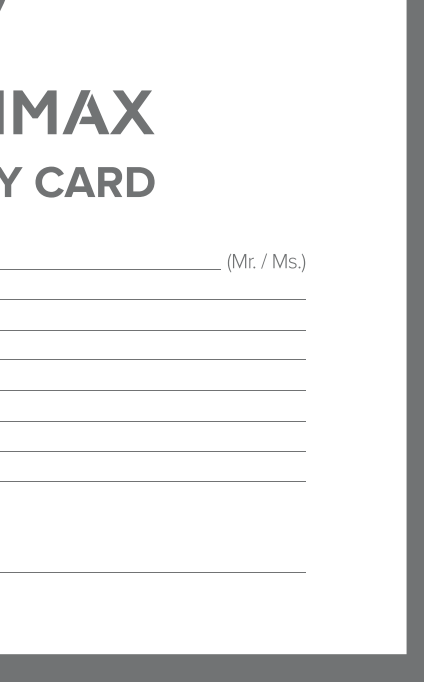


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

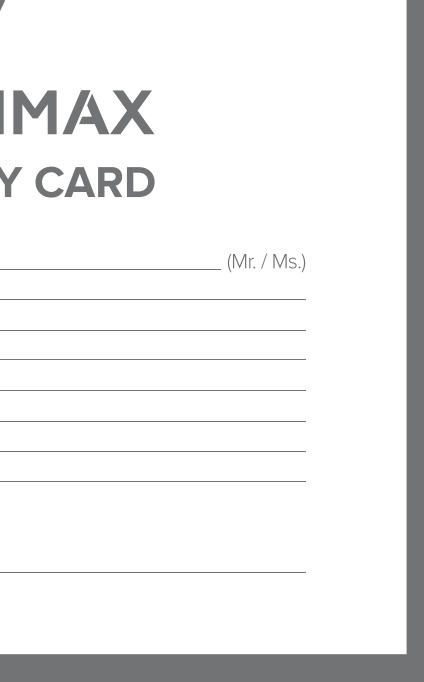


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

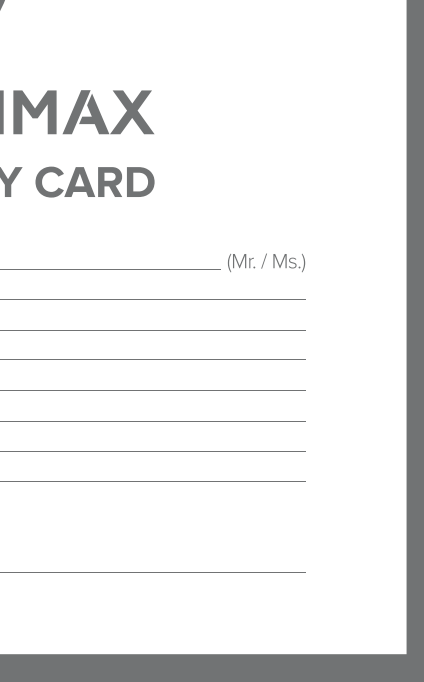


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

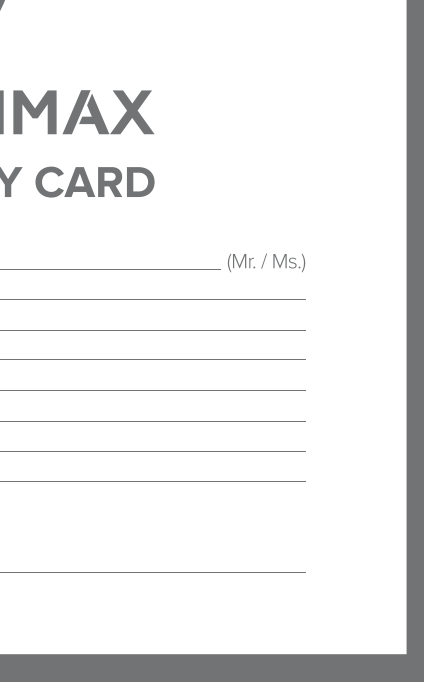


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

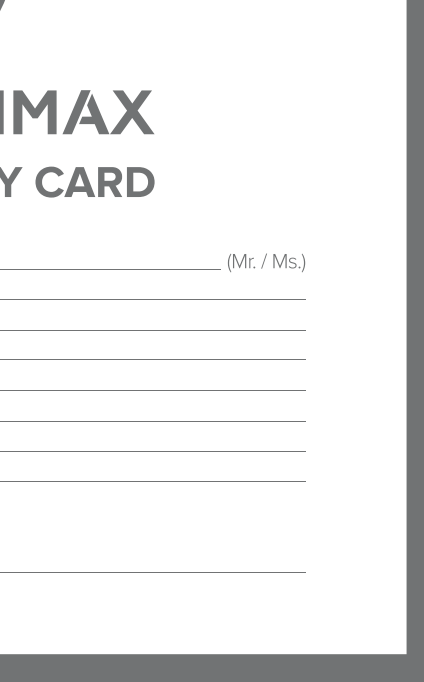


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

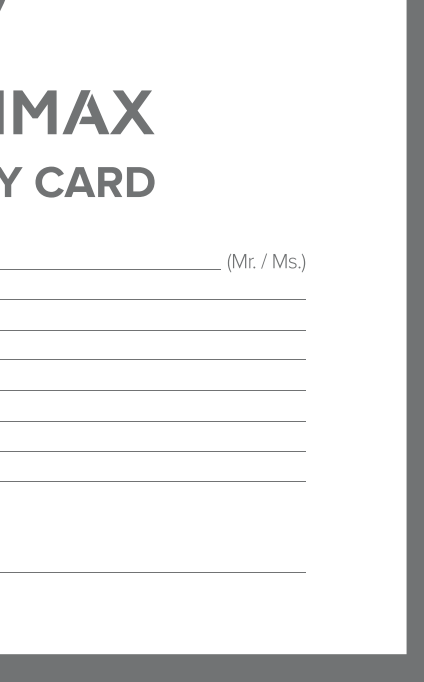


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

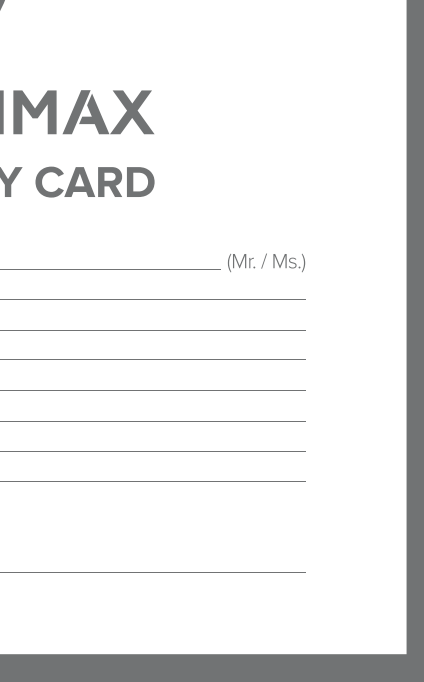


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

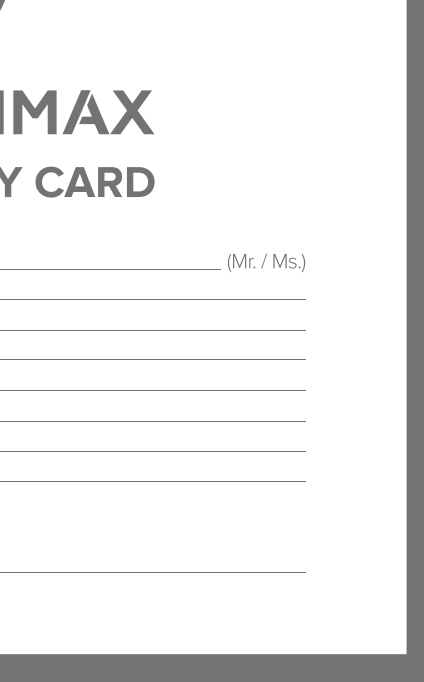


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

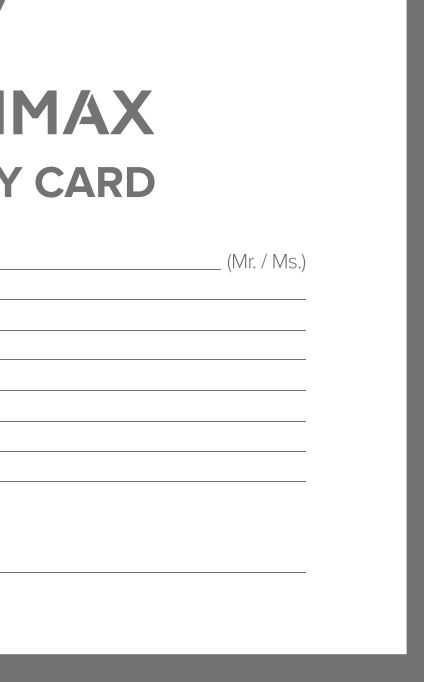


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

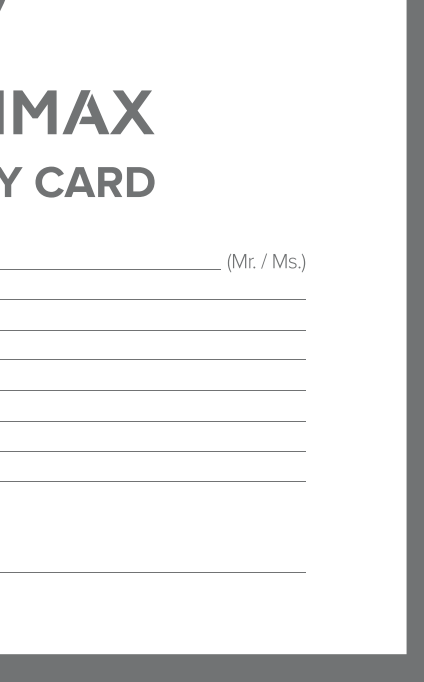


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

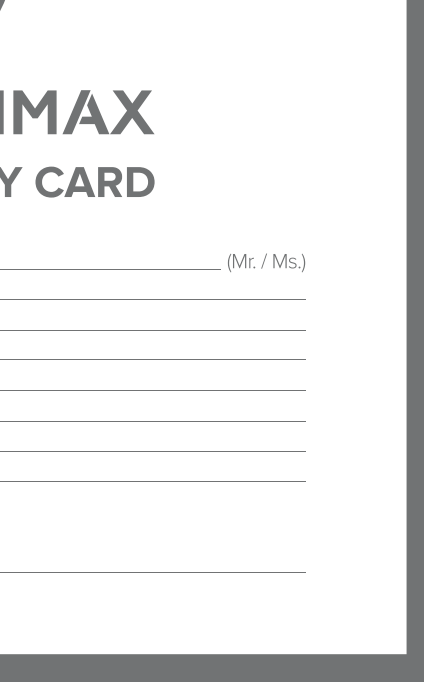


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

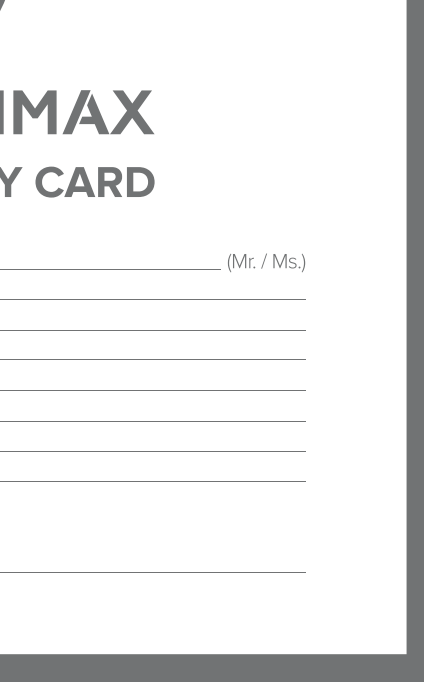


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

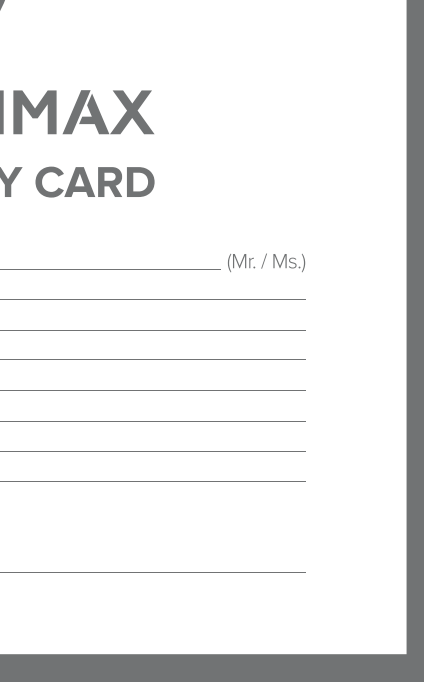


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

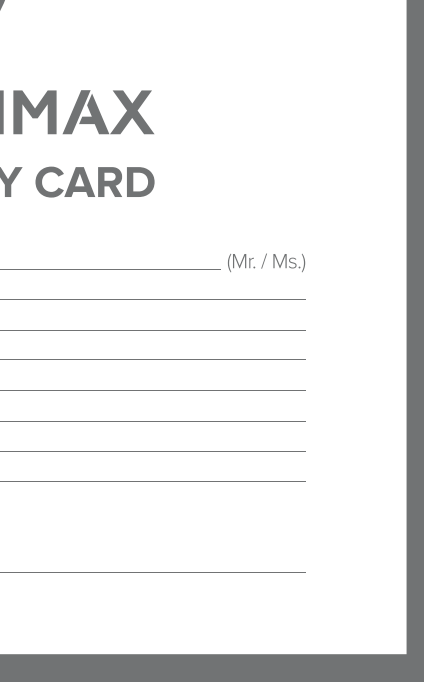


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

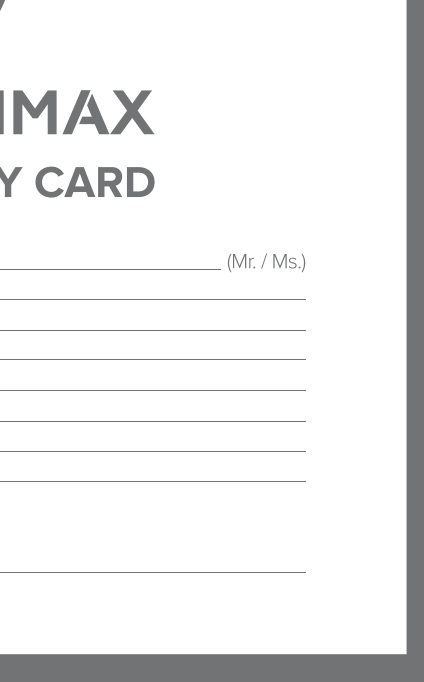


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

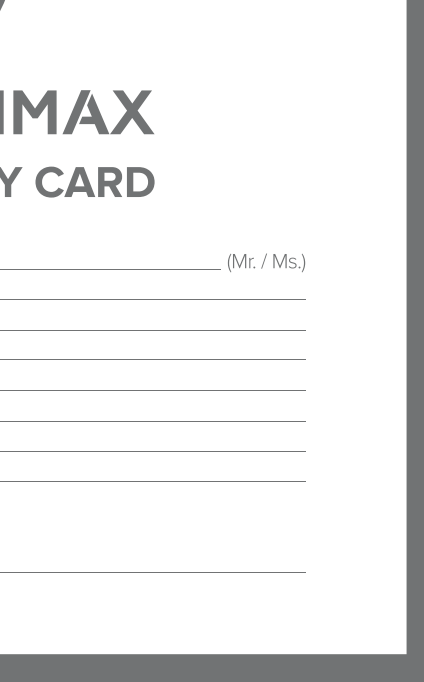


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

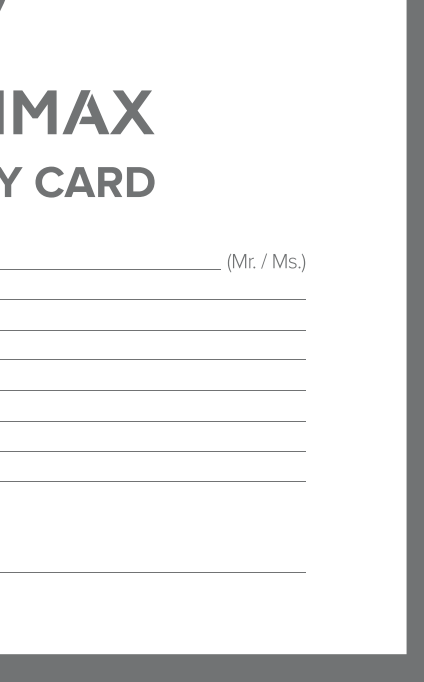


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

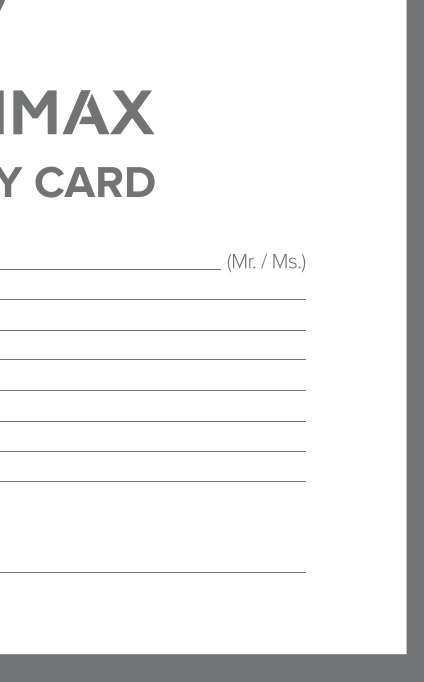


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

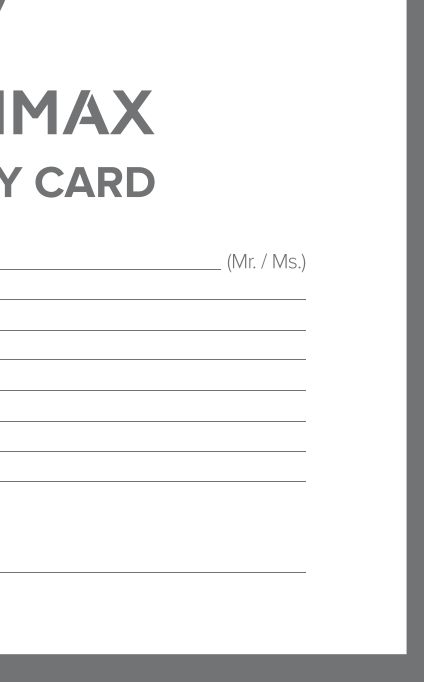


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

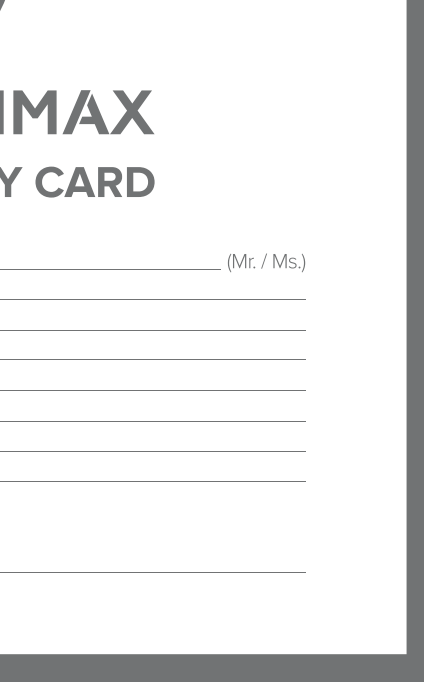


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

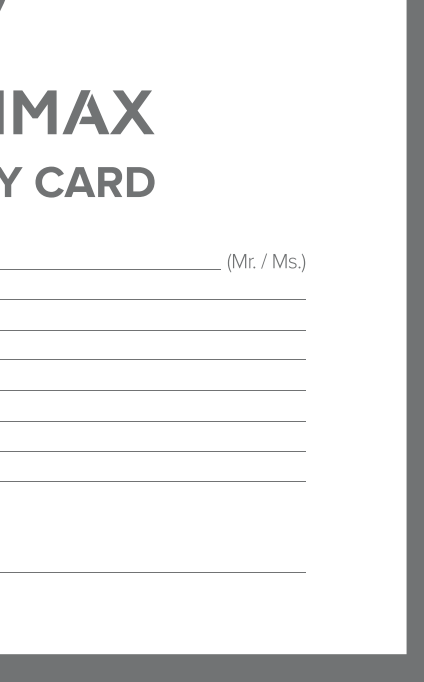


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

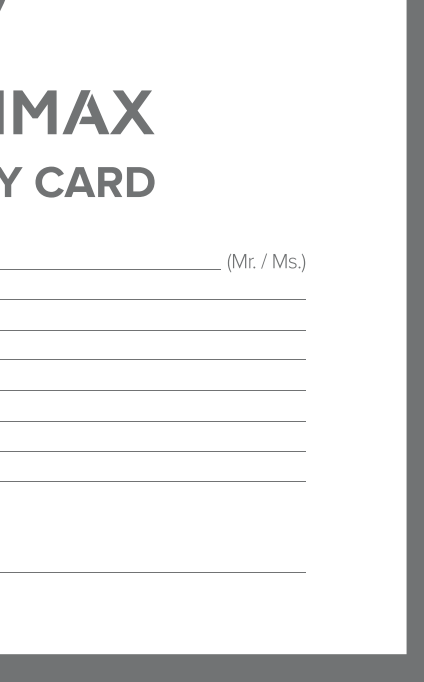


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

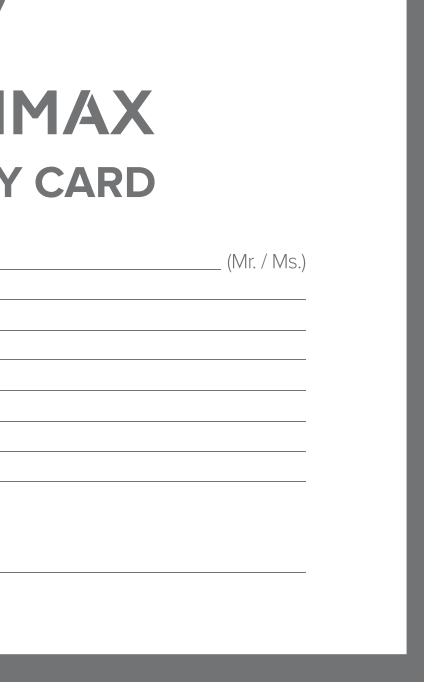


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

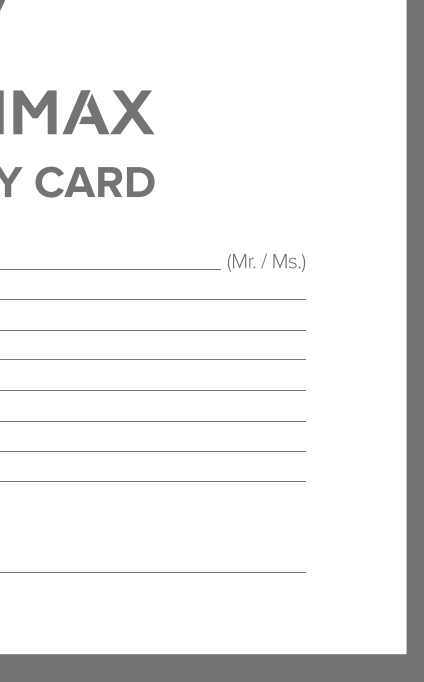


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

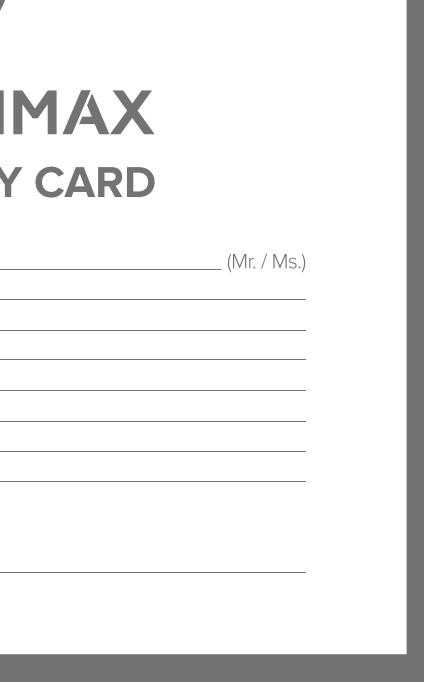


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

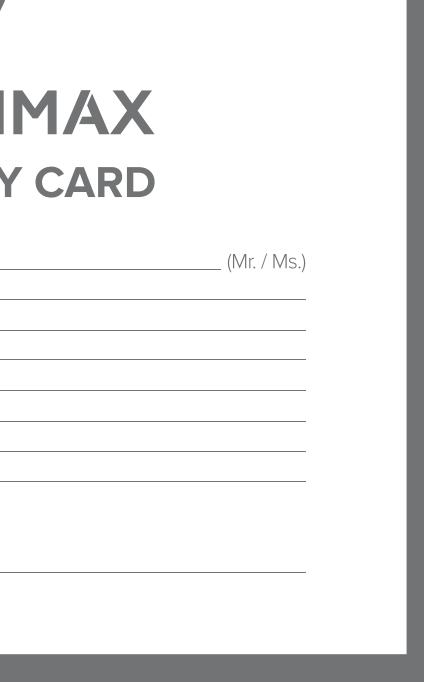


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

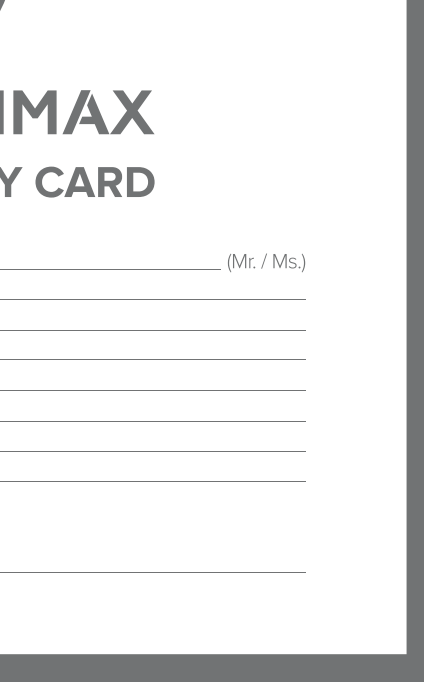


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

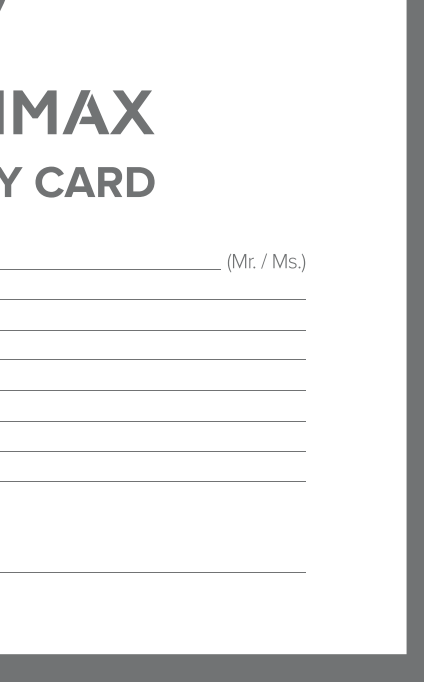


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

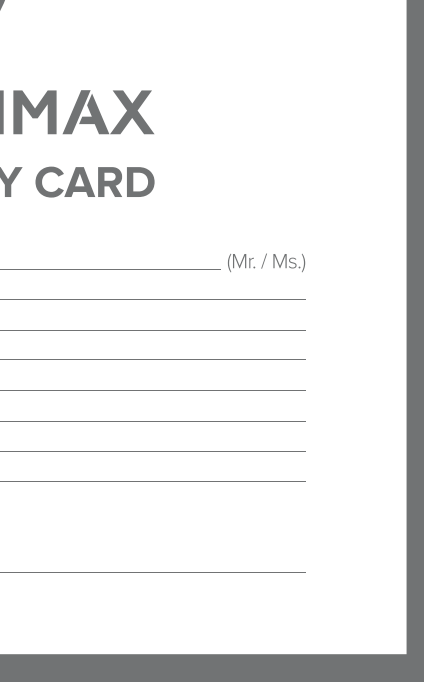


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

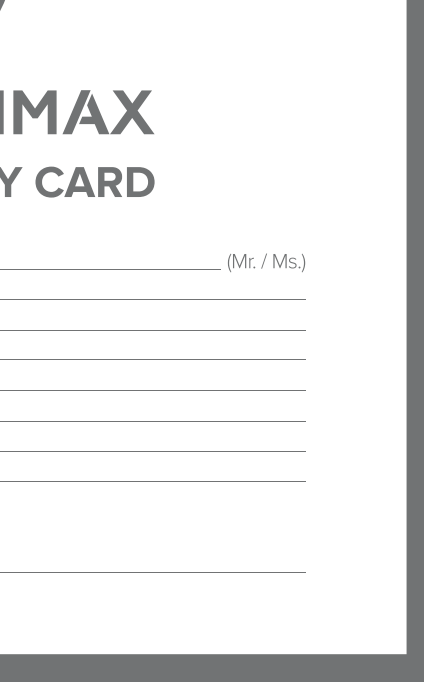


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

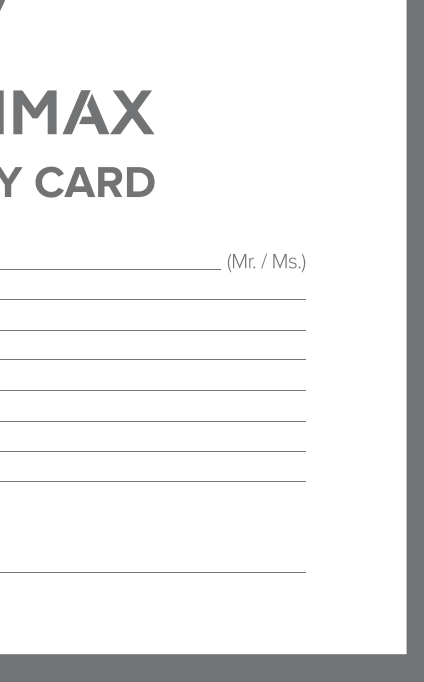


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

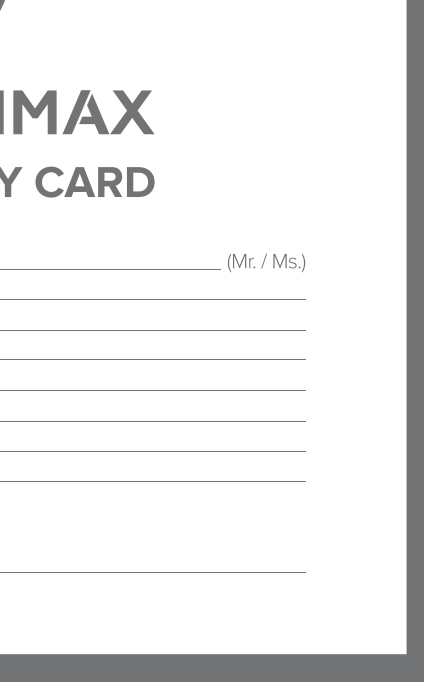


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

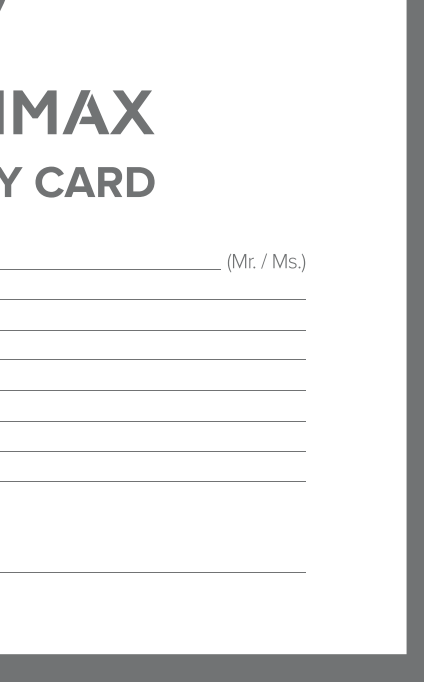


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

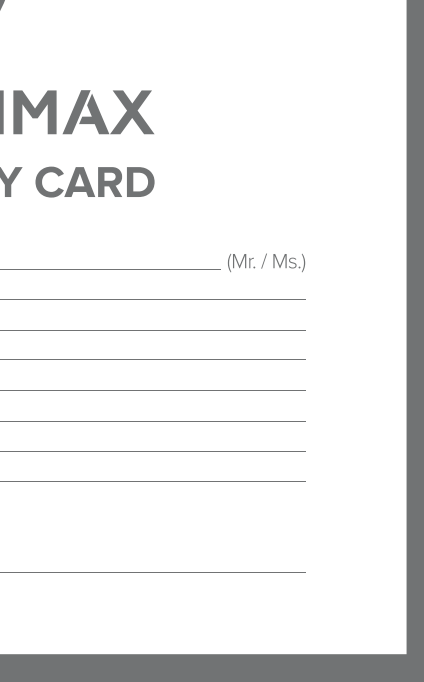


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

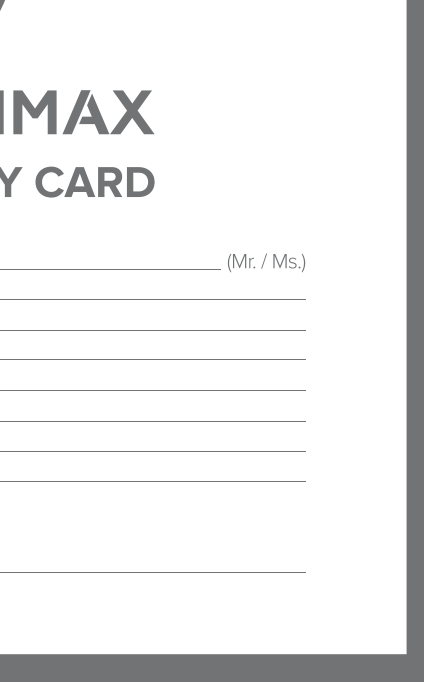


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

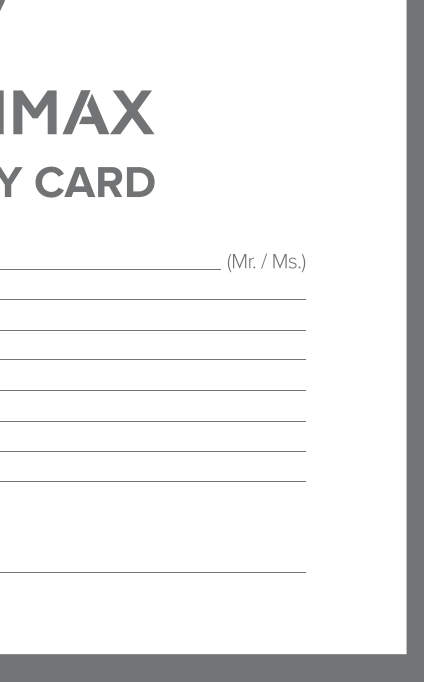


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

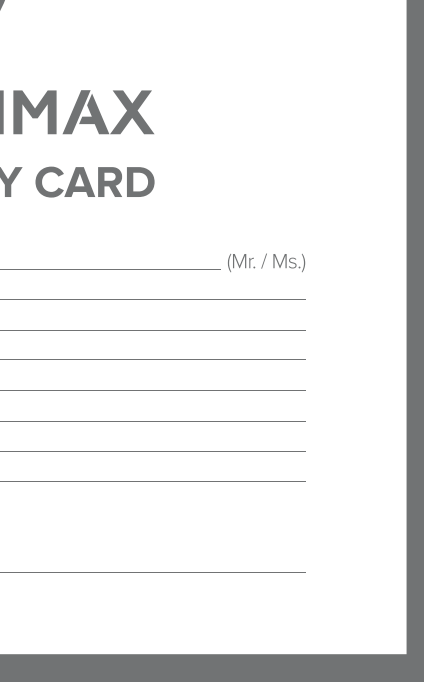


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

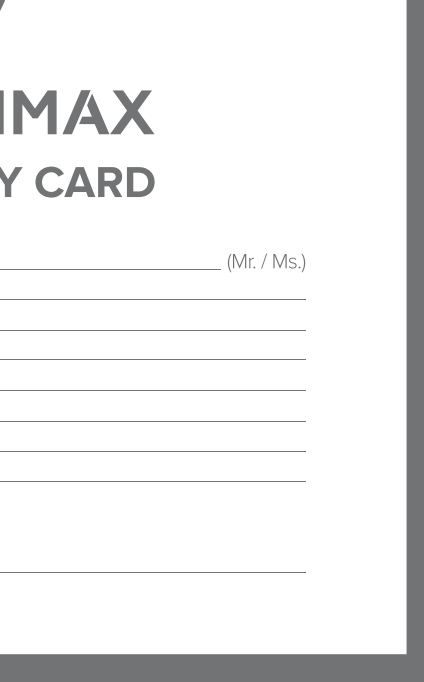


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

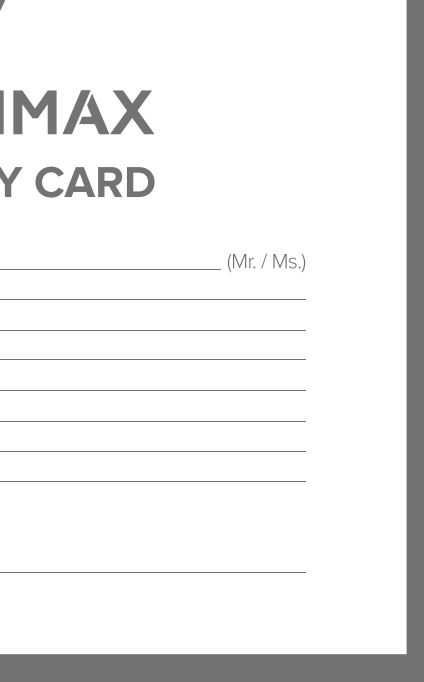


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

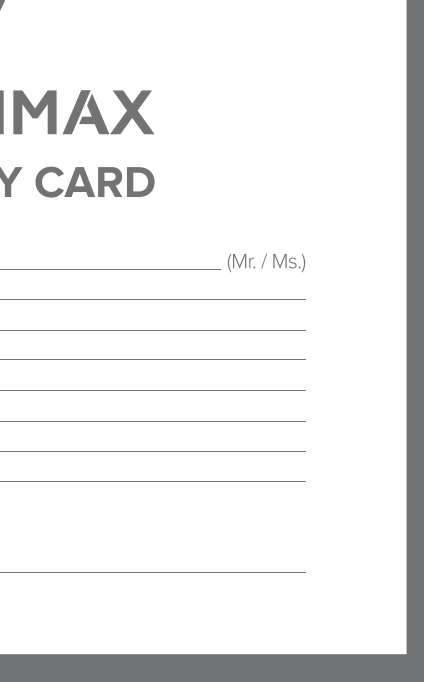


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

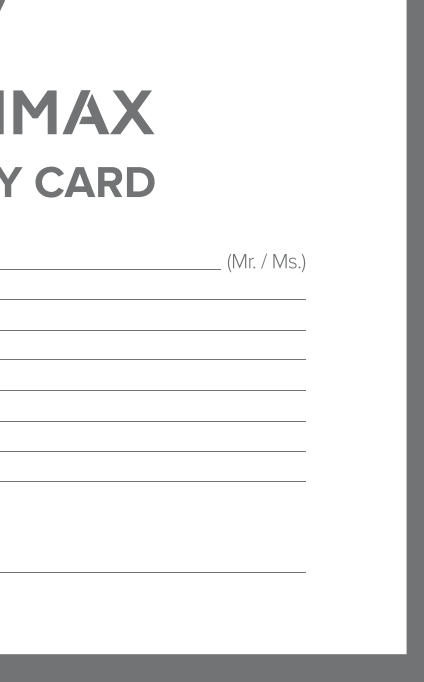


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

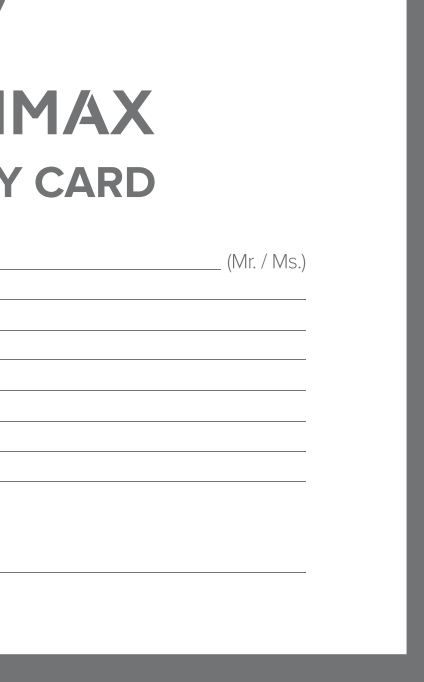


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

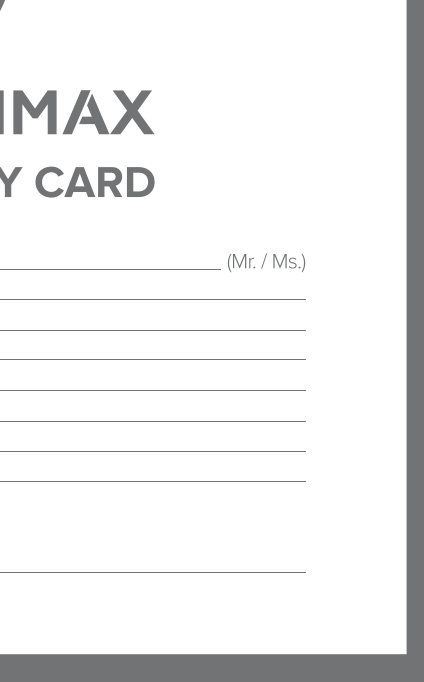


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

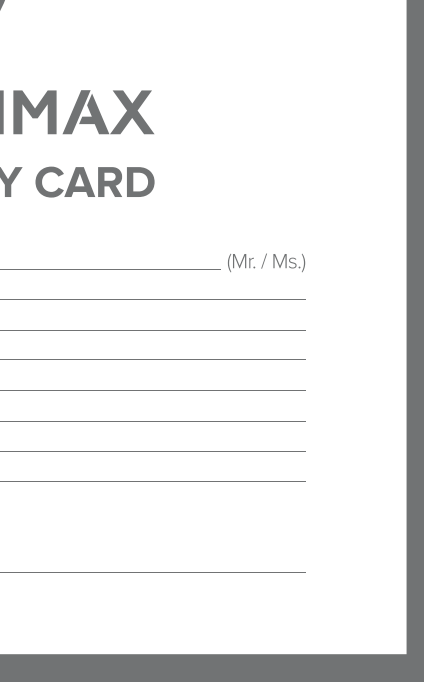


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

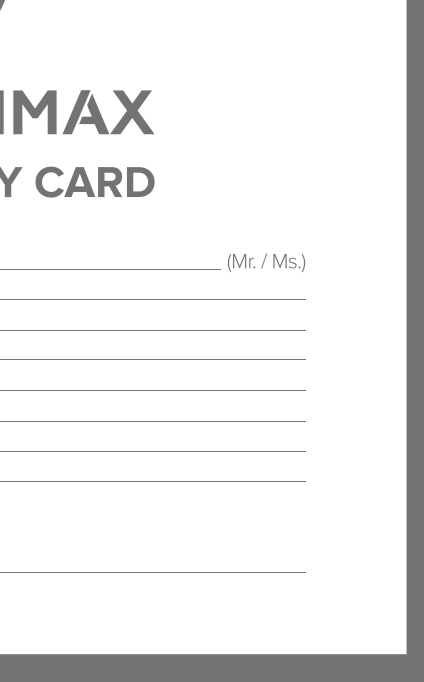


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

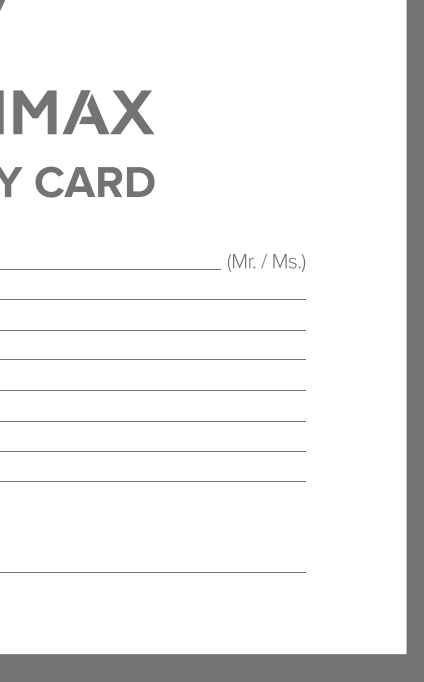


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

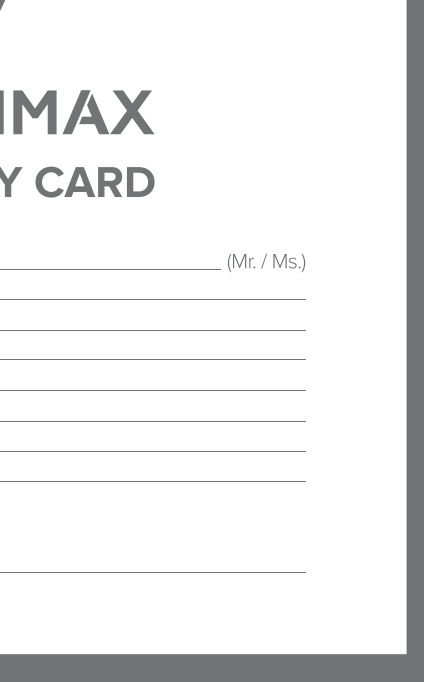


Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 6

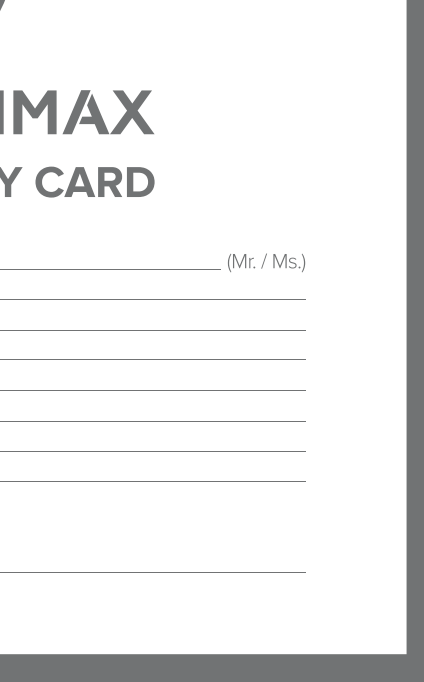

Headphones Properties
General Levels Enhancements Advanced
Headphones
Microphone

 
6

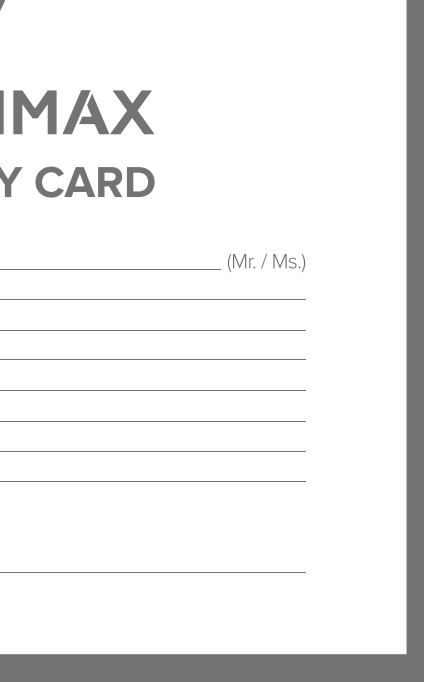

MDRILL DOME | CONNECTION GUIDE


MAC

 1

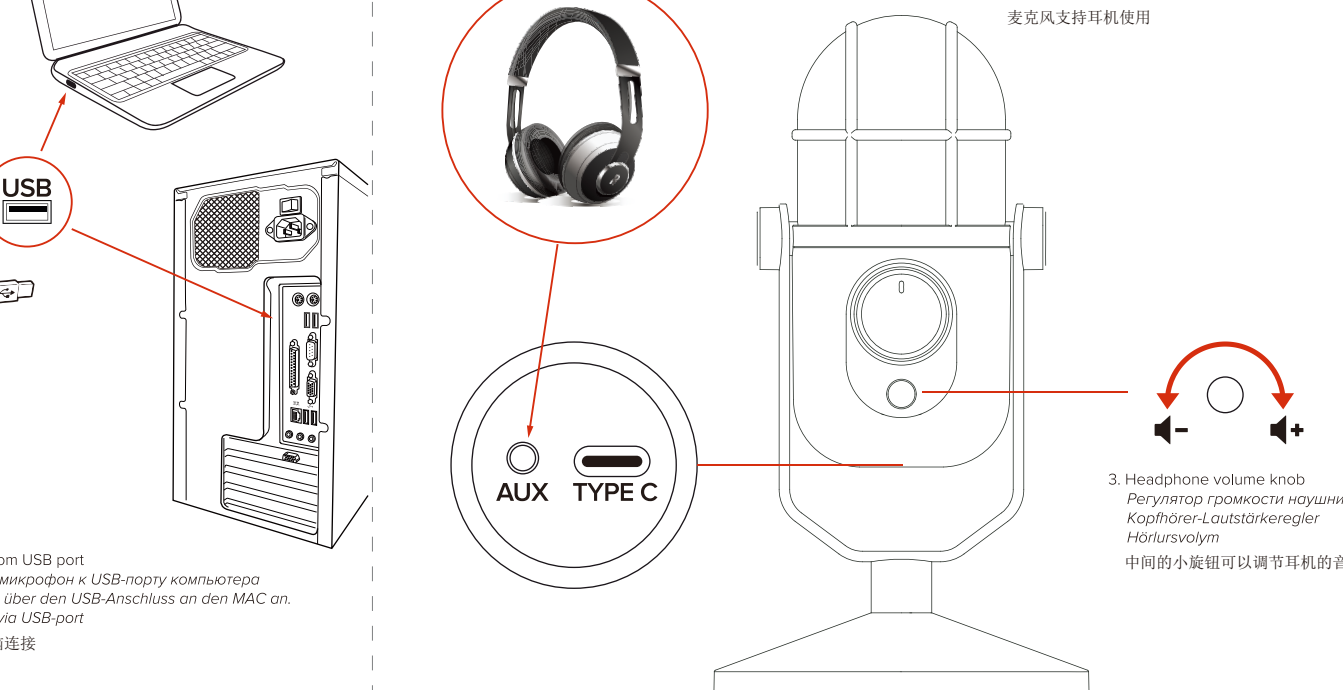


1. Plug Microphone to MAC from USB port
Пожалуйста, подключите микрофон к USB-порту компьютера
Schließen Sie das Mikrofon über den USB-Anschluss an den MAC an.
Anslut mikrofonen till MAC via USB-port
请将麦克风的USB接口与电脑连接

 2

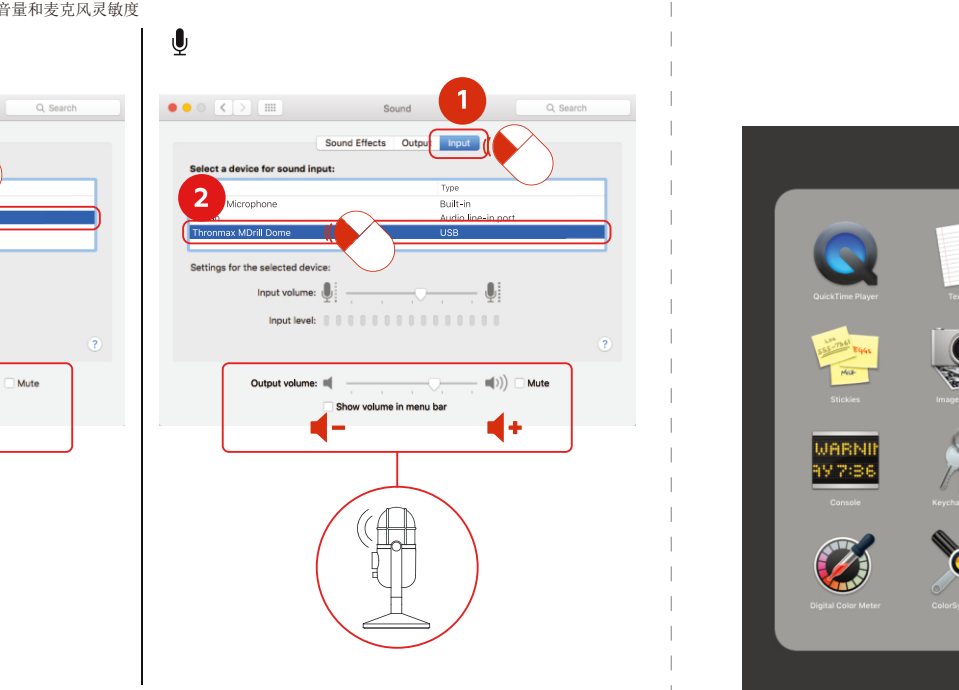


3. Headphone volume knob
Регулятор громкости наушников
Kopfhörer-Lautstärkereglер
Hörlursvolym
中间的小旋钮可以调节耳机的音量

 
3

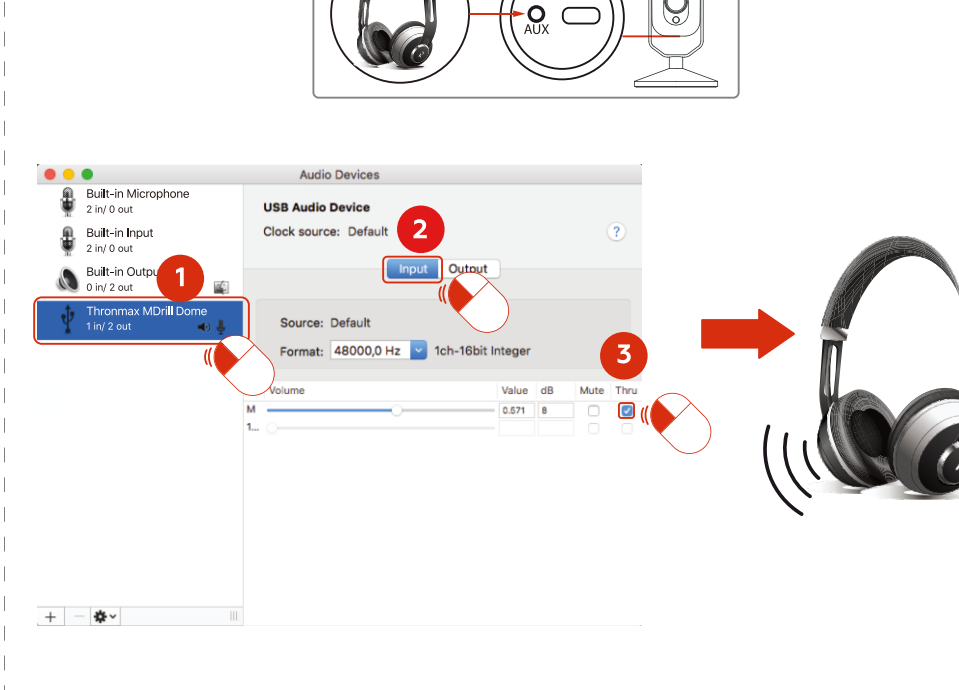


4

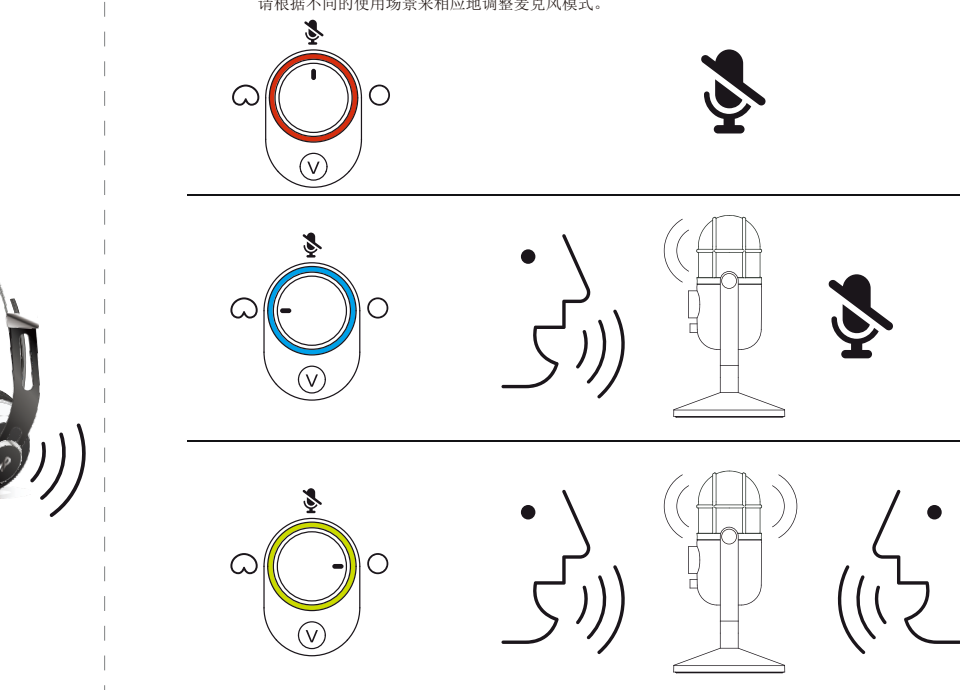 


5

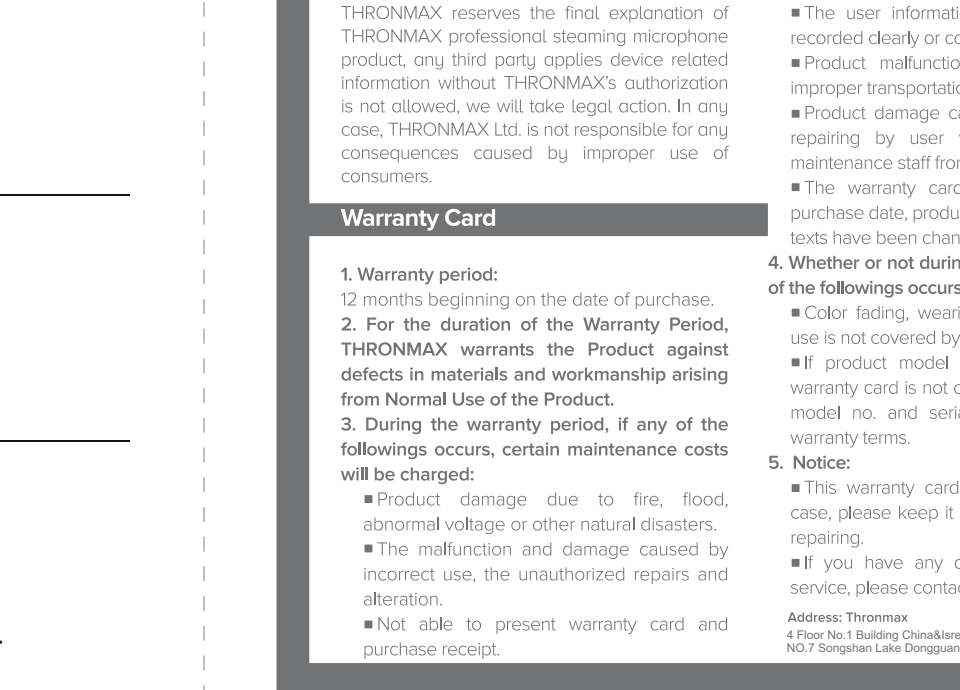 

6

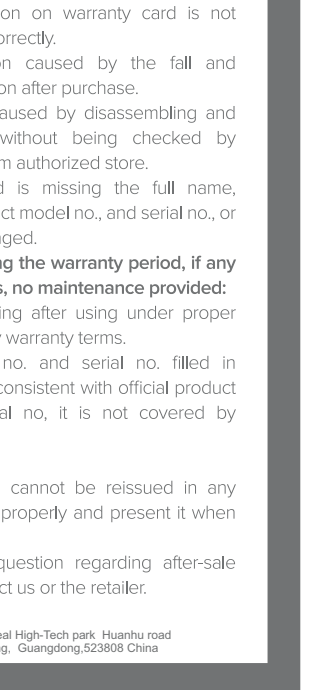 

7

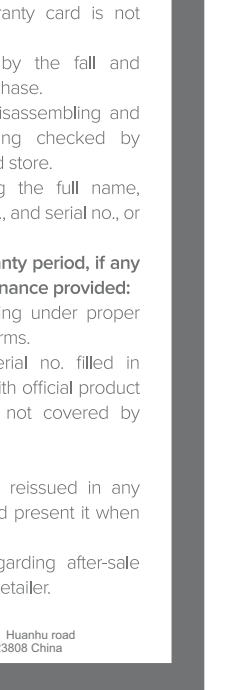 

6. Please use microphone right direction.
Пожалуйста, используйте микрофон, как показано ниже.
Wählen Sie die gewünschte Richtcharakteristik aus.
Se till att använda mikrofonen från rätt håll
请根据不同的使用场景来相应地调整麦克风模式。

Disclaimer

THRONMAX reserves the final explanation of THRONMAX professional steaming microphone product, any third party applies device related information without THRONMAX's authorization is not allowed, we will take legal action. In any case, THRONMAX Ltd. is not responsible for any consequences caused by improper use of consumers.

Warranty Card

- 1. Warranty period:**
12 months beginning on the date of purchase.
- 2. For the duration of the Warranty Period, THRONMAX warrants the Product against defects in materials and workmanship arising from Normal Use of the Product.**
- 3. During the warranty period, if any of the followings occurs, certain maintenance costs will be charged:**
 - Product damage due to fire, flood, abnormal voltage or other natural disasters.
 - The malfunction and damage caused by incorrect use, the unauthorized repairs and alteration.
 - Not able to present warranty card and purchase receipt.
- 4. Whether or not during the warranty period, if any of the followings occurs, no maintenance provided:**
 - Color fading, wearing after using under proper use is not covered by warranty terms.
 - If product model no. and serial no. filled in warranty card is not consistent with official product model no. and serial no, it is not covered by warranty terms.
- 5. Notice:**
 - This warranty card cannot be reissued in any case, please keep it properly and present it when repairing.
 - If you have any question regarding after-sale service, please contact us or the retailer.

Address: Thronmax
4 Floor No.1 Building China&Israel High-Tech park Huahu road
NO.7 Songshan Lake Dongguang, Guangdong,523808 China

