 


User Manual

 
Cartridge Kit 655 CMYK

aceline


Installation

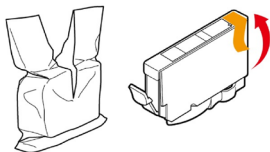


Remove the cartridge from its packaging and take off the orange protective film.

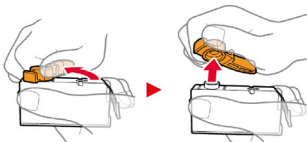

 Remove the orange cap from the cartridge.

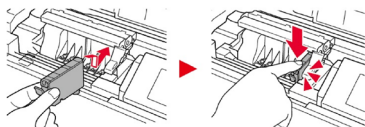

 Insert the cartridge into the slot corresponding to its color.

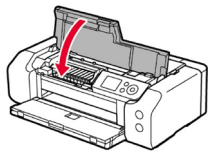

Close the printer cover.

Troubleshooting Guide

- This cartridge uses a chip that does not display the ink level. If printing appears lighter or faded, check the ink level in the cartridge manually.
- After installing a new cartridge, the printer screen may show a message indicating the product may be counterfeit. For instructions on how to address this, refer to the printer's user manual.

Safety Precautions

- **Environmental Requirements:** The cartridge should be installed at an ambient temperature of 10 °C to 30 °C and a relative humidity of 20–80%. Failure to meet these requirements may significantly degrade print quality. If the cartridge has been stored outside the acceptable temperature range for an extended period, allow both the cartridge and the printer to acclimate to the required conditions for 2 hours before printing.
- Choose the correct type and weight of printing paper. Do not use damaged, excessively thick paper, or paper with staples, as this can damage the photosensitive drum and cause white lines, distorted characters, or a gray background in prints.
- Do not touch the photosensitive drum with your hands and do not expose it to direct sunlight. This can shorten the drum's lifespan and cause print defects.
- When printing on special media, use the manual paper feed and the nearest output tray. This reduces the paper path through the printer and prevents paper jams.
- When replacing the cartridge, clean the cartridge compartment of dust and small debris using a dry, soft cloth. To prevent faded colors during printing, it is recommended to periodically wipe the electronic sensor contact in the cartridge compartment with a specialised alcohol wipe for electronics.
- During the first prints with a new cartridge, minor defects may occur (faded or overly saturated colors, streaks, etc.). If such issues arise, print 10 consecutive pages. After this, the print quality will normalize.
- When the low toner indicator appears, remove the cartridge and gently shake it. This will allow you to print approximately 40–50 more pages.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The installation and mounting conditions for the device are described in the "Assembly" section of this user manual.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.

- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:

[//www.dns-shop.ru/service-center/](http://www.dns-shop.ru/service-center/)

Additional Information

Manufacturer: ZHUHAI JIALIANXIN IMAGING PRODUCTS CO., LTD.

2/3/4F, No.1 Jiaxin Technology Building, No.2 Dingwan Nine Road, Sanzao Town, Jinwan District, Zhuhai City, Guangdong Province, P.R. China.

Made in China.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



The production date is indicated on the packaging.