

aceline

User Manual

Shoe Dryer
AC-SD01

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

A shoe dryer is a device for drying the inside of footwear: the removable insole, midsole, toe, and side walls.


Safety Precautions

- This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.
- This device is not intended for commercial use.
- Always disconnect the device from the power supply when it is not in use, as well as before cleaning, assembly, and disassembly.
- Do not immerse the device in water to avoid damaging the electronic unit, and do not operate the device in the rain or on wet surfaces.
- Do not use the device if there is water inside the footwear.
- Do not touch the heated device to avoid burns.
- Do not place the power cord under the device during operation.

- During operation, keep the device away from flammable and explosive objects.
- Do not use the device to warm animals.
- Do not place other objects on the device during operation and storage.

Device Diagram

1. Housing.
2. Power cord.
3. Heat dissipation and circulation vents.

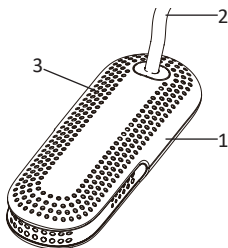

Specifications

- Model: AC-SD01.
- Trademark: Aceline.
- Power: 12 W.
- Power supply: 230 V ~ 50 Hz.
- Timer: 4 / 8 / 12 hours.
- Device dimensions (L × W × H): 18 × 5.5 × 3 cm.
- Protection class: II.
- IP code: IPX0.
- Power cord attachment type: Y.
- Scope of application: Domestic.

Package Contents

- Device.
- User manual.

Operating Instructions

1. Connect the device to the power supply and select the required drying time. To do this, press the button located on the power cord until you select the desired timer setting: 4, 8, or 12 hours. The indicator next to the selected time will light up.
2. The dryer will start heating up. The housing automatically heats up to a temperature of 50–60 °C, which is safe for footwear.
3. Place the dryers into the footwear that needs to be dried.
4. Wait for the footwear to dry. The drying time depends on the level of moisture in the footwear. Once the set number of hours has passed, the device will stop heating.
5. After use, disconnect the device from the power supply and remove the dryers from the footwear.

Storage

- Do not wrap the power cord around the device.
- Ensure that the device is turned off. Before storing, place the device on a heat-resistant surface and wait until it has cooled down completely.
- Place the shoe dryer in a specially lined bag (not included) for convenient storage and transport.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported under dry conditions.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months

Service Life: 12 months

For the up-to-date list of authorized service centers, please visit: <https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Cixi Feiren Electric Appliance Co., Ltd.
No. 518 Huancheng West Road, Zhouxiang Town, Cixi City,
Ningbo City, Zhejiang Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ v.1

aceline