

aceline

User Manual

Shoe dryer
1012

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

A shoe dryer is a device for drying the inside of footwear: the removable insole, midsole, toe, and side walls.

Safety Precautions

- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- This device is not intended for commercial use.
- Before first use, leave the device at room temperature for at least 4 hours.
- Before operation, ensure there is no snow, water, or metal objects inside the footwear.
- Always disconnect the device from the power source during an extended period of non-use.
- Do not immerse the device in water, as this may damage the electronic unit. Do not operate the device in the rain or on wet surfaces.
- Do not allow water or metal objects to enter the device.
- Do not pull or move the device by the cord. Do not bend or wrap the cord around the device.
- Immediately unplug the device if it malfunctions, or if the power cord or plug is damaged. Contact an authorized service center.
- Do not use the dryer while it is connected to the power supply if the footwear is placed on or near heating appliances.
- Do not use the device if the footwear contains water.
- Do not place the power cord under the device during operation.
- During operation, keep the device away from flammable and explosive items.
- Do not use the device to warm animals.
- Do not place other objects on the device during operation or storage.


Specifications

- Model: AC-SD03.
- Trademark: Aceline.
- Voltage: 10 W.
- Power supply: 220 V ~ 50 Hz.
- Number of heating elements per dryer: 1.
- Protection class: II.
- IP code: IP20.
- Cord type: Y.
- Scope of application: Domestic.
- Type: 2480.

Package Contents

- Shoe dryer.
- User manual.

Device Diagram

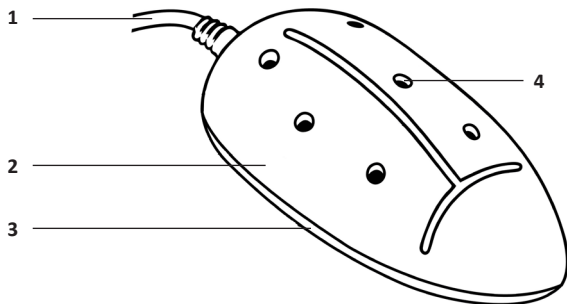

1. Power cord.
2. Cover.
3. Bottom.
4. Convection openings.

Operating Instructions

1. Place the dryers inside the footwear you want to dry.
2. Plug the device into the power source. The dryer will begin to heat up.

CAUTION: The dryer takes 20 minutes to reach operating temperature.

3. Wait for the footwear to dry. The drying time depends on the level of moisture in the footwear.
4. After use, unplug the device from the power outlet and remove the dryers from the footwear, holding them by the body. Do not pull on the power cord.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Timson LLC.

105005, Moscow, Aptekarsky per., 4, building 4, floor p, room 16.

Mail: info@timson.ru

Made in Russia.

The product meets the requirements of the technical regulations of the TR CU (EAEU). The product is manufactured in accordance with Technical Specifications (TS) 3468-002-53925413-2011.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

aceline