 


Cartridge AM-067HBK, AM-067HC, AM-067HM, AM-067HY

Installation

	Remove the black protective film from the cartridge
	Shake the cartridge 5–6 times as shown in the picture on the left
	Remove the sealing tape by gently pulling the tab
	Firmly insert the cartridge into the printer
	Close the printer cover

Troubleshooting Guide

- This cartridge uses a chip that does not display the toner level. If printouts become lighter, check the toner level in the cartridge manually.
- After installing a new cartridge, the printer screen may show a message indicating the product may be counterfeit. To resolve this issue, refer to the printer's user manual.

Safety Precautions

- Select the correct paper type and thickness for printing. Do not use damaged, excessively thick paper, or paper with staples, as this can damage the photosensitive drum and cause white lines, deformed characters, or a gray background in printouts.

- During the first few prints with a new cartridge, some defects may occur (such as faded or overly saturated colors, streaks, etc.). If you encounter such issues, print 10 consecutive pages. Print quality should normalize after this.
- Environmental requirements: Install the cartridge at an ambient temperature of 10 °C to 30 °C and a relative humidity of 20–80%. Failure to comply with these requirements may significantly degrade print quality. If the cartridge has been stored for an extended period in conditions outside the acceptable temperature range, leave both the cartridge and the printer in the required environmental conditions for 2 hours before resuming printing.
- Avoid touching the photosensitive drum with your hands or exposing it to direct sunlight. This can shorten the drum's lifespan and lead to print defects.
- When printing on special media, use the manual paper feed and the closest output tray. This reduces the paper's travel path through the printer and helps prevent paper jams.
- When replacing the cartridge, clean the cartridge compartment of dust and small debris using a dry, soft cloth. To prevent faded colors in printouts, it is recommended to periodically wipe the electronic sensor contact in the cartridge compartment with an alcohol wipe designed for electronics.
- When the low toner indicator appears, remove the cartridge and shake it. This will allow you to print approximately 40–50 additional pages.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- This device is not intended for commercial use.

Additional Information

Manufacturer: ZHUHAI JIALIANXIN IMAGING PRODUCTS CO., LTD.
2/3/4F, No.1 Jiaxin Technology Building, No.2 Dingwan Nine Road, Sanzao Town, Jinwan District, Zhuhai City, Guangdong Province, P.R. China.

Made in China.

Warranty Period: 15 months

Service Life: 24 months

The production date is indicated on the packaging.



v.1