 


AM-CRG071H Toner Cartridge

Installation Instructions



Remove the black protective film from the cartridge.



Gently shake the cartridge 5–6 times, as shown in the figure on the left.



Remove the sealing tape by gently pulling the tab.



Firmly insert the cartridge into the printer.



Close the printer cover.

Troubleshooting

- This cartridge uses a chip that does not display the remaining toner level. If the print output becomes faint, check the amount of toner in the cartridge.
- After installing a new cartridge, a message may appear on the printer screen indicating that the product may be non-genuine. To resolve this issue, refer to the printer's user manual.

Safety Precautions

- **Environmental Requirements:** The cartridge should be installed at an ambient temperature of 10 °C to 30 °C and a relative humidity of 20–80%. Failure to meet these requirements may significantly degrade print quality. If the cartridge has been stored outside the acceptable temperature range for an extended period, allow both the cartridge and the printer to acclimate to the required conditions for 2 hours before printing.
- Choose the correct type and weight of printing paper. Do not use damaged, excessively thick paper, or paper with staples, as this can damage the photosensitive drum and cause white lines, distorted characters, or a gray background in prints.
- Do not touch the photosensitive drum with your hands and do not expose it to direct sunlight. This can shorten the drum's lifespan and cause print defects.
- When printing on special media, use the manual paper feed and the nearest output tray. This reduces the paper path through the printer and prevents paper jams.
- When replacing the cartridge, clean the cartridge compartment of dust and small debris using a dry, soft cloth. To prevent faded colors during printing, it is recommended to periodically wipe the electronic sensor contact in the cartridge compartment with a specialised alcohol wipe for electronics.
- During the first prints with a new cartridge, minor defects may occur (faded or overly saturated colors, streaks, etc.). If such issues arise, print 10 consecutive pages. After this, the print quality will normalize.
- When the low toner indicator appears, remove the cartridge and gently shake it. This will allow you to print approximately 40–50 more pages.

Additional Information

Manufacturer: ZHUHAI JIALIANXIN IMAGING PRODUCTS CO., LTD.
2/3/4F, No.1 Jiaxin Technology Building, No.2 Dingwan Nine Road, Sanzao Town, Jinwan District, Zhuhai City, Guangdong Province, P.R. China.

Made in China.



The production date is indicated on the packaging.