

aceline

User Manual

Cooking Pot
A3CA251, A3CA351, A3CA451
Saucepan
A3SP011

Cooking Pot Aceline Crystal A3CA251, A3CA351, A3CA451, Saucepan Aceline Crystal A3SP011

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you products and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the product, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product.

Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The product is designed for cooking and reheating food on gas, electric, and induction stoves and cooktops.

Safety Precautions

- Do not use the product for commercial purposes.
- Handle the product with care. Do not use abrasive substances, hard or metal sponges for cleaning, as this may damage its surface.
- Place the pot or saucepan only on burners of the appropriate size. When using on a gas stove, adjust the flame size so that it does not reach the side walls of the product.
- Never heat an empty pot or saucepan! This may cause overheating, discoloration of the exterior, and the appearance of rainbow and dark spots.
- Do not allow the liquid to boil away completely during cooking, as this may damage the cookware.
- Always use oven mitts when handling hot cookware.
- Avoid sudden temperature changes.
- Do not leave the product on the burner unattended while cooking.
- The maximum temperature at which cookware with a non-stick coating is used must not exceed 250 °C.
- Pots and saucepans are not intended for cooking or reheating food in ovens and microwave ovens.
- Do not process food in the cookware using a mixer or blender with metal attachments. This will damage the surface and cause permanent marks on polished areas.
- Do not cut food with a knife inside the cookware.
- Do not allow liquids to freeze inside the cookware to avoid deformation and damage to the coating and walls.
- Do not pour salt onto a hot pot bottom or into cold water to avoid staining the walls. Dissolve salt in warm liquid or add it directly to the food.
- This product is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the product.

Instructions for Use

- Before first use, remove all packaging materials, tags, and labels.
- Wash the product in hot soapy water. Rinse thoroughly and dry completely to prevent water spots on the polished surface.
- For frying, prepare the cookware by lightly coating it with vegetable oil. The presence of a non-stick coating does not mean that food can be cooked without oil.
- The product can be used on gas, electric, and induction stoves and cooktops.
- Ensure that the diameter of the product matches the diameter of the burner. When using on gas stoves, ensure that the flame only touches the bottom of the product. If the flame touches the sides, it may cause discoloration. When using other types of stoves, the heating element diameter should not exceed the diameter of the pot base; otherwise, the handles and exterior coating may be damaged.
- It is recommended to cook on low to medium heat. Frequent cooking at maximum power may damage the product.
- The volume indicated on the packaging and in the product description corresponds to the actual total capacity of the cookware. However, the cookware should not be filled more than 3/4 of its total volume to prevent liquids from spilling over the edges during boiling.

Cleaning and Storage

- After each use, allow the cookware to cool down naturally, then wash it with a soft sponge, drain the water, and dry it thoroughly.
- Never use cold water to cool the cookware, especially the glass lids! Sudden temperature changes can damage the coating and cause the glass to shatter!
- Never use hard objects, metal scouring pads, abrasive compounds, aggressive detergents, or organic solvents when washing. Do not use detergents containing abrasive additives for glass lids, as scratches significantly reduce their thermal resistance. Avoid sudden temperature changes when using glass items.
- To remove tough stains, soak the product in warm soapy water for a few hours, then wipe it with a soft cloth or sponge. You can also use baking soda to remove stubborn dirt.
- White or gray spots may appear inside the pot due to certain foods, salt, vinegar, or minerals present in drinking water. They can be easily removed with a small amount of vinegar or lemon juice. These spots do not affect the functionality or hygiene of the cookware, are not manufacturing defects, and cannot be grounds for claims against the manufacturer.
- A straw-yellow tint or rainbow streaks resulting from excessive overheating or cooking certain foods (vegetables, brines, lemons, tomatoes, etc.) are characteristic of stainless steel cookware and do not affect its quality or functionality. Such spots and streaks can be removed using specialized stainless steel cleaning products.
- Over time, the color of plastic, silicone, or bakelite parts may change due to washing; this does not affect their functionality.
- Store the cookware in a well-ventilated cabinet.
- When washing the cookware in a dishwasher, we recommend following the instructions for the dishwasher and the detergents.

CAUTION! Some detergents are not suitable for aluminum cookware.

Specifications

Model	A3CA251	A3CA351	A3CA451	A3SP011
Volume	2.5 L	3.5 L	4.5 L	1.5 L
Bottom diameter	18 cm	20 cm	20 cm	16 cm
Material	AISI 304 stainless steel			

Warranty Information

The manufacturer guarantees that the product is free from defects in materials and workmanship. The warranty period begins from the date of purchase and applies only to new products. Warranty service includes free repair or replacement of parts that fail due to reasons beyond the consumer's control during the warranty period, provided that the product has been used in accordance with the user manual. Repairs or replacements are carried out at authorized service centers. Failure to follow the safety precautions described in this manual will void the warranty.

The warranty does not cover damage resulting from the following circumstances:

- Use of the cookware in violation of the safety precautions described in this manual (negligent handling, use of the cookware for purposes other than its intended purpose, washing with cleaning agents not suitable for this type of product).
- Damage resulting from improper use (overheating, dropping, other mechanical and thermal stress), intentional breakage, or use of the product for commercial or professional purposes.
- Damage caused by excessive force when tightening or loosening parts.
- Self-repair or modification of the product.
- External changes resulting from normal use and natural wear that do not affect the functionality of the cookware (mechanical damage to the exterior or interior surface (scratches, abrasions, dents, etc.), natural discoloration of the metal, including the appearance of rainbow or dark spots).
- Any damage to glass lids.
- The appearance of limescale and scale deposits resulting from normal use of the cookware.

Warranty Period: 24 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The device does not require installation or permanent mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported under dry conditions.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Disposal of this device must be carried out in accordance with local waste recycling regulations. By ensuring proper disposal of this product, you help prevent potential harm to the environment and human health resulting from uncontrolled waste disposal and promote the sustainable reuse of material resources. For more detailed information on collection and disposal points for this product, please contact your local municipal authorities or household waste collection service.
- If product malfunction is detected, immediately contact an authorized service center or dispose of the product.

Additional Information

Manufacturer: Haoding Metal Products (Xinxing) Co., Ltd.

Shizigan, Fenghuang Industrial Development Zone, Xincheng, Xinxing County, Yunfu City, Guangdong Province, China.

Made in China.

The product meets the requirements of the applicable GOST standards of the Russian Federation.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

The production date is indicated on the packaging.

v.1



aceline