

Kitchen Scale

GM-20B, GM-20W

aceline

User Manual

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The kitchen scale is designed to measure the weight of various food items and small objects.

Safety Precautions

- If you notice any malfunction, try replacing the batteries. If the problem persists, contact an authorized service center.
- When the battery charge is running low, a warning icon will appear on the display. The batteries must then be replaced.
- Do not exceed the scale's maximum load. Placing more than 5 kg on the scale will cause «O-Ld» to appear on the display.
- Use the scale only on a stable, level surface, and only in a completely dry environment.
- Clean the device with a slightly damp cloth. Do not use gasoline or other harsh substances to clean the device. Protect the device from water and direct sunlight.
- If you do not plan to use the scale for an extended period, remove the batteries to prevent corrosion, which could damage the device.
- This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.
- This device is not intended for commercial use.

Operating Instructions

1. Insert 2 AAA batteries into the battery compartment on the underside of the scale.
2. Place the scale on a level surface to ensure accurate weighing.
3. Press the «⏻» / «TARE» button; after 2 seconds, «0» will appear on the display.
4. Place the container on the scale — the container's weight will appear on the display.
5. Press the «⏻» / «TARE» button — «0» will appear on the display. Add food to the container — the food's weight will appear on the display.
6. Once weighing is complete, remove the container from the scale and press the «⏻» / «TARE» button to turn off the scale.
7. To switch measurement units, press the «UNIT» button. The name of the selected unit will appear on the display.

Display Icon Reference

Icon	ML	Oz	Lb	G	Cup	Weight	Water	Milk
Meaning	Milliliter	Ounce	Pound	Gram	Cup	Weight	Water	Milk

Specifications

- Model: GM-20B, GM-20W.
- Trademark: Aceline.
- Weighing range: 2 g – 5 kg.
- Units of measurement: Grams / ounces / pounds / milliliters / cups (milk/water).
- Measurement accuracy: 1 g.
- Auto power-off and automatic value reset.
- Overload and low battery indication.
- Batteries: 2 AAA batteries.
- Tare function.
- Scope of application: Domestic.

Package Contents

- Scale.
- 2 AAA batteries.
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- Upon expiration of the service life of batteries supplied with the device, do not dispose of them with other household waste. Batteries must be disposed of in accordance with local waste recycling regulations to prevent potential environmental harm resulting from uncontrolled waste disposal.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Ningbo Putian Information Industry Co., Ltd.

Ditan, Industrial Development Zone, Yuyao, Ningbo City, Zhejiang Province, China.

Made in China.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products



Production date (mm.yyyy): _____ v.1

aceline