

aceline

User Manual

Hair Straightener
HSC-8923WP

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The straightener is designed for curling, straightening, and styling hair.

Safety Precautions

- Do not use the device near water. Do not use it in bathrooms, showers, swimming pools, or other high-humidity areas. Proximity to water poses a risk, even if the device is switched off.
- Unplug the power cord from the power source after use. Do not leave the plugged-in device unattended.
- This device is not intended for use by children under 8 years of age or by persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.
- Before connecting the device to the power source, ensure that the voltage of your household electrical network matches its technical specifications.
- Do not use the device for purposes other than those described in this manual.
- Do not use accessories or parts from other manufacturers. Using such accessories or parts will void the warranty.
- Do not wrap the power cord around the device.
- Allow the device to cool down completely before storing it.
- Exercise caution when using the device, as it can become very hot. Hold the device only by the handle. Avoid contact with the skin.
- Always place the device on a heat-resistant, stable, and flat surface. The hot heating plates must not come into contact with the surface or other flammable materials.
- Do not allow the power cord to come into contact with the hot parts of the device.
- Keep the plugged-in device away from flammable objects and materials.
- Do not cover the device while it is still hot (e.g., with a towel or clothing).
- Use the device for styling only on dry hair. Do not handle the device with wet hands.
- Keep the heating plates clean. Regularly remove dust and residue from them. Do not apply styling products directly onto the heating plates.
- The heating plates have a special coating. Over time, this coating may wear off. This does not affect the performance of the device.
- When used on dyed hair, stains may appear on the heating plates.
- Before using the device on artificial (synthetic) hair, consult with specialists at the place of purchase of the hair extensions/wigs.
- Do not use the device if it is malfunctioning or if the power cord is damaged.
- For inspection or repair, contact only an authorized service center. Repairs performed by unqualified persons may lead to highly dangerous situations for the user.
- To avoid electric shock, do not insert metal objects into the openings of the device.
- This device is not intended for commercial use.


Specifications

- Model: HSC-8923WP.
- Trademark: Aceline.
- Power: 25 W.
- Power supply: 220–240 V, 50 Hz.
- Maximum heating temperature: 200 °C.
- LED indicator.
- Swivel power cord.
- Plate coating: Ceramic.
- Plate dimensions: 89 × 23 mm.
- Protection class: II.
- IP code: IPX0.
- Cord type: Z.
- Scope of application: Domestic.

Package Contents

- Device.
- User manual.

Device Diagram

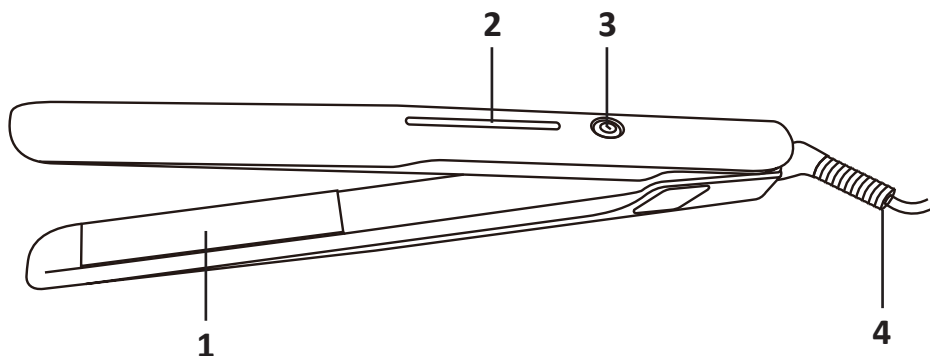

1. Ceramic plates.
2. LED indicator.
3. ON/OFF button.
4. Swivel power cord.

Operating Instructions

1. Plug the device into the power source.
2. Turn on the device and wait 3–5 minutes for it to reach the desired temperature.
3. Divide your hair into several sections and start styling from the lowest sections.
4. Grasp a strand of hair at the roots with the device, clamp the strand between the heated plates, and smoothly glide it down to the very tips.
5. Repeat this step with all hair strands.
6. After use, unplug the device. Wait for it to cool down completely and wipe the heating elements with a dry cloth.

CAUTION

1. Do not touch the heating plates during operation to avoid burns.
2. Do not scratch the heating elements with sharp objects.
3. After use, always leave the device on a heat-resistant surface until it cools down completely.

Cleaning and Maintenance

- Once the device has cooled down completely, wipe the body and plates with a dry cloth. Do not immerse the device in water.
- Do not use harsh or abrasive cleaning agents or solvents when cleaning.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Cixi Songjie Electric Appliance Factory.

Shanghe District, Dongqiao Village, Guanhaiwei Town, Cixi City, Ningbo, Zhejiang, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____

V.1



aceline