

EXECUTOR 3

WIRELESS GAMING MOUSE



Contents

Intended use.....	3
Safety Precautions	3
Rechargeable Battery Guidelines (Li-pol/Li-ion)	4
Specifications	7
Package Contents.....	7
Device Diagram	8
Operating Instructions.....	9
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	12
Warranty Information.....	13
Additional Information	13

Wireless Mouse ARDOR GAMING Executor 3

User Manual

Dear Customer,

Thank you for your trust!

Our team fully shares your passion for computer games, which is why we put all our efforts into making your gaming experience unforgettable with our accessories for gamers. Wishing you new victories and the brightest impressions ahead!

Intended use

The wireless mouse is a device for controlling the cursor and issuing various commands to the computer.

Safety Precautions

 
- Do not make any modifications to the device's design.
- To avoid a short circuit, do not expose the device to any liquids, and do not place open containers of liquid near it.
- Do not expose the device to electromagnetic radiation.
- This device is not intended for commercial use.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.

Rechargeable Battery Guidelines (Li-pol/Li-ion)

Dear Customer, please note that this device uses a lithium-based rechargeable battery as its power source. Please carefully read the information below to help extend the life of your battery and prevent undesirable consequences during its operation.

Battery Capacity and Charge-Discharge Cycles

During prolonged storage and use, the rechargeable battery (hereinafter referred to as «the battery») tends to lose its charge and capacity. After 300 charge-discharge cycles (approximately one year of device use), the battery capacity may decrease to 80% of its nominal value. After 400 charge-discharge cycles, the battery capacity may decrease to 60% of its nominal capacity. Partial capacity reduction within these limits and time frames is natural battery wear and is not considered a defect.

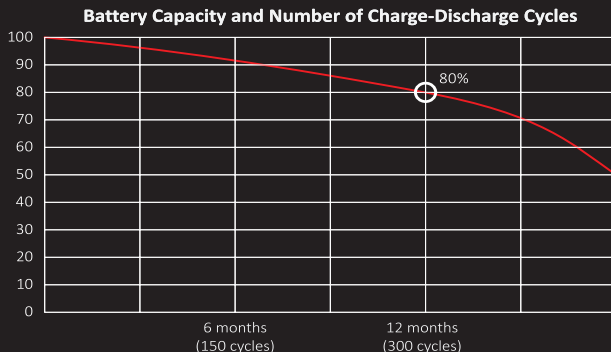

Natural Battery Wear

The battery loses charge even when stored separately from the device. The self-discharge rate is approximately 5% per month. Due to their design, batteries are not durable and constantly degrade regardless of whether they are in use. This degradation accelerates at higher temperatures and when the charge level deviates from the «optimal» storage level, which is generally considered to be 40%. In other words, if the battery is not in use, it is advisable to keep the charge level between 40% and 50%.

Use Only the Original Charger

The battery's charge and discharge capability is controlled by its built-in Battery Management System (BMS). Forced «fast charging» modes using external chargers for Li-ion batteries are strictly not recommended, as charge and discharge currents are limited. Li-ion batteries do not have a so-called «memory effect» You can start charging or discharging the battery from any charge level.

Most devices have charge and discharge limits—the controller may prevent the battery charging if, for example, the charge is already above 90%. It will also prevent the battery from fully discharging, protecting the cells from damage. Even if the device is powered by the electrical grids, the Li-ion battery should undergo a full charge/discharge cycle at least once a month (until the «low battery» warning appears). Never let the battery discharge completely. A Li-ion battery degrades quickly if stored in a discharged state for a prolonged period. If this happens, charge it immediately. If the battery remains in a discharged state for two weeks or more, irreversible capacity loss occurs in the cells, which will ultimately lead to battery failure.

Observe the Temperature Requirements

Batteries must be stored in a charged state at temperatures between +15 °C and +35 °C with normal humidity. Batteries do not perform well prolonged operation in very high (above +40 °C) or very low (below -10 °C) ambient temperatures. Do not leave the battery in direct sunlight.

Do Not Disassemble, Burn, or Use Damaged Batteries

Under no circumstances should you attempt to disassemble the battery or charge its individual cells. For repair or maintenance, please contact an authorized service center.

Puncturing or crushing the cells can cause an internal short circuit, leading to fire and explosion. Melting of lithium due to high temperatures can also cause an explosion. If the seal is broken, water or condensed atmospheric moisture can enter the cell, potentially triggering a reaction that releases hydrogen and causes a fire. You can check the current battery status using the battery indicator, which is available on almost all devices (please check its location and operation method at the time of purchase).

CAUTION:

- Be careful — damaged batteries may release harmful substances.
- If the battery is replaceable (removable), and you discover problems with its performance, contact a service center (see the warranty period in the warranty information). If the battery is built-in (an integral part of the device), the warranty applies to the device itself. You should also contact a service center. The sooner you bring a malfunctioning battery in for repair, the more likely it can be restored with minimal cost.
- Battery operating time depends on many other factors, and the actual operating time may differ from the stated value.
- Rechargeable batteries have a limited number of charge cycles and may eventually need replacement (see the limited warranty conditions for the battery in the warranty information). Battery operating time depends on the usage mode and settings.

 
 
 
Specifications

- Model: ARDW-ET3325-BK
- Trademark: ARDOR GAMING
- LED sensor: PMW3325
- Battery: 500 mA·h
- Battery life: Up to 50 hours
- DPI modes: 400–800–1600–3200–5000 (max. 10 000 DPI)
- Mouse acceleration: 20 G
- Polling rate: 125–250–500–1000 Hz
- Switches: Huano blue shell, up to 20 million clicks
- Backlight: RGB, 9 modes
- Material: Plastic
- Connection: USB Type-C, 2.4 GHz band
- Wireless standard: IEEE 802.15.4
- Radio spectrum: 2403–2480 MHz
- Transmit power: 0 dBm
- Encoder: F-SWITCH
- Cable: 1.8 m
- Mouse dimensions: 131 × 76 × 42 mm
- Weight: 114±5 g
- Scope of application: Domestic

Package Contents

- Mouse
- USB dongle
- USB cable
- Extra set of PTFE feet
- User manual

Device Diagram

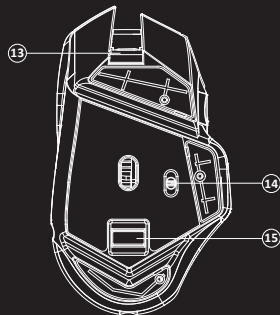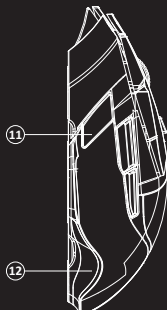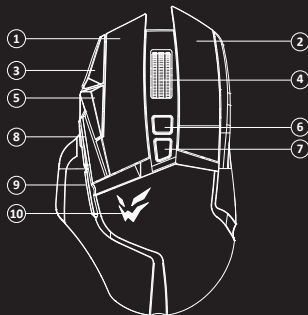

- 1. Left mouse button
- 2. Right mouse button
- 3. Fire button
- 4. Scroll wheel / Middle button
- 5. LED switch button
- 6. DPI increase button
- 7. DPI decrease button
- 8. Forward button
- 9. Back button

- 10. Logo backlight
- 11. Sniper button
- 12. Back lighting
- 13. Charging connector
- 14. Power switch
- 15. USB dongle storage compartment

Operating Instructions

Connecting the Mouse

1. Take the USB mouse receiver included in the package.
2. Connect the dongle to a USB connector on your computer.
3. Turn on the mouse by sliding the power switch to the appropriate position.
4. Wait for the hardware installation wizard to complete on your computer.
5. The mouse is ready to use.

CAUTION:

If the mouse does not connect wirelessly, ensure that the USB receiver is plugged into a USB connector on the computer and that the switch on the bottom of the mouse is not in the OFF position.

If the mouse still does not connect after checking these points, gently press and hold the left, middle (scroll wheel), and right buttons simultaneously for 3 seconds. The LED indicator will begin to flash; then reconnect the USB receiver. If the steps above do not resolve the issue, please contact customer support.

Power Switch

- «ON» position: The mouse is turned on, and the backlight is off.
- «OFF» position: The mouse is turned off.
- «RGB LED» position: Both the mouse and the backlight are turned on.
- When switching from the «ON» position to the «RGB LED» position, pause in the «OFF» position for at least one second to ensure the backlight turns on correctly.

Wired and wireless modes

1. Wired and wireless modes are activated automatically. When the wireless receiver is connected to the computer, wireless mode is enabled.
2. When the mouse is connected to the computer via cable, wired mode is enabled.
3. If the mouse is connected via cable while in wireless mode, it will automatically switch to wired mode.

Software

1. This mouse comes with software that allows you to customise its settings.
2. You can download the software from <https://www.dns-shop.ru/> on the product page.
3. Before downloading the software, ensure you are downloading it from the correct product card (to do this, enter the alphanumeric model name indicated on the box, in the user manual, or on the back of the mouse).
4. Using the software, you can reassign buttons to your desired commands using macros, as well as change the default button functions.

Note: If the software does not detect the mouse: Try uninstalling the software, temporarily disabling your antivirus protection, and then downloading the software again following the instructions above. Check the connection between the mouse and the software. If the issue persists, please contact customer support.

Polling Rate

125–250–500–1000 Hz, adjustable via software. The default value is 500 Hz.

DPI Settings and Indication

1. Different DPI levels correspond to different scroll wheel backlight colors. DPI levels: 400 (red) — 800 (green) — 1600 (blue) — 3200 (teal) — 5000 (purple).
2. Press the «DPI» switch on the bottom of the mouse to cycle through the DPI levels sequentially.
3. DPI can also be adjusted via software, with a maximum DPI level of 10,000.

Charging

1. When the mouse battery is low, the logo backlight will start flashing red. Connect the mouse to a power source to charge it.
2. During charging, the logo backlight will flash once, and then flash green ten times. After this, the backlight will return to indicating the current DPI level.

Backlight Settings

1. The backlight can be adjusted or turned off using the software.
2. The default backlight effect is “Stream”. The backlight turns off when the mouse is idle to save power.
3. The backlight effect can be adjusted via the software.
4. Number of backlight modes: 9.

CAUTION:

To enable the backlight while the mouse is in wired mode, first disconnect the cable, switch the mouse to wireless mode, turn on the backlight, and then reconnect the cable.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit: <https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: SHENZHEN YUANYICHANG TECHNOLOGY CO., LTD. Building B, No.60, Zhuang Village Road, Xiner Industrial Park, Xinqiao Street, Bao'an District, Shenzhen City, Guangdong Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____ v.1





LEARN MORE:

ARDOR-GAMING.COM
[VK.COM/ARDOR_GAMING](https://vk.com/ARDOR_GAMING)

