

RUNE

WEBCAM



Contents

Intended Use	3
Safety Precautions	3
Device Diagram	4
Specifications	5
Package Contents.....	5
Mounting via Flexible Mount.....	6
Connection Diagram	6
Operating Instructions.....	7
Using the Webcam with Windows 10	7
Troubleshooting Guide.....	8
Maintenance and Care	8
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	9
Warranty Information	10
Additional Information.....	10

Web Camera ARDOR GAMING Rune

User Manual

Dear Customer,

Thank you for your trust!

Our team fully shares your passion for computer games, which is why we put all our efforts into making your gaming experience unforgettable with our accessories for gamers. Wishing you new victories and the brightest impressions ahead!

Intended Use

A webcam is designed for capturing and transmitting video and audio in real time over the Internet.

Safety Precautions

- Do not disassemble the device yourself to avoid electric shock. This device contains no user-serviceable parts. Maintenance and repairs should only be performed by qualified technicians at an authorized service center.
- Protect the device from moisture, dust, and extreme temperatures.
- Protect the device from extreme temperatures and direct sunlight. Prolonged exposure may adversely affect the internal components and housing of the device.
- Do not use the device outdoors.
- To avoid a short circuit, do not expose the device to any liquids, and do not place open containers of liquid near it.
- Protect the device from impacts, drops, vibrations, and other mechanical stress.
- If unusual sounds or odors occur, immediately disconnect the device from the power source and contact an authorized service center.

 
- Do not use this device after it has been dropped or if there is visible damage to the USB cable or the device itself. Contact an authorized service center.

Note: To conduct teleconferences and video conferences, a sound card and an Internet connection are required.

It is recommended to set this webcam as the default video capture device. To do this, open “Control Panel” on your PC, select “Device Manager”, and then enable or disable video capture devices by right-clicking on the corresponding device in the list.

Device Diagram

1. Lens
2. Microphone
3. Flexible mount / Stand
4. USB Type-C connector

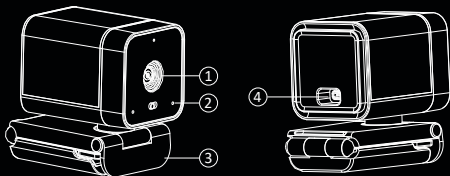


Specifications

- Model: Rune
- Trademark: ARDOR GAMING
- Megapixels: 4 MP
- Microphone: Yes
- Power supply voltage: 5 V
- Cable length: 2 m
- Viewing angle: 78°
- Operating system compatibility: Windows
- Focus: Automatic
- Maximum frame rate: 30 FPS
- Resolution (photo): 1920 × 1080, 2560 × 1440
- Resolution (video): 1920 × 1080, 2560 × 1440
- Connection interface: USB Type-A
- IP code: IPX0
- Scope of application: Domestic


Package Contents

- Web camera
- User manual

 Mounting via Flexible Mount

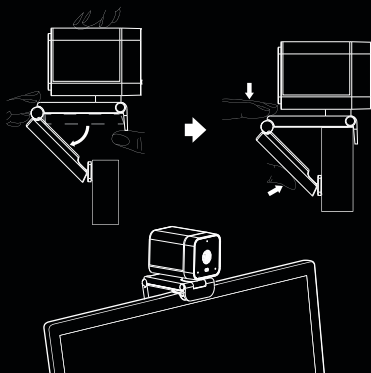

Connection Diagram

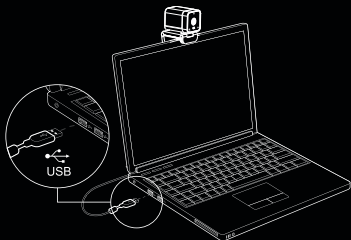 

Operating Instructions

This webcam features Plug and Play technology for Windows, macOS, and other devices. Immediately after connecting the webcam to your computer's USB connector, you can launch any application that supports webcam functionality and start using the device.

Using the Webcam with Windows 10

Windows 10 users can use the Camera app, which is pre-installed with the OS.

- To open the camera in Windows settings, click "Start" and select the camera from the app list, or type "Camera" into the search bar.
- If you want to use the camera with other applications, click "Start", then "Settings" > "Privacy" > "Camera", and then turn on the "Allow apps to access your camera option". Below, select the applications that can access the camera.
- After you open the "Camera app", you may need to switch to the "ARDOR GAMING Rune" camera. To do this, click "Start" > "Camera" > "Change camera".
- To view new or previously taken photos or videos, click "Start" > "Photos", and then select the desired collection.

Troubleshooting Guide

Issue	Solution
No image	Make sure the cable is properly connected
Image is too dark or too bright	• Check video settings • Ensure adequate lighting. Use artificial light sources if necessary • Do not place the webcam directly opposite a bright light source • Clean the lens of dirt
Device is not working	Reconnect the device to a different USB connector or restart your computer
Device is getting very hot	The webcam housing may become hot during prolonged use. Disconnect the device from the power source and allow it to cool down

Maintenance and Care

Clean the lens with a dry cloth designed for optical equipment, without applying excessive force. Do not use lint-producing cloths.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:
<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Shenzhen Xinzengcai Creative Electronic Co., Ltd.1&3F, Building 11, Dadu Industrial Zone, Yongfeng 1st Road, East District of Baishixia Community, Fuyong Street, Bao'an District, Shenzhen, Guangdong, China

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ v.1



LEARN MORE:

ARDOR-GAMING.COM
[VK.COM/ARDOR_GAMING](https://vk.com/ardor_gaming)

