

WRATH

WIRELESS GAMEPAD



Contents

Intended Use	3
Safety Precautions	3
Specifications	3
Package Contents	3
Rechargeable Battery Guidelines (Li-pol/Li-ion)	4
Connection	6
Macro Buttons	6
Device Diagram	7
FAQ	9
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	9
Warranty Information	10
Additional Information	10

Wireless Gamepad ARDOR GAMING Wrath

User Manual

Dear Customer,

Thank you for your trust!

Our team fully shares your passion for computer games, which is why we put all our efforts into making your gaming experience unforgettable with our accessories for gamers. Wishing you new victories and the brightest impressions ahead!

Intended Use

The gamepad is an input device designed for controlling characters or gameplay in video games.

Safety Precautions

- Do not disassemble the device.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- Protect the cable from pinching and other physical damage.
- Protect the device from drops.
- Do not store the device in areas with high humidity.
- Do not attempt to repair the device yourself. If a malfunction occurs, contact an authorized service center.
- Prevent liquid from entering the device.
- Do not expose the device to high temperatures or hot objects.
- This device is not intended for commercial use.

Specifications

- Model: Wrath
- Trademark: ARDOR GAMING
- Power supply: 5 V – 500 mA
- Operating current: 45–150 mA
- Maximum operating current: 500 mA
- Battery life in gaming mode: 15 hours
- Battery capacity: Li-ion, 1000 mAh
- Bluetooth version: 4.2 + EDR
- Wireless standard: IEEE: 802.15.1
- Frequency range: 2402–2480 MHz
- Transmitter power: 14 dBm
- Compatibility: PS4, PS3, PC, iOS13.4, Android 10
- Dimensions: 160 × 106 × 68 mm
- Weight: 255 g
- Scope of application: Domestic

Package Contents

- Device
- USB Type-C cable
- User manual

 
Rechargeable Battery Guidelines (Li-pol/Li-ion)

Dear Customer, please note that this device uses a lithium-based rechargeable battery as its power source. Please carefully read the information below to help extend the life of your battery and prevent undesirable consequences during its operation.

Battery Capacity and Charge-Discharge Cycles

During prolonged storage and use, the rechargeable battery (hereinafter referred to as «the battery») tends to lose its charge and capacity. After 300 charge-discharge cycles (approximately one year of device use), the battery capacity may decrease to 80% of its nominal value. After 400 charge-discharge cycles, the battery capacity may decrease to 60% of its nominal capacity. Partial capacity reduction within these limits and time frames is natural battery wear and is not considered a defect.

Battery Capacity and Number of Charge-Discharge Cycles

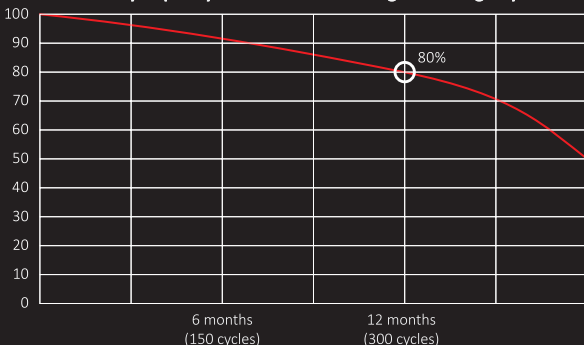

Natural Battery Wear

The battery loses charge even when stored separately from the device. The self-discharge rate is approximately 5% per month. Due to their design, batteries are not durable and constantly degrade regardless of whether they are in use. This degradation accelerates at higher temperatures and when the charge level deviates from the «optimal» storage level, which is generally considered to be 40%. In other words, if the battery is not in use, it is advisable to keep the charge level between 40% and 50%.

Use Only the Original Charger

The battery's charge and discharge capability is controlled by its built-in Battery Management System (BMS). Forced «fast charging» modes using external chargers for Li-ion batteries are strictly not recommended, as charge and discharge currents are limited. Li-ion batteries do not have a so-called «memory effect» You can start charging or discharging the battery from any charge level.

Most devices have charge and discharge limits—the controller may prevent the battery charging if, for example, the charge is already above 90%. It will also prevent the battery from fully discharging, protecting the cells from damage. Even if the device is powered by the electrical grids, the Li-ion battery should undergo a full charge/discharge cycle at least once a month (until the «low battery» warning appears). Never let the battery discharge completely. A Li-ion battery degrades quickly if stored in a discharged state for a prolonged period. If this happens, charge it immediately. If the battery remains in a discharged state for two weeks or more, irreversible capacity loss occurs in the cells, which will ultimately lead to battery failure.

Observe the Temperature Requirements

Batteries must be stored in a charged state at temperatures between +15 °C and +35 °C with normal humidity. Batteries do not perform well prolonged operation in very high (above +40 °C) or very low (below -10 °C) ambient temperatures. Do not leave the battery in direct sunlight.

Do Not Disassemble, Burn, or Use Damaged Batteries

Under no circumstances should you attempt to disassemble the battery or charge its individual cells. For repair or maintenance, please contact an authorized service center.

Puncturing or crushing the cells can cause an internal short circuit, leading to fire and explosion. Melting of lithium due to high temperatures can also cause an explosion. If the seal is broken, water or condensed atmospheric moisture can enter the cell, potentially triggering a reaction that releases hydrogen and causes a fire. You can check the current battery status using the battery indicator, which is available on almost all devices (please check its location and operation method at the time of purchase).

CAUTION

- Be careful — damaged batteries may release harmful substances.
- If the battery is replaceable (removable), and you discover problems with its performance, contact a service center (see the warranty period in the warranty information). If the battery is built-in (an integral part of the device), the warranty applies to the device itself. You should also contact a service center. The sooner you bring a malfunctioning battery in for repair, the more likely it can be restored with minimal cost.
- Battery operating time depends on many other factors, and the actual operating time may differ from the stated value.
- Rechargeable batteries have a limited number of charge cycles and may eventually need replacement (see the limited warranty conditions for the battery in the warranty information). Battery operating time depends on the usage mode and settings.

Connection

- **PS4:**

First connection to the PS4 console: Connect the USB cable to the gamepad and to the PS4. Press the Home/PS button. The LED indicator will light up, indicating a successful connection. Disconnect the cable; now the gamepad operates in wireless Bluetooth mode.

Reconnection: Press and hold the Home/PS button for approximately 1 second, and the gamepad will connect automatically. You can also play while connected to the PS4 via cable, which will charge the gamepad simultaneously.

- **PS3:**

This device connects to the PS3 console via a cable.

Connecting to the PS3 console: Connect the USB cable to the gamepad and to the PS3.

Press the Home/PS button, and you can start playing.

- **PS5:**

The controller has limited compatibility with the PS5. When connected to the PS5, the gamepad only supports PS4 games. Please note that the controller is not intended for the initial setup of the PS5; use the original controller for this purpose.

- **PC:**

First connection to a PC: Connect the gamepad using a USB cable.

The driver will be installed automatically. The gamepad will be configured to XInput (default setting).

If your PC is equipped with Bluetooth, you can connect to it wirelessly via the Bluetooth settings.

- **Bluetooth:**

Connecting to a device via Bluetooth: Press and hold the «Share» (9) + «PS» (6) buttons to enable Bluetooth on the gamepad. The LED indicator will light up, indicating a successful connection. Then, select the controller from the list of available devices. For more information, refer to the user manual of the connected device and/or operating system.

Compatible devices: Smartphones and tablets running Android and iOS, Smart TVs running Android TV.

Other devices with Bluetooth connectivity may also be compatible, but may operate with limited functionality (e.g., buttons and some games may not work as expected).

Macro Buttons

Macros can be assigned using the PS4 and PC. You can save up to 2 macros. The ML/MR buttons can be configured to execute a sequence of 1 to 12 button presses respectively.

Macros can be assigned to the following 14 buttons: Triangle, Square, Circle, Cross, L1, L2, R1, R2, L3, R3, Up, Down, Left, Right.

 
 
The Options button sets the sequence of button presses, for example, first L1, then L2. The Share button sets the simultaneous pressing of buttons, for example, L1 and L2 simultaneously. Press and hold the Share or Options button and one of the ML or MR buttons for 2–5 seconds. If the gamepad is connected via Bluetooth, the indicator will change to yellow.

 
Press the sequence of buttons for the macro you want to configure. Then press the ML or MR button to save. The LED will change color to confirm. Press ML or MR to activate the macro.

To reset a macro, press and hold the SHARE or OPTIONS button and one of the ML or MR buttons for 2–5 seconds. The LED will change to yellow (Bluetooth only). Press ML or MR again. The macro is now reset. You can also press the power button to reset the macro.

If you are connected via cable, the indicators will not light up, but the macro will still be set and saved.

Device Diagram

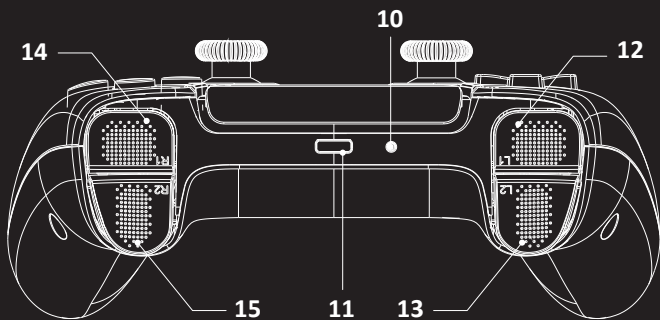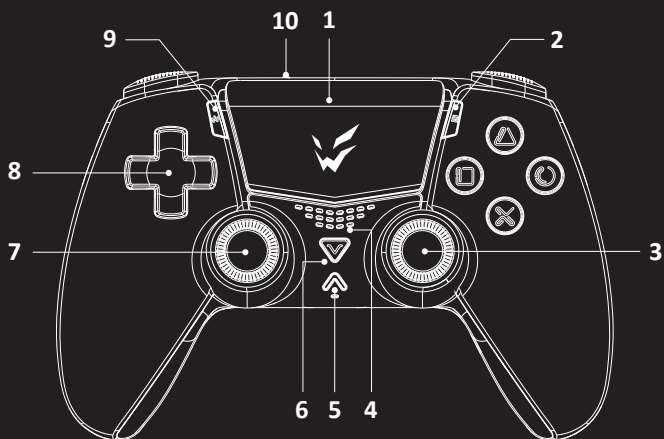

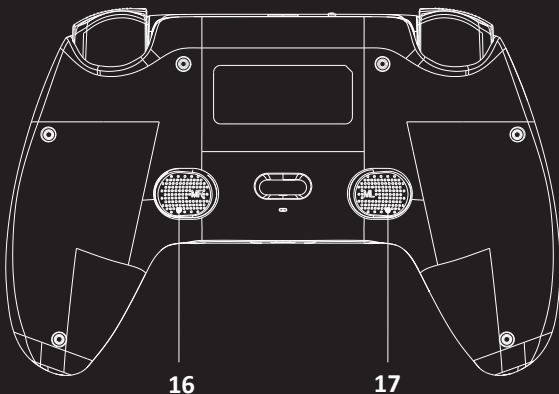

1. Touchpad
2. «Options» button
3. Right stick, «R3» button
4. Speaker
5. «Turbo» button
6. «PS» button
7. Left stick, «L3» button
8. D-pad
9. «Share» button

10. «Reset» button
11. USB Type-C charging port
12. Left bumper / «L1» button
13. Left trigger / «L2» button
14. Right bumper / «R1» button
15. Right trigger / «R2» button
16. «MR» button
17. «ML» button

FAQ

1. Is a Bluetooth adapter included in the package?

No, a Bluetooth adapter is not included in the package. The device's package contents are listed on page 3 of this manual.

2. The gamepad has a built-in speaker. How do I output audio to the device?

The gamepad supports audio playback only when connected to a PS4 or PS3 console. On other platforms (e.g., Windows, Android/iOS), audio output via the speaker is not available.

3. How do I turn off the vibration?

Vibration can be disabled in the game settings or in the console settings.

4. How do I disable the touchpad?

Press the Touchpad (1) + «PS» (6) buttons simultaneously to turn the touchpad on/off.

5. How do I connect the gamepad to a PC via Bluetooth?

Press the «Share» (9) + «PS» (6) buttons to enable Bluetooth on the gamepad. The LED indicator will light up, indicating a successful connection.

6. How do I configure audio output through headphones connected to the gamepad?

After connecting wired headphones to the gamepad, the sound will be routed to the headphones automatically; no additional configuration is required. If you need to adjust the volume, adjust it in the game or gaming console settings.

7. How do I monitor the battery level and know when the gamepad is low on charge?

The gaming platform displays a low battery warning on the screen.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months.

Service Life: 24 months.

For the up-to-date list of authorized service centers, please visit: www.dns-shop.ru/service-center

Additional Information

Manufacturer: Shenzhen Targetever Technology Co., LTD.

Floor 2-5th Building A, Jinshenghui Science and Technology Park, Dafu Industrial, Dafu Community, Guanlan Street, Longhua District Shenzhen, Guangdong, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



LEARN MORE:
ARDOR-GAMING.COM
[VK.COM/ARDOR_GAMING](https://vk.com/ARDOR_GAMING)

