

User Manual

LED TV

 
43UCGQ1

65UCGQ1


75UCGQ1

DEXP

Quick Start Guide

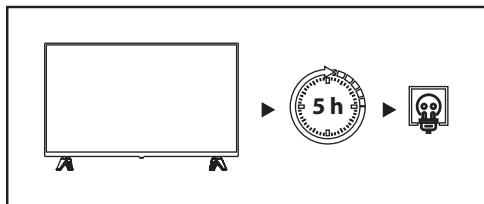


 Let the TV stay indoors for at least 5 hours after transportation to avoid damage due to temperature changes.

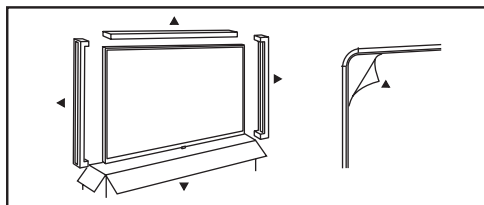


Remove the packaging (cardboard, foam, plastic bags, protective film from the TV body) and gently wipe the TV body with a dry, soft cloth to remove dust.

 CAUTION: Do not remove the protective film from the screen panel until installation on the wall or stand is completed, if such film is present.

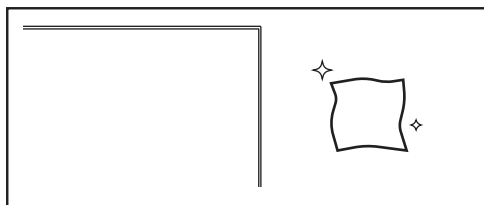


For cleaning the screen, use only a dry, soft, lint-free cloth.

 CAUTION: Do not use liquids, sprays, or abrasive materials.

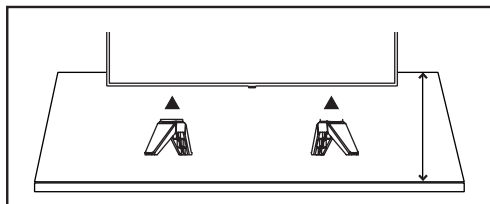


Stand Installation

 Install the legs (or stand) from the kit according to the instructions. Use a screwdriver for secure fastening. Place the TV on a flat, stable, hard surface capable of supporting its weight. Ensure that the stand does not extend beyond the edge of the surface.

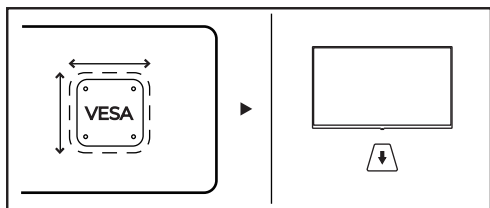


Wall Mounting

 
Use only a compatible VESA mount that matches the weight and size of your TV. Before installing the bracket, ensure that the wall can support the TV's weight.

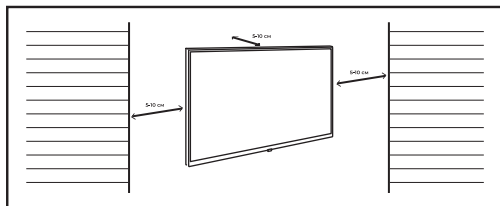

 Regardless of the installation method, leave at least 5–10 cm of free space behind and on the sides of the TV for air circulation and cooling. Do not install the TV in closed niches without ventilation, near heat sources (radiators, fireplaces), or in direct sunlight.

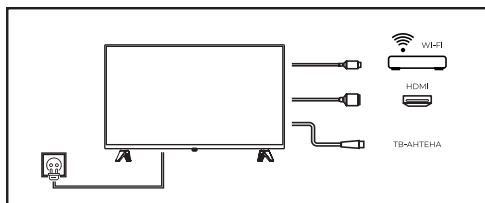

 Before connecting, ensure that the power supply parameters match the TV's power specifications. Connect the power cord and, if necessary, the antenna, HDMI devices (set-top box, console), or Wi-Fi adapter.

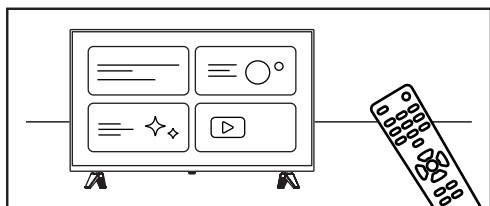

Turn on the TV using the remote control. Perform the initial setup following the on-screen instructions: select the language, connect to Wi-Fi, scan for channels (for the antenna), and log into your account.

Contents

Intended Use.....	6
Legal Notice	6
Safety Precautions	7
Operating Conditions	9
Specifications.....	10
Package Contents.....	11
TV Installation.....	11
Ventilation.....	11
Stand Assembly	12
Clearance for Stand Mounting	13
Clearance for Wall Mounting	13
Wall Mounting (Optional).....	14
Device Diagram	15
Front Panel	15
Side Panels	16
Connecting Devices	17
Connecting the Antenna Cable	17
HDMI	17
Optical Audio Cable (TOSLINK).....	17
Coaxial Cable	17
USB	17
Mini AV	17
Bluetooth	17
LAN (Ethernet) or Wi-Fi.....	18
DLNA.....	18
CI Card	18
Remote Control.....	19
Installing Batteries in the Remote Control.....	21
Turning On the TV	22
Initial Setup.....	22
Connecting the Remote Control	22
«Find My Remote» Function	23
Turning the Function On/Off.....	23
Operation	23
Using the TV.....	23
Inputs	23
Volume Control	23
Automatic Channel Scan	23
Common Interface	24

Accessibility..... 24

Using Quick Start..... 26

Wake on LAN..... 26

External Device Control (CEC) 26

Electronic Program Guide (EPG)..... 27

Shortcut Button 27

Live TV 27

User Profile Support..... 27

Controlling Smart Home Devices via Google TV 28

Game Mode 29

Settings..... 30

Network & Internet..... 30

About..... 30

Date & Time 30

Power 30

Picture 31

Sound 32

Storage 33

Demo Mode 33

Google Assistant 34

Location..... 34

Bluetooth 34

Data Security..... 34

Firmware Update 34

Troubleshooting Guide..... 35

Display Information 38

**Rules and Conditions for Installation, Storage, Transportation, Sale
(Distribution), and Disposal..... 39**

Additional Information 40

Warranty Information..... 40

Maintenance and Service Life 40

Appendix to the User Manual 41

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

A TV is an electronic device used to receive and display picture and sound transmitted wirelessly or via cable (including television broadcasts, or signals from video playback devices such as DVD/Blu-ray players, game consoles, etc.).

Legal Notice

- Any content and services accessed through this device, which are intended for personal, non-commercial use, are the property of their respective third-party owners and are protected by applicable copyright, patent, trademark, and other intellectual property laws. No part of such content or services may be modified, duplicated, published, uploaded, distributed, translated, sold, or used to create derivative works without the prior written consent of the content owner or service provider.
- You acknowledge and agree that you assume all risks associated with the use of this device, including any risks related to the quality, performance, and accuracy of any content and services accessed through it. To the fullest extent permitted by applicable law, this device and all third-party content and services are provided without warranties of any kind, either express or implied.
- Any content and services provided in conjunction with this device remain the property of their respective third-party providers. Therefore, the Manufacturer makes no representations or warranties regarding their quality, timeliness, legality, or completeness, and assumes no liability for any legal consequences or damages arising from their use.
- The Manufacturer reserves the right to restrict or limit access to certain content or services. As content and services are transmitted via third-party networks and transmission facilities, the Manufacturer does not provide customer support for such third-party content and assumes no related service obligations.

Note: Due to our continuous efforts to improve our products, the technical specifications, appearance, and descriptions of certain features may differ from the information provided in this User Manual. In the event of any discrepancy between this User Manual and the actual product functions, the actual functions shall prevail.

Safety Precautions

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
CAUTION TO AVOID ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR REAR COVER OF THE TV. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		

- The lightning flash with arrowhead symbol within a triangle alerts the user to the presence of dangerous voltage inside the device that may be sufficient to constitute a risk of electric shock. Do not remove the cover marked with this symbol.
- The exclamation point within a triangle alerts the user to the presence of important operating and maintenance (servicing) instructions.
- Do not expose the TV to moisture or rain to avoid fire or electric shock. Avoid splashing or dripping water onto the device.
- Do not place any containers filled with liquid (vases, bottles, glasses, etc.) on the TV.
- During operation, the screen and the TV casing may become warm. This is normal and not a malfunction.
- If you notice smoke, strange noises, or unusual odors coming from the device:
 - Immediately turn off the television.
 - Unplug the power cord from the outlet.
 - Contact an authorized service center.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- Batteries and other small parts pose a potential choking hazard. Keep such items out of the reach of children. In the event of swallowing or choking, seek immediate medical attention. Packaging materials must also be kept out of reach.
- Using headphones at high volume levels can cause irreversible hearing damage. Lower the volume level on the source device before connecting the headphones, then gradually increase it to a comfortable listening level.
- This device must be connected only to a power supply with characteristics identical to those specified on the device's rating plate.
- The power plug must always remain easily accessible. It serves as the main power disconnect for the device.
- To disconnect the device from the power source, grasp the power cord by the plug. Never pull on the cord itself.

- Cables must be routed so that they cannot be crushed, pinched, or damaged by items placed on or against them.
- If the cable, power cord or plug is damaged, it must be replaced by the manufacturer, an authorized after-sales service specialist, or a similarly qualified person to avoid hazardous situations.
- Do not install the device near water, such as in a bathroom or near a sink.
- Never touch the power plug or cable with wet hands, as this may cause a short circuit or electric shock.
- To prevent fire hazards, do not place open flames (such as lit candles) or heat sources (such as radiators) on or near the device.
- Do not disassemble the device yourself to avoid electric shock. This device contains no user-serviceable parts. Maintenance and repairs should only be performed by qualified technicians at an authorized service center.
- The slots and openings in the device are provided for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked in any way (e.g., by newspapers, tablecloths, or curtains).
- Always maintain a minimum clearance of 10 cm around the device to ensure adequate ventilation.
- Never push any objects into the device through its openings, as they may contact live electrical components, which could result in electric shock or fire.
- In the event of a thunderstorm or lightning:
 - disconnect the TV from the power supply;
 - disconnect the antenna cable from the TV;
 - disconnect all connected peripherals.
- Always turn off the device when it is not in use. If the device will not be used for an extended period of time, disconnect it from the power supply.
- Before cleaning, disconnect the device from the electrical outlet. Do not use liquid or aerosol cleaning agents. Use a dry, soft cloth for cleaning.
- This device is intended for home and personal use only. Do not use this device for commercial, industrial, or other purposes.
- Do not subject the device to strong impacts, excessive temperatures, or prolonged direct sunlight.
- Keep the device away from magnetic objects, motors, and transformers.
- Do not use the device outdoors, regardless of weather conditions.

CAUTION

Never install the TV in an unstable location. The device may fall, causing serious injury or even death. Many injuries, especially to children, can be avoided by taking simple precautions, such as:

- Use furniture or stands recommended by the TV manufacturer.
- Use only furniture that is sturdy enough to safely support the weight of the TV.
- Ensure that the device does not extend beyond the edge of the furniture on which it is installed.
- Never place the device on tall furniture (e.g., cabinets or bookshelves) without securely anchoring both the furniture and the device to a suitable support (e.g., a wall).
- Do not use or watch the TV while driving. This is dangerous and prohibited by law in some countries.

- Explain to children the dangers of climbing on furniture to reach the device or the remote control.
- In the event of moving the device to another location, you must observe the same precautions.
- Do not place the device on an unstable cart or stand. Do not place the device on cloth or other materials positioned between its base and the furniture. The device may slip, fall, and be damaged or cause serious injury.
- It is not recommended to use the product in places where oil smoke or steam is present, which may damage the device's material.
- A TV connected to a wall outlet is in standby mode. After 30 minutes of inactivity, the TV will switch to sleep mode.

Note: The images provided in this manual are for illustrative purposes only. For accurate information, please refer to the actual device.

Operating Conditions

- Ambient temperature: 10 °C to 35 °C.
- Relative humidity: Up to 80 % (at 25 °C).
- Atmospheric pressure: 86 to 106 kPa (650 to 800 mmHg).
- After transportation or storage at low temperatures, allow the TV to acclimatize to room temperature for at least 5 hours before connecting it to the power supply and turning it on.

CAUTION

- To avoid damage or injury, securely mount the device to the wall in accordance with the installation instructions provided in this manual.
- When mounting on angled surfaces, the TV panel must always be installed in a vertical position. The tilt angle between the panel and the vertical plane must not exceed 15° (this rule strictly applies to the bezel-less TV series).

Specifications

Model	43UCGQ1	65UCGQ1	75UCGQ1
Trademark	DEXP		
Power supply	220–240 V ~ 50 Hz		
Screen size	43'' (108 cm)	65'' (164 cm)	75'' (190 cm)
Screen resolution	3840 × 2160		
Refresh rate	60 Hz		
Panel technology	VA		
Backlight technology	Direct LED		
Advanced screen technology	QLED		
Contrast ratio	5000:1	6000:1	
Luminance	300 cd/m²	330 cd/m²	450 cd/m²
Power consumption	77 W	215 W	276 W
RAM	2 GB		
Internal Storage	32 GB		
Operating system	Google TV		
Audio output power	12 W × 2		
Bluetooth RF Specifications			
Wireless standard	IEEE 802.15.1		
Frequency range	2402–2480 MHz		
Transmitter power	< 10 dBm		
Wi-Fi RF Specifications			
Wireless standard	IEEE 802.11a/b/g/n/ac		
Frequency range	2400–2483.5 MHz, 5150–5350 MHz, 5650–5850 MHz		
Transmitter power	< 20 dBm		
TV dimensions (with stand), L × W × H	956.4 × 205.3 × 606.2 mm	1445.28 × 299.95 × 892 mm	1667 × 348 × 1028 mm
TV dimensions (without stand), L × W × H	956.4 × 71.6 × 556.6 mm	1445.3 × 69 × 831.5 mm	1667 × 68 × 956 mm
Supported image formats	BMP, GIF, JPEG, JPG, PNG		
Supported video formats	AV1, H.263, H.264, H.265, HEVC, MPEG1, MPEG2, MPEG4, VC1, VP8, VP9		
Supported audio formats	AAC, AC3, EAC3, FLAC, MPEG1, MPEG2		
Video processing technologies	DLG 120 Hz, MEMC		
Video and audio processing technologies	Dolby Vision and Dolby Audio		
TV tuner	DVB-C, DVB-S, DVB-S2, DVB-T, DVB-T2		
HDMI version and port count	HDMI 2.1 x 4		
VESA mount size	200 × 200	600 × 300	400 × 400
Annual energy consumption	113 kWh/year	314 kWh/year	403 kWh/year
Energy efficiency class	B		

Model	43UCGQ1	65UCGQ1	75UCGQ1
IP code	IP20		
Protection class	II		
Cord type	X		
Scope of application	Domestic		

Package Contents

- Device.
- Remote control (2 pcs).
- AAA batteries (4 pcs).
- Power cord.
- Stand legs.
- Screws:
 - 4 pcs for 43UCGQ1 and 75UCGQ1.
 - 2 pcs for 65UCGQ1.
- User Manual.

Notes

- The TV is supplied with batteries for the remote control.
- The batteries' service life is indicated on their individual packaging.
- It is recommended to replace the batteries when remote control performance declines or once their service life has expired.

TV Installation

Before using the device, you must attach the stand or mount the device on the wall.

CAUTION

 
If the TV is not installed on a flat, stable surface, it may be potentially hazardous due to the risk of falling. To avoid damage, you should follow these safety precautions:

- Place the TV only on flat, stable surfaces.
- Ensure that the TV does not overhang the edge of the furniture on which it is installed.
- Do not place the TV on tall furniture unless it is securely fixed.
- Do not place the TV on cloth or other objects located between the furniture and the TV.
- Do not install the TV in locations subject to mechanical vibration.
- Do not install the TV in locations where insects may enter its housing.
- Do not install the TV directly in front of an air conditioner, as condensation may form on the inner screen panel and cause malfunction.
- Do not install the TV in areas with strong magnetic fields, as they may cause interference, and electromagnetic waves could lead to device failure.
- Explain to children the danger of attempting to climb on the furniture where the TV is installed.

Ventilation



- Ensure that the necessary clearance is left on all sides of the TV, as shown in the diagrams below.
- Do not block the ventilation openings or insert any objects into the housing.
- Do not place the device in a confined space, such as a built-in cabinet. This will prevent proper ventilation and may lead to TV failure.

Stand Assembly


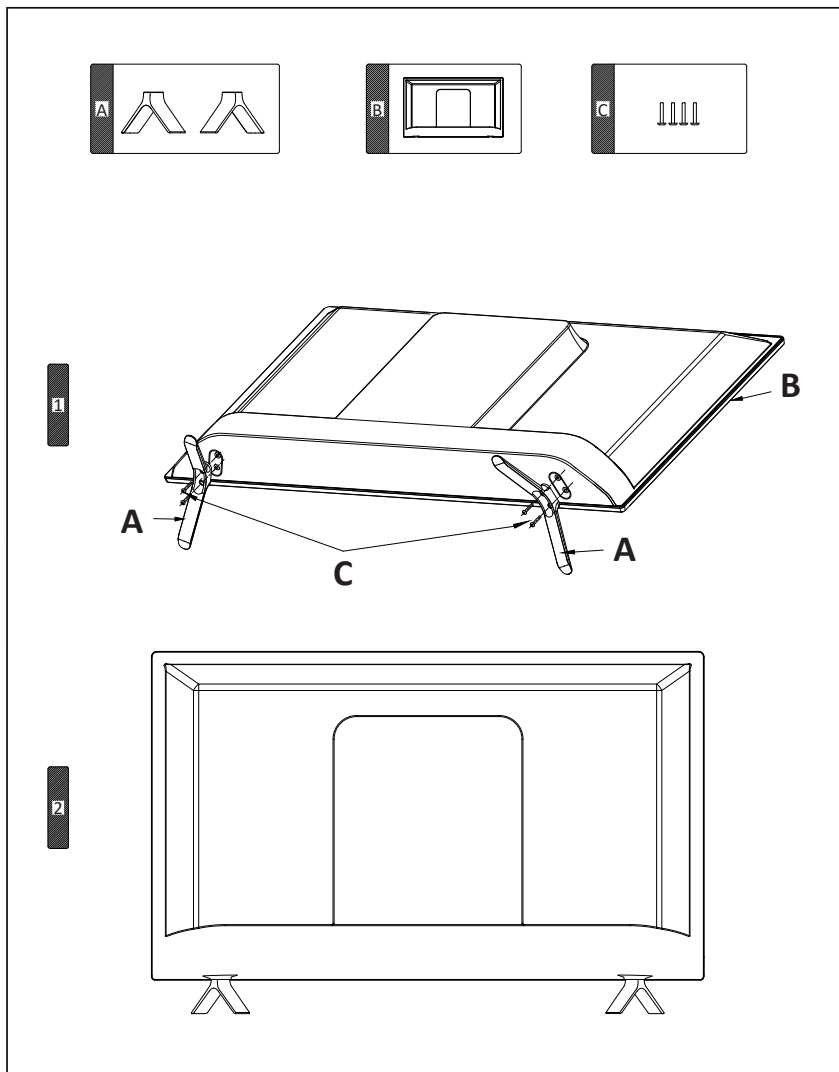


1. Before attaching/removing the stand, make sure the TV is turned off.
2. Place the TV screen-down on a soft surface to prevent damage.
3. Remove the stand legs from the packaging and insert them into the slots on the bottom of the TV.
4. Secure the stand legs using the 4 included screws.
5. To detach the stand legs from the TV, repeat steps 3 and 4 in reverse order.

  Clearance for Stand Mounting



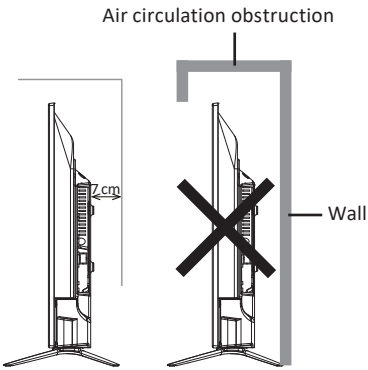
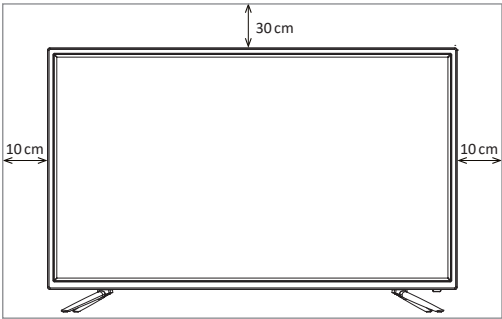


Clearance for Wall Mounting

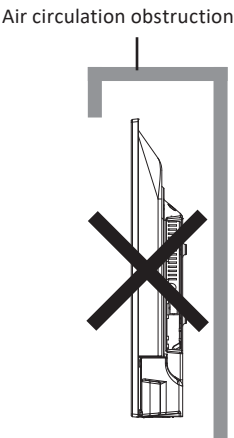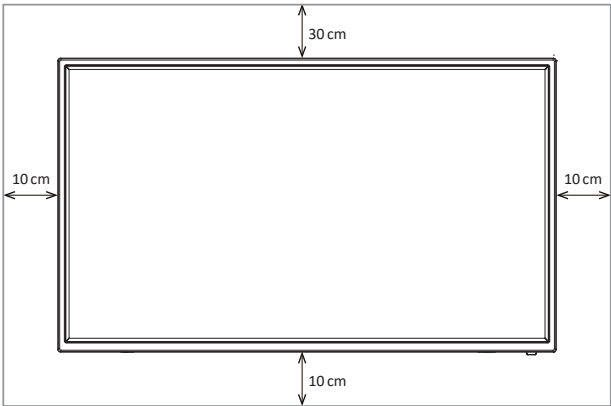  


Wall Mounting (Optional)

    The TV can be mounted on a wall using a special wall mount bracket (not included in the package). Before wall-mounting the TV, you must remove the manufacturer's stands, as well as disconnect all cables and connectors.

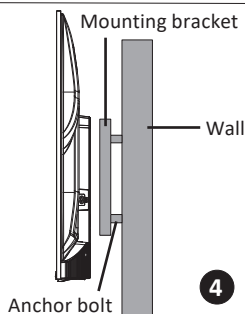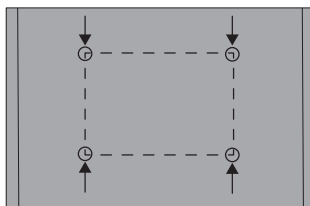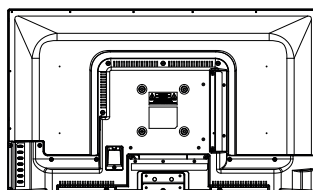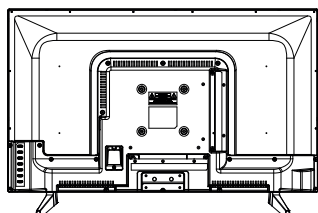

1. Place the TV screen-down on a soft, flat surface to prevent damage.
2. Using a screwdriver, unscrew and remove the manufacturer's stands from the bottom of the TV (1).
3. Mark the distance between the screw holes with a pencil according to the bracket dimensions (2, 3).
4. Drill holes in the wall and insert 4 anchor bolts for mounting.
5. Attach the bracket to the rear of the TV using the screws, then hang the assembly on the wall.

 Wall Mount Specification

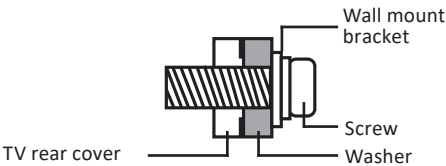


Model	43UCGQ1	65UCGQ1	75UCGQ1
Wall mount hole pattern (mm)	200 × 200	600 × 300	400 × 400
Wall mount bolt size (not included)	M6		

Notes

- The above diagram is for reference only.
- Use mounting brackets that comply with the VESA standard.

Device Diagram

 Front Panel

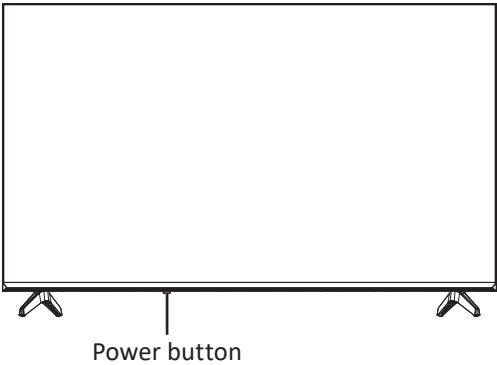


1. Press the power button to turn on the TV.
2. Press and hold the power button to turn off the TV.

Notes

- All images below are for reference only. The position of the power button may vary depending on the model.
- When the TV is powered on, it takes a few seconds to boot up the program. Do not turn off the TV immediately, as this may cause malfunctions.

 Side Panels

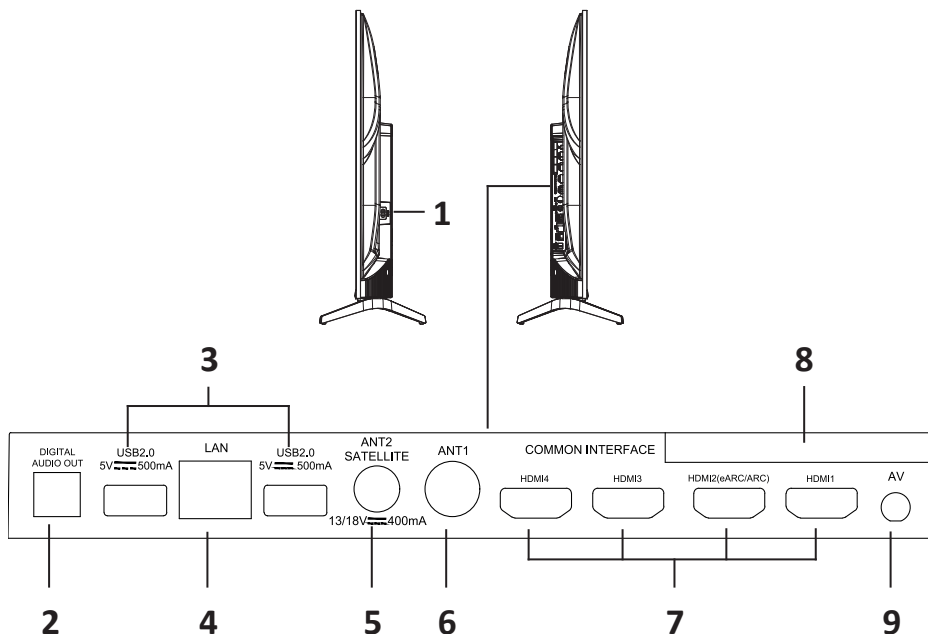

1. Power cord connector.
2. DIGITAL AUDIO OUT port.
3. USB 2.0 port.
4. LAN port.
5. Satellite antenna connector.
6. Antenna connector.
7. HDMI inputs, high-definition signal interface (HDMI2 supports eARC/ARC).
8. CI card slot.
9. Mini AV cable connector.

Notes

- Check the position and type of each connector before making any connection. A loose connection may cause picture or color issues. Make sure all connections are secure and properly seated. Not all audio and video equipment can be connected to the TV. Please refer to your device's manual for compatibility and connection information.
- Before connecting external equipment, unplug the power cord from the outlet to avoid electric shock.

Note: The actual appearance of the rear panel may differ from that shown in this manual.

Connecting Devices

Connecting the Antenna Cable

You can connect an external antenna using the corresponding connector.

1. Use the ANT2 connector to connect a satellite antenna.
2. Use the ANT1 connector to connect a standard antenna.
3. After connecting, press the «» button on the remote and select **Antenna** or **Satellite**, depending on which cable is connected.

HDMI

Connect an HDMI cable to the ARC (Audio Return Channel) port on the TV and on the audio system (receiver, soundbar).

Used for transmitting high-quality audio and video, as well as controlling the audio device from the TV.

HDMI connectors vary in resolution, refresh rate, and supported features:

- eARC — outputs audio to the connected device via HDMI.
- CEC — allows the TV and connected device to be controlled with a single remote.

Optical Audio Cable (TOSLINK)

Connect the optical cable to the TV and the audio system (home theater, soundbar). Transmits digital audio (Dolby Digital, DTS), but does not support newer formats such as Dolby Atmos.

Coaxial Cable

Used for receiving terrestrial or cable TV broadcasts (analog or digital DVB-T2).

Connect the antenna cable to the TV's ANT1 connector.

USB

Used for playing media files or connecting peripherals (flash drives, external hard drives, or USB adapters such as Wi-Fi or Bluetooth dongles).

Mini AV

A compact version of an analog audio/video connector for connecting older devices such as DVD players, game consoles, or camcorders.

Bluetooth

You can connect various devices to the TV, such as headphones, speakers, a mouse, a keyboard, a gamepad, etc.

- If the device you are connecting has a USB transmitter (such as a keyboard or mouse), first plug the transmitter into the TV's USB port, then proceed with pairing the devices.
- If the device does not have a USB transmitter, put it into pairing mode (refer to the device's user manual for instructions on how to do this) and go to **Settings → Remotes & Accessories → Add Device**.

LAN (Ethernet) or Wi-Fi

Connect the TV to your router via cable or Wi-Fi to enable Smart TV functionality. Provides internet access, streaming services (Netflix, YouTube), and software updates.

DLNA

You can securely share media content between different devices on your home network. The DLNA standard allows the TV to play video, audio, and photo content stored on other devices on the network.

- First, set up the local network on the device you want to stream content from (refer to that device's user manual for instructions on how to do this).
- To view this content on the TV, you will need to use a third-party media player that supports streaming.

CI Card

 
If you use pay TV with encrypted channels, insert the CI card provided by your service provider into this slot. For more information, refer to the documentation supplied with your CI card.

CAUTION


- Always turn off the TV before inserting or removing the CI card. Otherwise, the TV or CI module may be damaged.
- Insert the CI or CI+ module into the slot, making sure it is oriented correctly.
- Before inserting or removing the CAM module, make sure the TV is turned off. Then insert the CI+ card into the CAM module according to the service provider's instructions. CI+ is not supported in some countries and regions; consult your service provider.

Removing the CI Card

- To remove the module, carefully pull it out of the slot.
- After the TV is turned on, the CI/CI+ module will initialize. This may take some time. Once initialization is complete, encrypted channels will become available. If this does not happen, contact your service provider to confirm that encrypted channels are available to you.

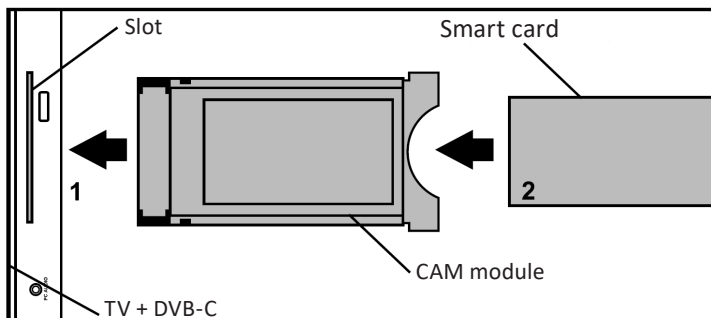


Remote Control

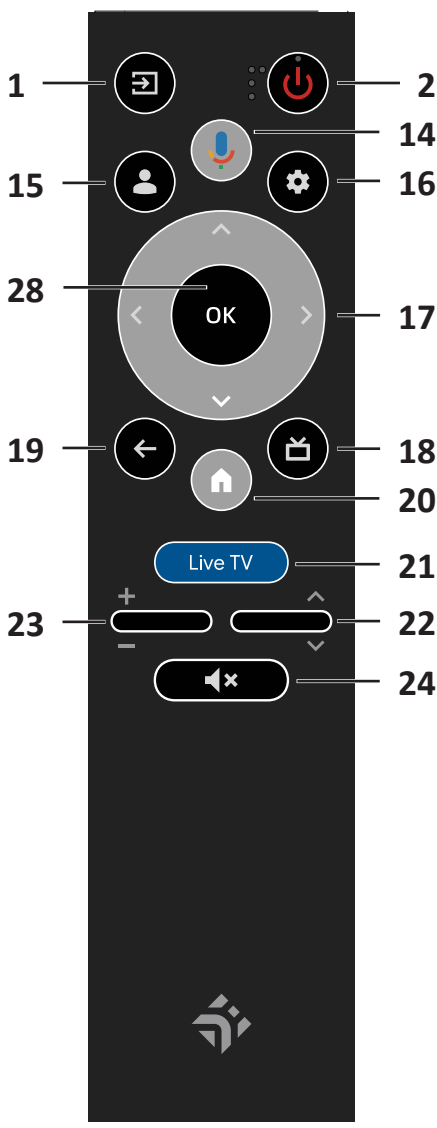 

No	Description
1	Display source list
2	Turn the device on or off
3	Control pad
4	Display program information
5	Teletext
6	Select subtitles
7	Select audio language/audio track
8	USB connection mode
9	Launch Wink app
10	Launch YouTube app
11	Launch VK Video app
12	Customizable shortcut button
13	All installed apps
14	Launch Google Assistant
15	Google Account
16	Settings
17	Navigation buttons (Up, Right, Down, Left)
18	Electronic program guide
19	Return to the previous menu/setting
20	Home screen
21	«Live TV» button
22	Switch to next/previous channel
23	Increase/decrease volume
24	Mute
25	Number keypad
26	Menu
27	On-screen keyboard
28	OK
MIC	Built-in microphone indicator
LED	TV status/command confirmation indicator

Installing Batteries in the Remote Control

 1. Turn the remote control over and, while pressing lightly, slide the battery cover in the direction shown by the arrow in the image below.
2. Insert the batteries into the remote control. Make sure the polarity matches the diagram inside the battery compartment.
3. Close the battery cover by sliding it in the opposite direction.

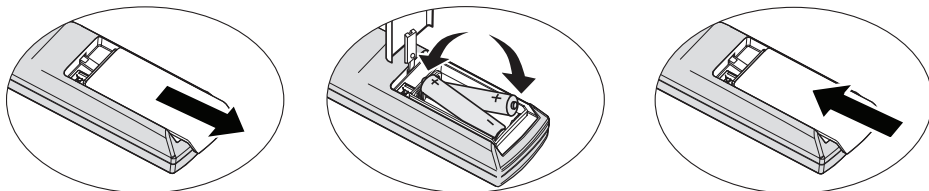

CAUTION: If you do not plan to use the device for an extended period, remove the batteries from the remote control. Otherwise, the remote may be damaged by leaking batteries.

Turning On the TV

1. Connect the power cord to the TV first, then to the power source.
CAUTION: The TV must only be connected to an AC power source. Never connect the device to a DC power source. If the power cord is damaged, under no circumstances connect it to the power outlet, as this poses a risk of electric shock.
2. Connect an external antenna to the ANT1/ANT2 connector on the side panel of the TV. The antenna connector (75 Ω — VHF/UHF/cable) can be used to connect an external antenna or other equipment.
 - If you want to receive a signal from a cable line or cable box, connect the coaxial cable to the ANT1 connector on the side panel of the TV.
 - If you want to receive a signal from your satellite receiver, connect the coaxial cable to the ANT2 connector on the side panel of the TV.
3. When the TV is connected to a power source, it will either turn on immediately or automatically enter standby mode.
4. If the power indicator is lit, the TV is in standby mode. Press the «  » button on the remote control or on the TV itself to turn it on.

Initial Setup

The first time you turn on the TV, a «Welcome» wizard will appear to guide you through the initial setup process. Follow the on-screen instructions to complete the setup, such as selecting a language, pairing your remote, connecting to a network, etc. At each step, either make a selection or skip it. If you skip a step, you can complete that setting later from the settings menu.

Notes

- It is recommended to select Set up Google TV and complete its setup to access additional features during initial setup. If you have completed the basic TV setup, you can enter Google TV setup again by pressing «  » on the remote control, then selecting **Settings** → **Set up Google TV** and pressing « **OK** » to confirm.
- When pairing the remote control, keep it within 1 meter of the TV and follow the on-screen pairing instructions. Once remote pairing is complete, you can use the **Google Assistant** button. If you skip remote pairing, you will be prompted to pair the remote with the TV again the first time you press the **Google Assistant** button.

Connecting the Remote Control

The first time it starts up, the TV will immediately prompt you to connect the remote.

1. Press and hold the «  » button and tilt the volume rocker to the «  » position.
2. The indicator on the remote control will start flashing, indicating that the remote is in pairing mode.
3. Once the indicator turns off, the remote is ready to use.

CAUTION: The remote control must be connected via Bluetooth for the voice assistant to work.

«Find My Remote» Function

This function is designed to make it easier to locate the remote control.

CAUTION! This function will only work once the remote control has been paired with the TV and subsequently configured. The distance between the remote control and the TV must not exceed 10 meters.

Turning the Function On/Off

1. Press the «» button.
2. Select **Help** → **Find My Remote** → **Off/On**.

Operation

1. Unplug the power cord and plug it back into the outlet.
2. Press the power button to turn on the TV.
CAUTION! Do not turn off the TV or interact with it in any way.
3. Within 20 minutes, a message will appear on the TV screen indicating that the «Find My Remote» function has started. The remote control will vibrate to indicate its location.

Note: When this function is enabled, the remote control consumes more battery power.

Using the TV

Inputs

Press «» on the remote control to display the list of signal sources. Use the navigation buttons to select an option, then press «**OK**» to enter the submenu. You can also press «» on the remote control to display the main Inputs menu, then press «**OK**» to enter it. Then use the navigation buttons to select the input source and press «**OK**» to confirm.

Volume Control

Adjusting volume: Tilt the rocker to the «**+**» / «**—**» position on the remote control to increase or decrease the volume.

Muting: Press the «» button to temporarily mute the sound. Press the same button again, or move the rocker to the «**+**» position, to unmute.

Automatic Channel Scan

1. In TV mode, press «» the remote control, select **Settings** → **Channels & Inputs** → **Channels**, and select the TV signal source (cable, antenna, or satellite).
2. Select **Channel Scan** and press «**OK**» to start scanning. The TV will automatically scan for available channels based on your country or region.

Note: If only analog channels are found during the scan, this may be due to a weak TV signal.

Common Interface

Encrypted digital TV channels can be decoded using a Conditional Access Module (CAM) and a card provided by your digital TV operator.

A CAM module may support several digital services. Contact your digital TV operator for more information about services and terms.

Using the Common Interface Function

CAUTION: Turn off the TV before inserting the CAM module. Be sure to follow the instructions below.

Incorrect installation of the CAM module may damage both the module and the TV.

1. Following the instructions printed on the card, carefully insert the module into the Common Interface slot on the TV.
2. Insert the module all the way in.
3. Turn on the TV and wait for the function to activate. This may take a few minutes.

Note: Do not remove the CAM module from the slot while the TV is in operation. Removing the module will disable digital services.

Accessing Common Interface Services

After installing the CAM module, press «» on the remote control, select **Settings** → **Channels & Inputs** → **Channel** → **Common Interface**, and press «**OK**» to enter. This menu option is only available if the CAM module is correctly inserted and activated. Apps and content are provided by your digital TV operator.

Note: This function is only available for digital broadcast channels.

Accessibility

Google TV actively develops accessibility features for people with disabilities, such as a screen reader, text enlargement, and subtitle support with style customization.

Using Subtitles

You can enable subtitles for each TV channel. Subtitles are broadcast either as Teletext or in DVB-T/DVB-T2/DVB-C/DVB-S/DVB-S2 digital broadcast format. With digital broadcasting, you also have the option to select your preferred subtitle language.

Note: Some options are only available when subtitles are enabled.

Turning Subtitles On/Off

1. Select «» on the remote control, select **TV Settings** → **Advanced Settings** → **Subtitles**, and press «**OK**».
2. Select the **Subtitles** option and press «**OK**» to toggle it on or off.
3. Press the «» button to return to the previous menu.

Enabling Subtitle Language Selection on Digital TV Channels

1. Press «» on the remote control, select **TV Settings** → **Advanced Settings** → **Subtitles** → **1st Digital Subtitle Language**, and press the **Right** button.
2. Press «**Up/Down**» to select the subtitle language, and press «**OK**» to confirm.
3. Press «**Up/Down**» to select the second subtitle language, and press «**OK**» to confirm.
4. Press «» to return to the previous menu.

Selecting Subtitle Type on Digital TV Channels

1. Press «**≡**» on the remote control, select **TV Settings → Advanced Settings → Subtitles → Subtitle Type**, and press «**OK**».
2. Press «**Up/Down**» to select the subtitle type, and press «**OK**» to confirm. You can select the **Hard of Hearing** option to display subtitles in the selected language for viewers with hearing impairments.
3. Press «**←**» to return to the previous menu.

Using Teletext

Selecting the display language for the decoding page:

1. Press «**≡**» on the remote control, select **TV Settings → Advanced Settings → Teletext → Decoding Page Language**, and press «**OK**».
2. Press «**Up/Down**», to select the language in which the teletext will be displayed, and press «**OK**» to confirm.
3. Press the «**←**» button to return to the previous menu.

Digital Teletext Language

Depending on the broadcaster, digital TV channels may offer several Teletext pages in different languages. This function lets you select a language from the list as the primary language, which is then linked to different Teletext start pages.

1. Press «**≡**» on the remote control, select **TV Settings → Advanced Settings → Teletext → Digital Teletext Language**, and press «**OK**».
2. Press «**Up/Down**», to select the language, and press «**OK**» to confirm.
3. Press the «**←**» button to return to the previous menu.

Screen Reader

Enables voice narration of the interface. Activate it under **Settings → Accessibility → TalkBack** (screen reader).

Text Enlargement

Increase the font size under **Settings → Accessibility → Font Size**.

Audio Description

Enable audio description for movies and shows (if supported by the content) in **Settings → Accessibility → Audio Description**.

Note: Some functions can also be enabled using the corresponding buttons on the remote control (see the «Remote Control» section).

Using Quick Start

Enabling this feature allows the TV to exit standby mode faster, but it also increases power consumption in standby mode.

1. Press «» the remote control, select **Settings → System → Power and Energy → Quick Start**, and press the **Right** button.
2. Select the **Quick Start** option and press «**OK**» to toggle it on or off.
3. Press «» to return to the previous menu.

Wake on LAN

This feature allows you to turn on the TV from standby mode over your home network. To use this feature, make sure that:

1. Your TV is connected to your home network.
2. The device you will use to turn on the TV is connected to the same home network.
3. An app that supports Wake on LAN is installed on that device.
4. Network standby is enabled in the **Network & Internet** menu.
5. In Google TV mode, press «» on the remote control, select **Settings → Network & Internet → Network Standby**, and press «**OK**» to enable it.

While the TV is in standby mode, you can use the app to remotely wake it from standby.

Notes

- This feature is only available in Google TV mode.
- This feature is not available on all models.
- This feature will be disabled if you press and hold the «» button on the remote control for a few seconds and confirm turning off the TV.
- Before using Wake on LAN, make sure **Quick Start** is enabled.

External Device Control (CEC)

Use this feature to detect and control devices that support the CEC protocol.

Enabling or Disabling CEC

1. Press «» on the remote control, select **Settings → Channels & Inputs → Inputs → External Device Control**, and press the **Right** button.
2. Select the **HDMI Control** option and press «**OK**» to toggle it on or off.
3. Press «» to return to the previous menu.

Syncing TV Power-On with Other Devices

This setting allows the TV to turn on automatically when a connected CEC device (such as a DVD player or game console) is turned on. Press «**OK**» to enable this feature.

Device Standby Sync

Allows all CEC devices to automatically enter standby mode when the TV is turned off using the remote control. Press «**OK**» to enable this feature.

Note: CEC functions depend on the connected devices, and some devices may not work correctly when connected to this TV. For more information, refer to the connected device's user manual.

Electronic Program Guide (EPG)

EPG is an on-screen guide that displays scheduled digital TV programs. You can navigate, select, and preview programs.

1. Press «» on the remote control.

In the menu that appears, you can view information about the current or next program. Navigate between different programs using the «**Up/Down/Left/Right**» buttons on the remote control.

2. To view the EPG, use the corresponding buttons, which are indicated on the left side of the screen.

- **Filter**

Navigate using the «**Up/Down**» buttons on the remote control.

Press «**OK**» to confirm your selection.

- **Schedule**

Press «**OK**», then select **Reminder** or **Scheduled Recording** to set the channel, date, and reminder time. Follow the on-screen prompts to complete the settings.

3. Press «» to return to the previous menu.

Shortcut Button

You can set up quick access to any app or setting using the «» button.

Live TV

Live TV is a function for watching live over-the-air broadcasts. It is activated by pressing the «**Live TV**» button on the remote control and lets you jump straight to the current program from an antenna, cable, or satellite source.

User Profile Support

Google TV allows you to create multiple user profiles for personalized content. Each profile is linked to a Google Account and stores individual preferences, watchlists, and viewing history.

Creating a Profile

1. Press the **Google Assistant** button on the remote control, or select the profile icon in the top-right corner of the home screen.
2. Select Add Profile and sign in to a Google Account.
3. Set up profile details, such as the name and avatar.

Creating a Child Profile

In the **Add Profile** menu, select **Create Child Profile**.

1. Set age restrictions and select allowed apps (such as YouTube Kids).
2. Set up a PIN for parental controls via **Settings** → **Accounts & Sign-in** → **Parental Controls**.

Switching Profiles

On the home screen, select the profile icon and choose the desired profile.

Notes

- An internet connection is recommended for optimal performance.
- Some apps may not support multi-user mode.

Controlling Smart Home Devices via Google TV

A TV running Google TV can serve as a hub for controlling smart home devices that support Google Home.

Setting Up Google Home

1. Make sure the TV is connected to Wi-Fi and linked to your Google Account.
2. Open the Google Home app on your smartphone, or use Google Assistant on the TV.
3. Add smart home devices (lights, outlets, cameras, etc.) via **Settings → Devices & Services → Add Device**.

Controlling Devices

- Use voice commands via **Google Assistant**, such as: «Turn on the living room lights» or «Show the camera on screen.»
- Control devices through the Google TV interface, in the **Devices** section.

Game Mode

1. Connect the console to an HDMI port that supports HDMI 2.1 (see port specifications in the «Specifications» section).
2. Enable Game Mode: **Settings** → **Picture** → **Advanced Settings** → **Game** → **Game Mode**.
3. To set up the game menu, assign the **Game Optimizer** function to the «» shortcut button and press it.

Note: VRR and 4K@120Hz require an Ultra High Speed HDMI cable and a compatible game console.

Cloud Gaming Services

- Install apps such as **GeForce Now** or **Xbox Cloud Gaming** from the Google Play Store.
- Connect a compatible gamepad via Bluetooth for game streaming.

Additional Game Mode Settings

- **ALLM** — Auto Low Latency Mode. The TV can automatically enable or disable low-latency game mode depending on the signal content. Typically used with game consoles.
- **Low Latency** — Low-latency game mode.
- **MEMC** — Motion Estimation and Motion Compensation in game mode, balancing low display latency with image smoothness.
- **DLG** — Improves image smoothness, especially with fast-moving content such as video games or video playback.
- **VRR** — Variable Refresh Rate. Dynamically syncs the refresh rate with the frame rate of the graphics source.
- **Crosshair** — Turns the crosshair overlay on or off.
- **Crosshair Type** — Selects the crosshair style.
- **FPS** — Frame rate.
- **Contrast Type** — Preset picture contrast modes.
- **Backlight** — Screen brightness.
- **Low Blue Light** — Electronic device screens emit blue light, which can cause eye strain and, over time, contribute to vision problems.
- **Display Mode** — Selects the image aspect ratio.
- **Sharpness** — Image sharpness.

Settings

Network & Internet

1. Use the navigation buttons to move between options.
2. Press «OK» to confirm your network selection.

About

This menu displays information about the device.

Date & Time

In this menu, you can set the time manually or automatically, select the time zone, and choose the time format.

Power

Power Modes

Configures the device's power consumption in standby mode. Includes the following options:

- **Low Power** — Disables the internet connection when the TV is not in use. Important updates and features remain available.
- **Optimized Power** — When the TV is not in use, it enters standby mode. It remains connected to the internet and can be woken remotely via **Google Assistant** or **Google Cast**.
- **High Power** — The device stays online at all times, with network features available even when the TV is not in use. In addition to the other functions, this mode enables automation setup and integration with the **Google Home** app.

Sleep Timer

Configures automatic shutdown of the device.

- **On Inactivity** — Automatically turns off the TV if it is not used for a certain period.
- **While Watching** — Automatically turns off the TV during use.
- **Countdown from Now** — Turns off the TV after a specified period of time. This function resets after each use.

Startup State

Configures the TV's startup screen. Two options are available: Google home screen or last used input.

Scheduled On/Off

Turns the device on and off at a set time.

- **Power-On Timer** — Sets a time for the device to turn on, with a one-time or recurring on/off option.
- **Sleep Timer (Off)** — Sets a time for the device to turn off, with a one-time or recurring on/off option.
- **Off Timer** — Turns off the TV a specified period of time after it is turned on. This function repeats until manually disabled.

Additional Settings

- Turn the standby power indicator on or off.
- Set indicator brightness — High/Medium/Low.

Picture

Picture mode

1. Press the navigation button to select an option.
2. Press «OK» to enter the submenu.

Backlight / Brightness / Contrast / Saturation / Tint / Sharpness

Use the navigation buttons to select and adjust the parameter.

Advanced Settings

1. Press the navigation button to select an option.
2. Press «OK» to enter the submenu.

Reset to Default Settings

Press to reset settings to factory defaults.

Noise Reduction

Removes ripple-type interference to clean up the picture.

SDR to HDR

Simulates an HDR picture. The device analyzes the contrast and brightness of the SDR signal and expands the range to approximate HDR quality.

Adaptive Brightness Control

Analyzes contrast based on the content histogram to produce deeper blacks and brighter whites.

Local Contrast Control

Divides each frame into small zones and automatically adjusts contrast for each zone.

DI Film Mode

A function for 3:2 or 2:2 cadence video content at 24 frames per second that eliminates artifacts such as interlacing or judder. Set **DI Film Mode** to «Auto» or turn it off by selecting «Off». This item is unavailable when Game Mode or PC Mode is enabled.

Cool Blue Stretch

Shifts the white balance at mid-to-high gray levels toward a cooler color temperature.

MEMC (Motion Estimation Motion Compensation)

Optimizes video to improve picture quality and clarity. Set to «Low,» «Medium,» or «High» to enable MEMC.

HDMI RGB Range

Configures the color range for HDMI. Limited (16–235) or Full (0–255). Set your preferred HDMI RGB range. This item is unavailable unless HDMI is selected as the input source.

Low Blue Light

Electronic device screens emit blue light, which can cause eye strain and, over time, contribute to vision problems.

Color Tuning

Saturation, hue, and brightness can be adjusted for red, green, blue, cyan, magenta, yellow, and skin tone, for a more vivid or natural picture.

11-Point White Balance

The white balance function calibrates the TV's color temperature across grayscale levels. Grayscale uniformity can be improved visually or through measurement.

Reset

Resets all picture settings to factory defaults.

Offset

Offsets the RGB color channels.

Sound

Sound style

Preset sound modes for different use cases.

Balance / Bass / Treble

Use the navigation buttons to select and adjust the parameter.

Surround Sound

Adds a surround sound effect.

Press «OK» to turn the function on or off.

Equalizer Settings

Adjusts individual frequency bands.

Speakers

1. Press the navigation button to select an option.
2. Press «OK» to activate the function.

Audio Delay

Delays audio output through the speakers.

Auto Volume Control

Automatically adjusts the volume level.
Press «OK» to turn the function on or off.

Downmix

1. Press the navigation button to select an option.
2. Press «OK» to enter the submenu.

Dialogue Enhancement

1. Press the navigation button to select an option.
2. Press «OK» to enter the submenu.

eARC

Transmits audio via HDMI from the TV to an audio device.

Digital Output

Selects the audio output device.

SPDIF Delay

Delays audio output through the optical/coaxial connector.

Downmix Mode

Selects the number of audio output channels.

Dolby Audio Processing

Processes audio using Dolby technologies.

Reset to Default Settings

Press to reset settings to factory defaults.

Storage

Internal Shared Storage

1. Press the navigation button to select an option.
2. Press «OK» to enter the submenu.

Removable Media

1. Press the navigation button to select an option.
2. Press «OK» to enter the submenu.

Demo Mode

1. Press the navigation button to select an option.
2. Press «OK» to enter activate.

Google Assistant

In this menu, you can configure voice control, view permissions, enable/disable personal results, set an app filter, and enable SafeSearch.

1. Press the navigation button to select an option.
2. Press «OK» to enter activate.

Location

Geolocation

1. Press the navigation button to select an option.
2. Press «OK» to enter activate.

Always Scan for Networks

1. Press the navigation button to select an option.
2. Press «OK» to enter activate.

Bluetooth

1. Press and hold «←» and tilt the volume rocker to the «—» position.
2. When the indicator lights up, release the buttons.
3. Press the «←» button to exit.

Data Security

- Manage app permissions in **Settings → Apps → App Permissions**.
- Use a strong password for your Google Account and enable two-factor authentication.
- To protect children, set up parental controls in **Settings → Accounts & Sign-in → Parental Controls**.

Firmware Update

Google TV Update

- The TV automatically checks for updates when connected to the internet.
- To check manually: go to **Settings → System → About → System Update**. Press **Check for Updates**.
- Make sure the TV is connected to a stable Wi-Fi or Ethernet network.

Troubleshooting Guide

If you experience any issues with the TV, try turning it off and on again. You can also use the table below to resolve common problems. If the issue persists, please contact technical support or an authorized service center.

Possible Issue	Possible Solution
The TV does not turn on	Check if the power cord is correctly plugged into the electrical outlet
	Check if there is voltage in the electrical outlet
	Check the operation of the remote control
	Unplug the power cord from the TV for a few minutes and plug it back in
No TV signal reception	Check the TV settings for correctness
	Ensure the antenna is connected correctly and the antenna cable is not damaged
	Repeat the TV channel search
	Ensure the antenna connector is tightly plugged into the TV
No picture	Verify that external signal sources are correctly connected
	Ensure the cable connecting the external device is not damaged
	Ensure the correct input source is selected
Incorrect color reproduction	Check if the correct color system is selected in the TV settings
	Check if the picture settings are correct
	The signal from the broadcaster may be distorted. Try switching to another channel
The picture received via HDMI cable flickers or has stripes	Check the signal source settings
	The signal source is located too far from the TV
The TV does not output the required frame rate via HDMI connection	Ensure you are using the correct HDMI port with the required refresh rate, go to HDMI settings and select the required HDMI version
	Check the settings on the connected device
Dead pixels appear on the screen	The TV uses a high-definition LCD panel. Modern panel manufacturing technology allows for the presence of individual small dark or colored dots (pixels) on the image, which do not degrade the overall perception of the picture. All panels are tested under production conditions and meet the standard requirements for this group of products
No sound	Check that the sound is not muted using the «  » button
	Check that the volume is not set to the minimum; adjust the volume rocker
	Check if the correct audio output device is selected
	Check if the sound settings are correct

Possible Issue	Possible Solution
No sound when outputting to external sources	Ensure the audio cable is connected correctly and is not damaged
	Ensure the correct source is selected on your TV
The TV does not respond to the remote control	Replace the remote control batteries with new ones
	Point the remote control transmitter directly at the remote control receiver (sensor) on the front panel of the TV
	Ensure there are no obstacles (furniture, etc.) between the remote control and the TV that would block the signal
	Ensure the distance between the remote control and the TV does not exceed 5 meters (or 10 meters if the remote is connected via Bluetooth), and the angle of deviation from the imaginary perpendicular is no more than 20°
USB interface does not work	Disconnect the USB device from the TV's USB interface. Reconnect it, carefully aligning the connectors
	Ensure the USB device is supported by the TV. Refer to the «Connecting Devices» section of this user manual for more information
Some files on an external USB device cannot be read	Ensure the TV supports reading this type of file. Refer to the «Specifications» section of this user manual for more information
Crackling or humming when watching or turning off the TV	This is a normal phenomenon caused by the thermal contraction of plastic due to changes in temperature and humidity. The TV may emit a low hum, buzzing, or quiet noise due to the specifics of the electrical circuits' operation. This is not considered a defect
Slow response to control commands	The TV processor requires some time to process each command. Allow sufficient pauses between different commands for stable operation. This does not affect TV performance and is not a defect
Online video playback is choppy (lags)	Stop playback, wait for 2–3 minutes, then resume viewing
	Your internet tariff plan may not provide sufficient speed. The recommended speed is at least 10 Mbit/s
	Additional wireless devices connected to the home router may reduce performance
	Check the router's parameters and settings. Replace it if it is faulty

Possible Issue	Possible Solution
One of the installed third-party programs does not work (or works without sound, or has other issues)	The problem is likely related to the program (app) itself. Try launching it later or contact the support service of the company that created it. The manufacturer is not responsible for the operation of third-party applications
Wireless mouse does not work (not responding)	Install batteries in the wireless mouse. Ensure there are no obstacles between the wireless mouse and its transceiver (connected to the TV's USB port), and that there is a clear line of sight. Replace the wireless mouse if necessary
Controls are unstable	Unplug the TV from the outlet, wait a minute, and turn it on again
	Reset the settings to factory defaults (see «Reset to Default Settings» section)
	Always exit open applications using the «  » button
Issue with online services (Smart TV) when using a wired connection (LAN)	Ensure the network cable is not damaged and is connected correctly
	Check if you can access the internet from another device
	The service may be temporarily unavailable to all users
	Check the network settings on your TV
Issue with online services (Smart TV) when using a wireless connection	Check that the time and region settings are correct
	Check if you can access the internet from another device
	The service may be temporarily unavailable to all users
	Check the network settings on your TV
	The issue may be with the Wi-Fi signal source. Check the router
The application does not launch or gives an error	Check that the time and region settings are correct
	Check for application updates in the Google Play Store
Bluetooth device does not connect	Clear the application cache in Settings → Apps → [App Name] → Clear cache . Reinstall the application if the problem persists
	Ensure the device is in pairing mode. Go to Settings → Remotes & Accessories → Add device and try again
The TV does not update the firmware	Check the battery level of the device being connected
	Check your internet connection
	Go to Settings → System → System update and try again

Note: If issues persist, perform a reset: **Settings → System → About → Reset → Factory Reset**. Back up any important data before resetting.

Display Information

An LCD TV is a high-tech product. The TV screen contains several million thin-film transistors, which provide a perfect and vivid picture. Occasionally, a few inactive pixels may appear on the TV screen in the form of fixed blue, green, red, black, or white dots. Please note that this does not affect the TV's performance and is not considered a defect. All LCD panels comply with Class II according to ISO 13406-2.

The ISO 13406-2 standard distinguishes 4 types of defective pixels

- **Type 1** — constantly lit pixels (white).
- **Type 2** — constantly unlit pixels (black).
- **Type 3** — pixels with other defects, including sub-pixel and RGB cell defects that make up the pixel. This means constantly lit red, green, and blue pixels.
- **Cluster** (group of defective pixels) — several defective pixels within a 5 × 5 pixel square.

Permissible number of defective pixels per million pixels					
Class	Type 1	Type 2	Type 3	Number of clusters containing more than 1 defect of type 1 or 2	Number of clusters containing more than 1 defect of type 3
II	2	2	5	0	2

The ISO 13406-2 standard defines 4 classes of LCD quality depending on the number of defective pixels. Most LCD TVs and displays from leading global manufacturers comply with the Class II limits.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The installation and mounting conditions for the device are described in the «TV Installation» section of this user manual.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- To ensure correct transportation of the device, the following requirements must be observed:
 - Remove any internal accessories from the device, if present, and pack them separately.
 - Ensure the device is properly packed to maintain its functionality and appearance (large appliances must be wrapped in polyethylene or bubble wrap, with corrugated cardboard padding in critical areas).
 - Secure the device firmly with straps to prevent any movement inside the transport vehicle.
 - To completely eliminate exposure to the environment, use only enclosed transport.
 - Exercise extreme caution when handling the packaging during loading and unloading operations.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- Upon expiration of the service life of batteries supplied with the device, do not dispose of them with other household waste. Batteries must be disposed of in accordance with local waste recycling regulations to prevent potential environmental harm resulting from uncontrolled waste disposal.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Note: The product contains no precious metals.

Additional Information

Manufacturer: Production Unitary Enterprise «N-TV».

Republic of Belarus, 220014, Minsk, 62 Sofya Kovalevskaya Lane, Room 16.

Made in the Republic of Belarus.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 36 months

Service Life: 48 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Maintenance and Service Life

Provided that the operating rules outlined in this User Manual are followed, the service life of the television is 4 years from the date of sale through the retail network. If the date of manufacture cannot be determined, the service life is calculated from the date of manufacture of the television. During this period, the manufacturer ensures the consumer's ability to use the product for its intended purpose, as well as the production and supply of spare parts to retail and repair facilities.

You can always download the latest version of the user manual by scanning the QR code:



43UCGQ1



65UCGQ1



75UCGQ1



HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE



The production date is indicated on the packaging.

v.1

Appendix to the User Manual

Certificate of Conformity to the requirements of: TR CU 004/2011 «On The Safety of Low-voltage Equipment», TR CU 020/2011 «Electromagnetic Compatibility of Technical Products».							
The television complies with the requirements of technical specifications TU RB 100085149.176-2004.							
In terms of operational safety, the television meets the Class II protection requirements according to GOST IEC 60065-2013.							
The quality management system for the design, production, and maintenance of consumer radio-electronic equipment, household electrical appliances, and information technology equipment complies with the requirements of STB ISO 9001-2015.							
The product complies with the requirements of the Eurasian Economic Union Technical Regulation TR EAEU 037/2016 «On the Limitation of the Use of Hazardous Substances in Electrical and Radio Electronics Products».							
Model	Net Weight (with stand)	Net Weight (without stand)	Gross Weight	Package Size	Specific power consumption of operating mode	Power consumption in standby mode	Power consumption in off mode
43UCGQ1	5.9 kg	5.8 kg	7.9 kg	1055 × 100 × 635 mm	0.015 W/cm ²	0.5 W	0 W
65UCGQ1	17.6 kg	17.3 kg	23.8 kg	1600 × 143 × 977 mm	0.019 W/cm ²		
75UCGQ1	24 kg	23.5 kg	32.4 kg	1840 × 142 × 1127 mm	0.018 W/cm ²		

