

User Manual

 
LED TV

43FCG1, 50UCG1, 50UCG2


43FCG1W, 50UCG1W, 50UCG2W

DEXP

Quick Start Guide

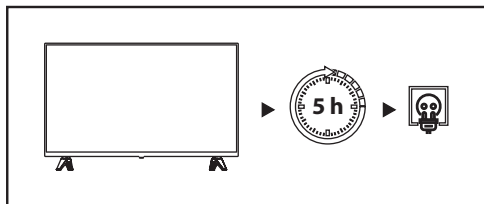

 
Let the TV sit indoors for at least 5 hours after transport to prevent damage caused by temperature changes.

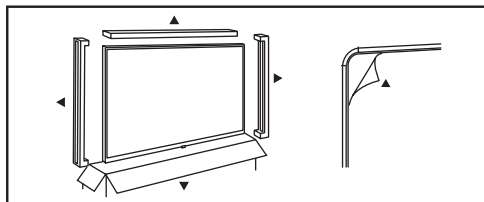

Remove all shipping packaging (cardboard, foam, plastic bags, protective film from the TV housing) and gently wipe the housing with a dry, soft cloth to remove dust.

CAUTION!

 
Do not remove the protective film from the screen panel until wall or stand installation is complete, if applicable.

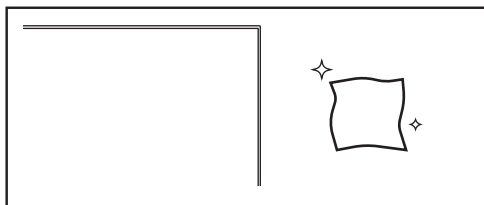

Use only a dry, soft, lint-free cloth to clean the screen.


CAUTION!

 Do not use liquids, sprays, or abrasive materials.

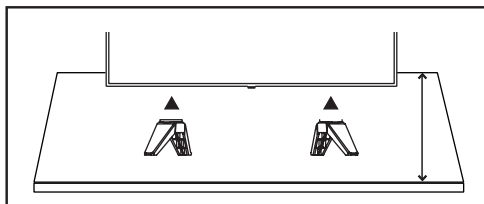


Installing on a Stand

 Attach the included legs (or stand) following the instructions. Use a screwdriver to secure them firmly. Place the TV on a flat, stable, solid surface capable of supporting its weight. Make sure the stand does not extend beyond the edge of the surface.

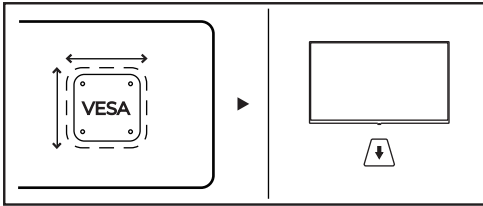


Wall Mounting

 
Use only a compatible VESA mount rated for your TV's weight and dimensions. Before installing the bracket, make sure the wall can support the TV's weight.

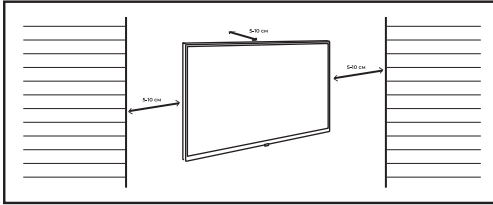

 Regardless of the installation method, leave at least 5–10 cm of clearance behind and on the sides of the TV for airflow and cooling. Do not install the TV in an enclosed, unventilated recess, near heat sources (radiators, fireplaces), or in direct sunlight.

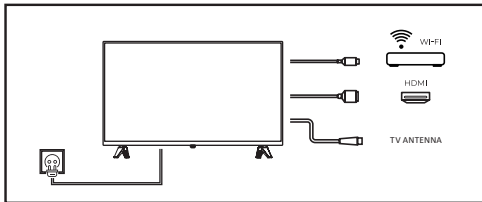

 Before connecting, make sure your electrical network parameters match the TV's power specifications. Connect the power cord and, if needed, the antenna, HDMI devices (set-top box, console), or a Wi-Fi adapter.

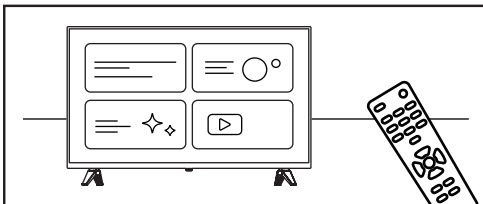

Turn on the TV using the remote control. Complete the initial setup by following the on-screen instructions: select a language, connect to Wi-Fi, scan for channels (for antenna), and sign in to your account.

Contents

Intended Use.....	6
Legal Notice	6
Safety Precautions	7
Operating Conditions	9
Specifications.....	10
Package Contents.....	11
Installing the TV	12
Ventilation.....	12
Clearance for Stand Mounting.....	14
Wall Mounting (Optional).....	15
Clearance for Wall Mounting	16
TV Diagram	17
Front Panel	17
Side Panel	18
Connecting Devices.....	19
Connecting the Antenna Cable	19
HDMI	19
Optical Audio Cable (TOSLINK).....	19
3.5 mm Audio Jack (Mini-Jack).....	19
Coaxial Cable	19
USB	19
Bluetooth	19
LAN (Ethernet) or Wi-Fi.....	20
Mini AV.....	20
DLNA.....	20
CI Card	20
Remote Control.....	21
Secondary Remote Control (for models 50UCG1, 50UCG2, 50UCG1W, 50UCG2W) ..	22
Installing Batteries in the Remote Control.....	23
Turning On the TV	23
Initial Setup.....	24
Connecting the Remote Control	24
Using the TV.....	24
Inputs	24
Volume Control	24
Automatic Channel Scan	25
Common Interface	25
Accessibility.....	25
Using Subtitles.....	25

Using Teletext..... 26

Using Quick Start..... 27

Wake on LAN..... 27

External Device Control (CEC) 27

Electronic Program Guide (EPG)..... 28

Shortcut Button 28

Live TV 28

User Profile Support..... 29

Controlling Smart Home Devices via Google TV 29

Game Mode (available for models 50UCG1, 50UCG2, 50UCG1W, and 50UCG2W) .30

Settings..... 31

Network & Internet..... 31

About..... 31

Date & Time 31

Power 31

Picture 32

Sound 33

Storage 34

Demo Mode 34

Google Assistant 34

Location..... 34

Bluetooth 34

Data Security..... 34

Firmware Update 34

"Find My Remote" Function 35

Troubleshooting Guide..... 36

Screen Information 39

**Rules and Conditions for Installation, Storage, Transportation, Sale
(Distribution), and Disposal..... 40**

Warranty Information..... 41

Additional Information 41

Maintenance and Service Life 41

Appendix to the User Manual 42

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

This television is an electronic device designed to receive and display video and audio transmitted via wireless or wired connections (including television broadcasts or signals from video playback devices such as DVD/Blu-ray players, game consoles, etc.).

Due to our continuous efforts to improve our products, the technical specifications, appearance, and descriptions of certain features may differ from the information provided in this User Manual. In the event of any discrepancy between this User Manual and the actual product functions, the actual functions shall prevail.

Legal Notice

- Any content and services accessed through this device, which are intended for personal, non-commercial use, are the property of their respective third-party owners and are protected by applicable copyright, patent, trademark, and other intellectual property laws. No part of such content or services may be modified, duplicated, published, uploaded, distributed, translated, sold, or used to create derivative works without the prior written consent of the content owner or service provider.
- You acknowledge and agree that you assume all risks associated with the use of this device, including any risks related to the quality, performance, and accuracy of any content and services accessed through it. To the fullest extent permitted by applicable law, this device and all third-party content and services are provided without warranties of any kind, either express or implied.
- Any content and services provided in conjunction with this device remain the property of their respective third-party providers. Therefore, the Manufacturer makes no representations or warranties regarding their quality, timeliness, legality, or completeness, and assumes no liability for any legal consequences or damages arising from their use.
- The Manufacturer reserves the right to restrict or limit access to certain content or services. As content and services are transmitted via third-party networks and transmission facilities, the Manufacturer does not provide customer support for such third-party content and assumes no related service obligations.

Safety Precautions

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE FRONT OR BACK COVER OF THE TV. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		

- The lightning flash with arrowhead symbol within a triangle alerts the user to the presence of dangerous voltage inside the device that may be sufficient to constitute a risk of electric shock. Do not remove the cover marked with this symbol.
- The exclamation point within a triangle alerts the user to the presence of important operating and maintenance (servicing) instructions.
- Do not place the TV in locations exposed to moisture or rain, to avoid the risk of fire or electric shock. Avoid splashing or dripping water on the device.
- Do not place any containers filled with liquid (vases, bottles, glasses, etc.) on the TV.
- The screen and housing may become warm during operation. This is not a malfunction.
- If the device emits smoke, an unusual noise, or an odor:
 - Immediately turn off the TV.
 - Unplug the power cord from the outlet.
 - Contact an authorized service center.
- Children and people with disabilities may not correctly assess potential risks. For this reason, children and people with disabilities should not use electrical appliances unsupervised. Batteries and other small parts pose a potential choking hazard. Such items should be stored out of reach. If choking occurs, seek medical attention immediately. Packaging materials should also be stored out of reach.
- Using headphones at high volume may cause irreversible hearing damage. Lower the volume before connecting headphones, then increase it to a comfortable level.
- This device must only be connected to a mains supply matching the specifications shown on the device's rating label.
- The power plug must always remain easily accessible, as it serves as the device's power disconnect.
- To disconnect the device from the mains, unplug the power cord by the plug. Do not pull the power cord itself to disconnect it.
- The power cord and cables must be routed so that they are not pinched or crushed by objects placed on or against them.
- If the power cord is damaged, it must be replaced by an authorized service technician or similarly qualified specialist to avoid hazards.
- The device must not be exposed to dripping or splashing water, moisture, or liquid.
- Do not install the device near water, such as in a bathroom or near a sink.

- Do not place liquid-filled containers (such as vases) on or above the device.
- Never touch the power cord with wet hands, as this may cause a short circuit or electric shock.
- To avoid fire, do not place open flame sources, such as lit candles, or heat sources, such as radiators, on or near the device.
- If the device emits smoke, an unusual odor, or a strange noise, disconnect the power cord from the mains and contact a service or repair center. Never attempt to repair the device yourself, as this may be hazardous.
- Do not attempt to open or disassemble the device, as this exposes you to dangerous voltages.
- The device's slots and openings are designed for ventilation and to ensure proper operation. To prevent overheating, these openings must not be covered in any way, such as with newspapers, tablecloths, or curtains.
- Always leave a minimum clearance of 10 cm around the device for adequate ventilation.
- Never insert any objects into the device through its openings, as they may come into contact with electrical components, which could cause electric shock or fire.
- When a thunderstorm is approaching, turn off the TV, unplug the power cord from the outlet, and disconnect the antenna from the TV.
- Always turn off the device when not in use. If the device will not be used for an extended period, unplug the power cord from the outlet.
- Disconnect the device from the outlet before cleaning. Do not use liquid or aerosol cleaning agents. Use a dry, soft cloth for cleaning.
- This product is intended for home and personal use only. Do not use this product for commercial, industrial, or other purposes.
- Do not subject the device to strong impacts, excessive temperatures, or prolonged direct sunlight.
- Keep the device away from magnetic objects, motors, and transformers.
- Do not use the device outdoors, regardless of weather conditions.

CAUTION!

Never install the TV in an unstable location. The device may fall, causing serious injury or even death. Many injuries, especially to children, can be avoided by taking simple precautions, such as:

- Use furniture or stands recommended by the TV manufacturer.
- Use only furniture that can support the weight of the TV.
- Make sure the device does not extend beyond the edge of the furniture it is placed on.
- Never place the device on tall furniture (such as cabinets or bookshelves) without securing both the furniture and the device to a suitable support.
- Do not place the device on an unstable cart or stand. Do not place the device on fabric or other materials placed between its base and the furniture. The device may fall and be damaged, or cause serious injury.
- Do not use or watch the TV while driving. This is dangerous and, in some countries, prohibited by law.
- Explain to children the danger of climbing on furniture to reach the device or remote control.
- The same precautions must be observed if the device is moved to another location.

- It is not recommended to use the device in areas where oily smoke or steam is present, as this may damage the device's materials.
- When the network function is active, the device remains in standby mode. It requires 30 minutes to reach a stable operating mode.

Note: The images in this manual are for illustrative purposes only; refer to the actual product for accurate information.

Operating Conditions

- Ambient temperature: 10 °C to 35 °C.
- Relative humidity: Up to 80 % (at 25 °C).
- Atmospheric pressure: 86 to 106 kPa (650 to 800 mmHg).
- After transportation or storage at low temperatures, allow the TV to acclimatize to room temperature for at least 5 hours before connecting it to the power supply and turning it on.

CAUTION!

- To avoid damage or injury, securely mount the device to the wall in accordance with the installation instructions provided in this manual.
- When mounting on angled surfaces, the TV panel must always be installed in a vertical position. The tilt angle between the panel and the vertical plane must not exceed 15° (this rule strictly applies to the bezel-less TV series).

Specifications

Model	43FCG1 43FCG1W	50UCG1 50UCG1W	50UCG2 50UCG2W
Trademark	DEXP		
Screen size	43"	50"	
Screen resolution	1920 × 1080	3840 × 2160	
Audio output power (W)	2 × 12		
Surround sound	Yes		
Panel technology	VA		
Backlight technology	Direct LED		
Contrast ratio	4000:1	5000:1	
Luminance	250 cd/m²	330 cd/m²	
Viewing angle	178° / 178°		
Refresh rate	60 Hz		
Ethernet port	Yes		
HDMI (version, count)	HDMI 1.4 × 3	HDMI 2.1 × 4	
USB type and count	USB 2.0 × 2		
Processor	CA55		
RAM	1.5 GB	2 GB	
Internal storage	16 GB		32 GB
Operating system	Google TV		
Power supply	220–240 V ~ 50 Hz		
Power consumption	60 W	115 W	
TV tuner	DVB-C, DVB-S, DVB-S2, DVB-T, DVB-T2		
Supported video formats	Files: H.263, VP8, VP9, TP, TS, AVI, MKV, MP4, MOV, MPEG, 3GP, FLV, VOB, H.2643GP Codecs: VP9, HEVC/H.265, MPEG-1/2, MPEG-4, SORENSON H.263, H.263, H.264, VC-1, VP8, AV1		
Supported audio formats	Files: MP3, FLAC, M4A, DD, MPEG1, MPEG2, AAC, AC3 Codecs: MPEG-1/2 LAYER 1, MPEG-1/2 LAYER 2, MPEG-1/2/2.5 LAYER 3, AC3 (DD), EAC3 (DDP), AAC-LC, FLAC		
Supported image formats	BMP, GIF, JPEG, JPG, PNG		
Wi-Fi standard	IEEE 802.11a/b/g/n/ac		
Wi-Fi frequency range (MHz)	2400–2483.5, 5150–5350, 5650–5850		

Model	43FCG1 43FCG1W	50UCG1 50UCG1W	50UCG2 50UCG2W
Wi-Fi transmitter power (dBm)	< 20		
Bluetooth standard	5.1, IEEE 802.15.1		
Bluetooth frequency range (MHz)	2402–2480		
Bluetooth transmitter power (dBm)	< 10		
Annual energy consumption	88 kWh/year	168 kWh/year	
Energy efficiency class	A	B	
Net weight	5.2 kg	8.1 kg	
Dimensions	954.3 × 71.6 × 555.7 mm	1110.8 × 67.2 × 642.3 mm	
Protection class	II		
Cord type	X		
VESA mount standard	200 × 200 mm		
Scope of application	Domestic		

Note: This product contains no precious metals.

Package Contents

- TV.
- Remote control.
- Remote control batteries (AAA):
 - 43FCG1, 43FCG1W — 2 pcs.
 - 50UCG1, 50UCG2, 50UCG2W, 50UCG1W — 4 pcs.
- Stand legs (2 pcs).
- Screw set.
- Power cord.
- User manual.

Notes

- The TV is supplied with batteries for the remote control.
- The batteries' service life is indicated on their individual packaging.
- It is recommended to replace the batteries when remote control performance declines or once their service life has expired.

Installing the TV

Before using the device, you must attach the stand or mount the TV on a wall.

CAUTION!

If the TV is not placed on a flat, stable surface, it may pose a tip-over hazard.

To avoid damage or injury, observe the following precautions:

 
- Install the TV only on flat, stable surfaces.
- Make sure the TV does not overhang the edge of the furniture it is placed on.
- Do not place the TV on tall furniture unless it is properly secured.
- Do not place the TV on fabric or other materials positioned between the furniture and the TV.
- Do not install the TV in locations subject to mechanical vibration.
- Do not install the TV in locations where insects could enter it.
- Do not install the TV directly opposite an air conditioner, as moisture may condense on the inner screen panel and cause damage.
- Do not install the TV in areas with strong magnetic fields, as this may interfere with its operation, and electromagnetic waves could cause it to malfunction.
- Explain to children the danger of climbing on furniture on which the TV is installed.

Ventilation


- Make sure sufficient clearance is left on all sides of the TV, as shown in the diagrams below.
- Do not block the ventilation openings or insert any objects into the housing.
- Do not place the device in an enclosed space, such as a built-in cabinet. This will restrict proper ventilation and cause the TV to malfunction.

Assembling the Stand

1. Before attaching or removing the stand, make sure the TV is turned off.
2. Place the TV screen-down on a soft surface to prevent damage.
3. Remove the stand legs from the packaging and insert them into the slots on the bottom of the TV.
4. Secure the stand legs using the 4 included screws.
5. To detach the stand legs from the TV, repeat steps 3 and 4 in reverse order.

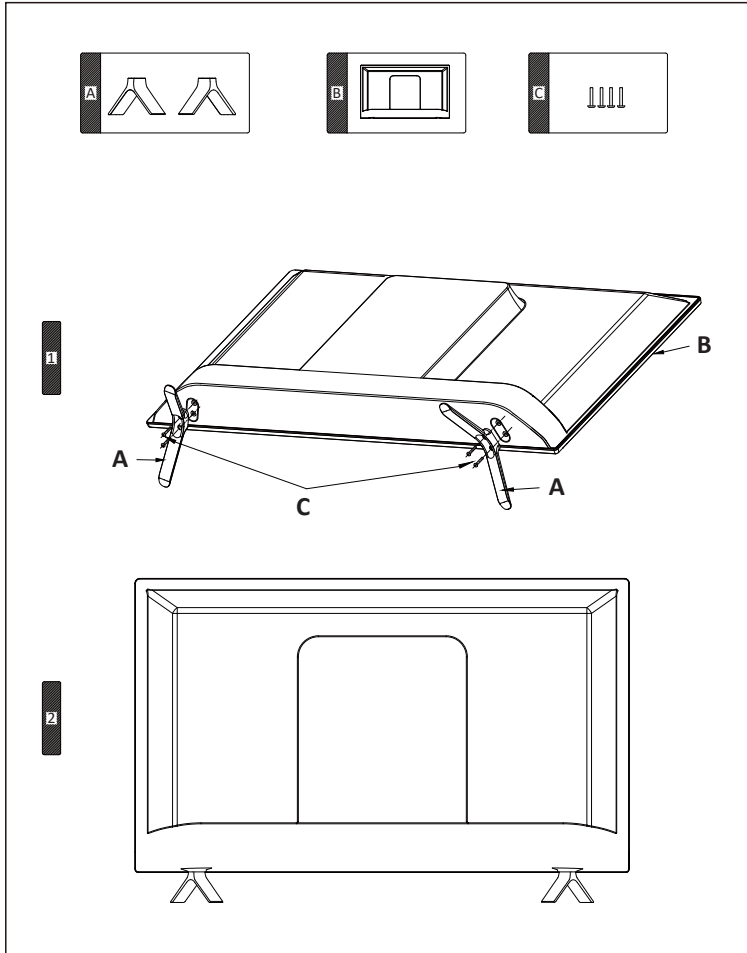


Clearance for Stand Mounting

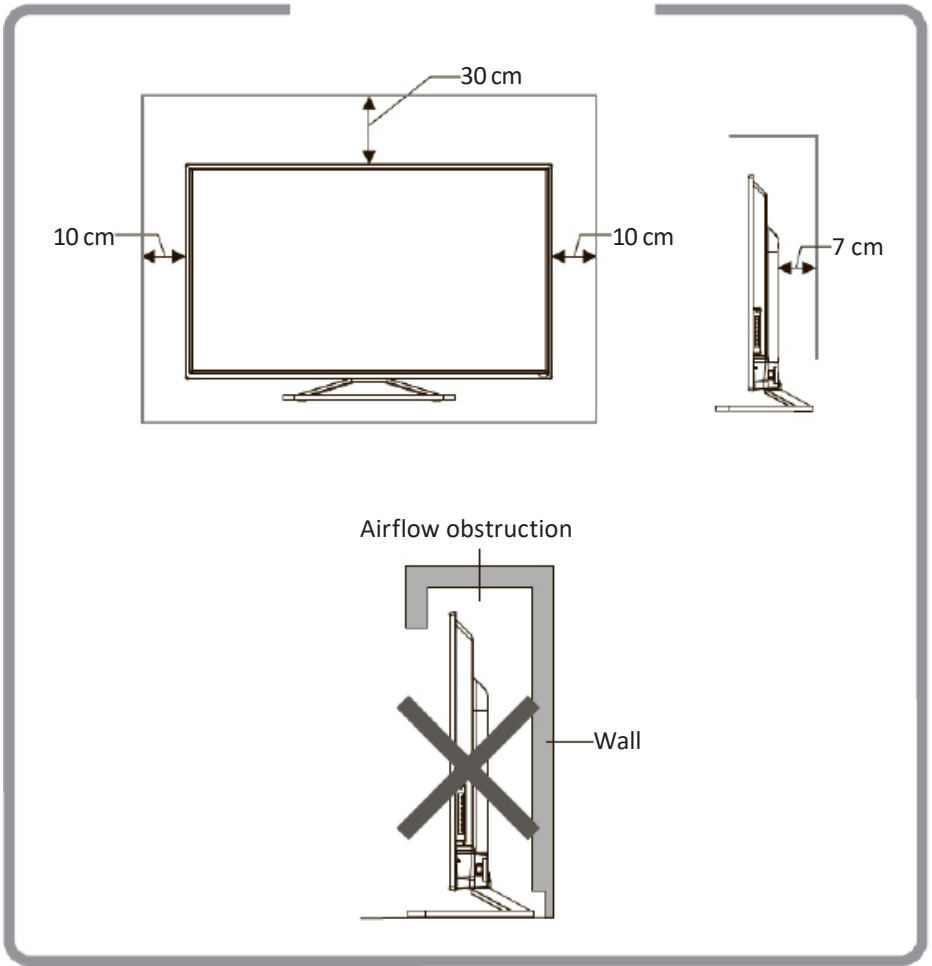 

Wall Mounting (Optional)

 The TV can be mounted on a wall using a dedicated wall bracket (not included). The standard stand must be removed before wall mounting.

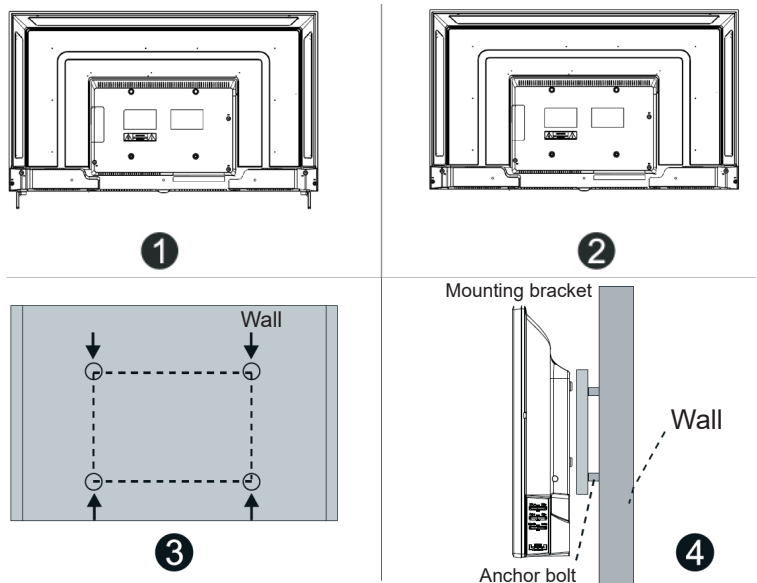


- 1. Place the TV screen-down on a soft surface to prevent damage.
- 2. Using a screwdriver, remove the screws and detach the standard stand from the bottom of the TV (1).
- 3. Mark the screw hole spacing in pencil according to the bracket's dimensions (2, 3).
- 4. Drill the holes in the wall and insert 4 anchor bolts for mounting (4).
- 5. Tighten the screws on the back of the TV to secure the bracket, then hang the assembly on the wall.

Wall Mount Specification


Wall mount hole pattern (mm)	200 × 200
Wall mount bolt size	M6

Notes

 
- The diagram above is provided for reference only.
- Use a bracket that conforms to the VESA standard for mounting.

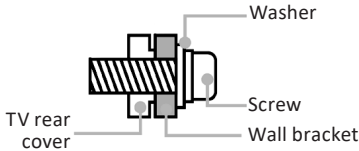

Clearance for Wall Mounting

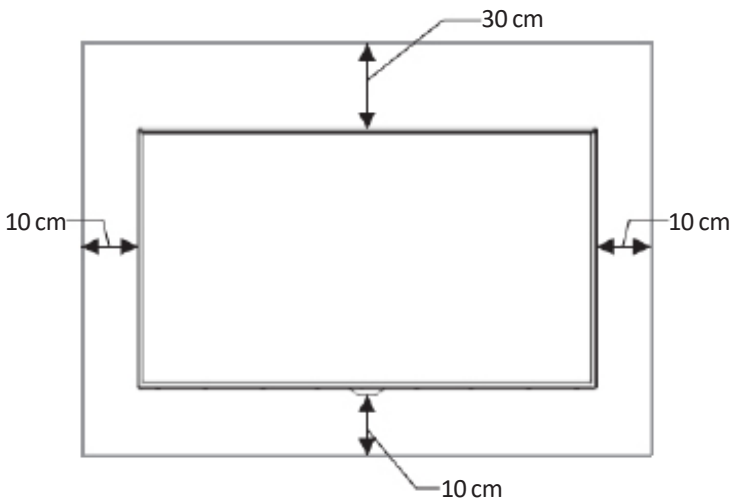 


Airflow obstruction

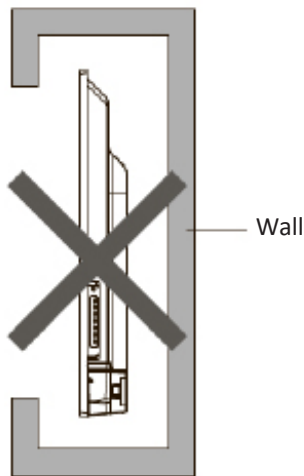 

TV Diagram

 Front Panel

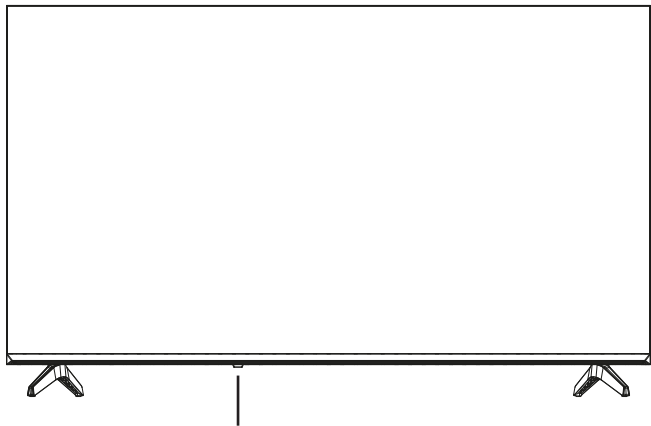

Remote sensor / Power indicator


Name	Description
Remote sensor	Receives signals from the remote control. Do not place anything near the sensor, as this may interfere with its operation
Power indicator	Glows red in standby mode
Power button	Press the power button to turn on the device. Press and hold the power button to turn off the device

Notes


- Images are provided for reference only.
- When the TV is powered on, it takes a few seconds to boot up the program. Do not turn off the TV immediately, as this may cause malfunctions.
- The actual appearance of the power indicator in operating/standby mode may differ from the description in this manual.

Side Panel

 43FCG1, 43FCG1W

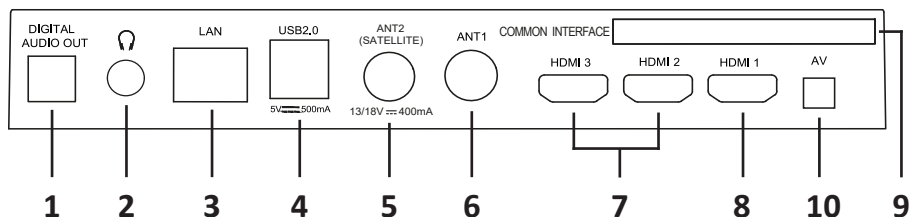

50UCG1, 50UCG2, 50UCG1W, 50UCG2W

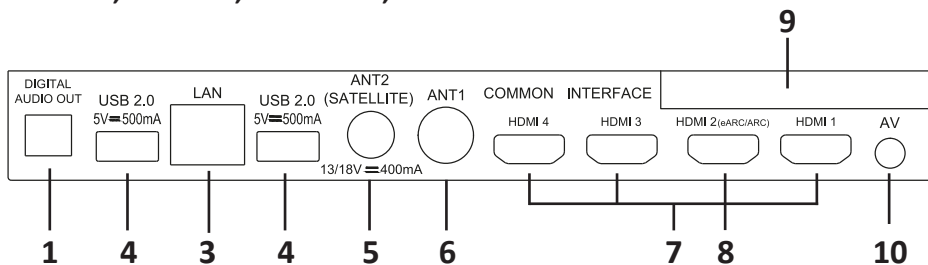 

1. DIGITAL AUDIO OUT.
2. 3.5 mm audio jack.
3. LAN port.
4. USB port.
5. Satellite antenna connector.
6. Antenna connector.
7. HDMI input.
8. HDMI input (eARC/ARC).
9. CAM module slot.
10. AV cable connector.

- Check the position and type of each connector before making any connection. A loose connection may cause picture or color issues. Make sure all connections are secure and properly seated. Not all audio and video equipment can be connected to the TV. Please refer to your device's manual for compatibility and connection information.
- Before connecting external equipment, unplug the power cord from the outlet to avoid electric shock.

CAUTION! The actual appearance of the rear panel may differ from that shown in this manual.

Connecting Devices

Connecting the Antenna Cable

You can connect an external antenna using the corresponding connector.

1. Use the ANT2 connector to connect a satellite antenna.
2. Use the ANT1 connector to connect a standard antenna.
3. After connecting, press the "Source" button on the remote and select **Antenna** or **Satellite**, depending on which cable is connected.

HDMI

Connect an HDMI cable to the ARC (Audio Return Channel) port on the TV and on the audio system (receiver, soundbar). Used for transmitting high-quality audio and video, as well as controlling the audio device from the TV.

HDMI connectors vary in resolution, refresh rate, and supported features:

- eARC — outputs audio to the connected device via HDMI.
- CEC — allows the TV and connected device to be controlled with a single remote.

Optical Audio Cable (TOSLINK)

Connect the optical cable to the TV and the audio system (home theater, soundbar). Transmits digital audio (Dolby Digital, DTS), but does not support newer formats such as Dolby Atmos.

3.5 mm Audio Jack (Mini-Jack)

Connect a cable from the TV to speakers, headphones, or a portable sound system. Provides a simple way to connect headphones or small speakers without digital interfaces.

Coaxial Cable

Used for receiving terrestrial or cable TV broadcasts (analog or digital DVB-T2). Connect the antenna cable to the TV via the RF input.

USB

Used for playing media files or connecting peripherals (flash drives, external hard drives, or USB adapters such as Wi-Fi or Bluetooth dongles).

Bluetooth

You can connect various devices to the TV, such as headphones, speakers, a mouse, a keyboard, a gamepad, etc.

If the device you are connecting has a USB receiver (such as a keyboard or mouse), first plug the receiver into the TV's USB port, then proceed with pairing the devices.

If the device does not have a USB receiver, put it into pairing mode (refer to the device's user manual for instructions on how to do this) and go to **Settings → Remotes & Accessories → Add Device**.

LAN (Ethernet) or Wi-Fi

Connect the TV to your router via cable or Wi-Fi to enable Smart TV functionality. Provides internet access, streaming services (Netflix, YouTube), and software updates.

Mini AV

A compact version of an analog audio/video connector for connecting older devices such as DVD players, game consoles, or camcorders.

DLNA

You can securely share media content between different devices on your home network. The DLNA standard allows the TV to play video, audio, and photo content stored on other devices on the network.

First, set up the local network on the device you want to stream content from (refer to that device's user manual for instructions on how to do this).

To view this content on the TV, you will need to use a third-party media player that supports streaming.

CI Card

 
If you use pay TV with encrypted channels, insert the CI card provided by your service provider into this slot. For more information, refer to the documentation supplied with your CI card.

CAUTION!


- Always turn off the TV before inserting or removing the CI card. Otherwise, the TV or CI module may be damaged.
- Insert the CI or CI+ module into the slot, making sure it is oriented correctly.
- Before inserting or removing the CAM module, make sure the TV is turned off. Then insert the CI+ card into the CAM module according to the service provider's instructions. CI+ is not supported in some countries and regions; consult your service provider.

Once the TV is turned on, the CI/CI+ module will initialize. This may take some time. Once initialization is complete, encrypted channels will become available. If this does not happen, contact your service provider to confirm that encrypted channels are available to you.

To remove the module, carefully pull it out of the slot.

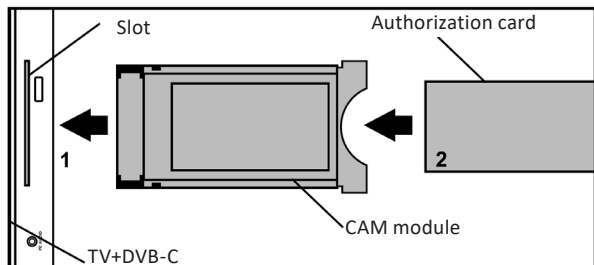


Remote Control

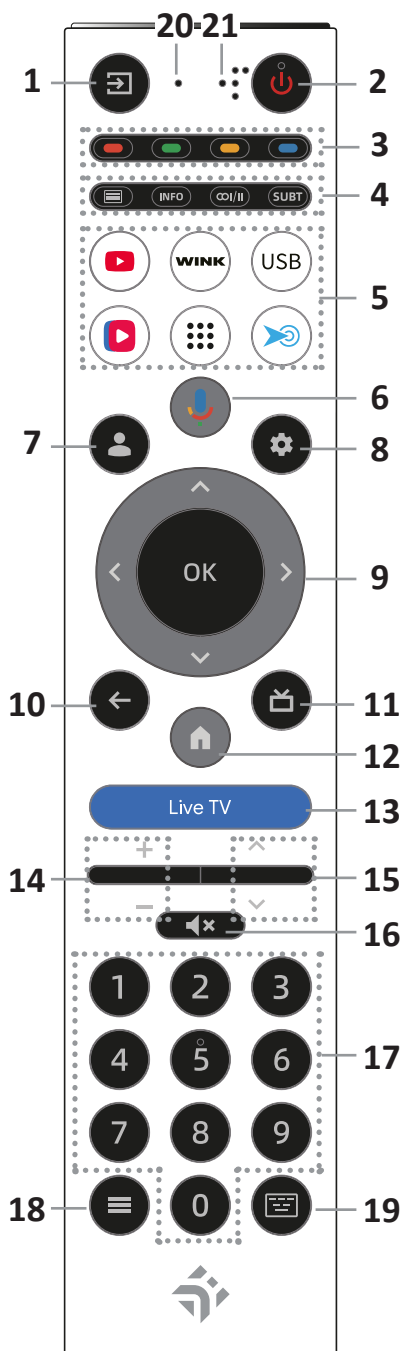 

1. Source button
2. Power button
3. Colored buttons — used according to on-screen prompts
4. Function buttons:
 - — teletext display.
 - **INFO** — program information display.
 - **COI/II** — audio track settings.
 - **SUBT** — subtitle selection.
5. App buttons:
 - Video services.
 - — list of installed apps.
 - **USB** — USB connection mode.
 - — customizable shortcut button.
6. Google Assistant button.
7. Google Account menu button.
8. Settings button.
9. Navigation buttons / OK.
10. Back button.
11. Electronic program guide (EPG) button.
12. Home button.
13. «Live TV» button.
14. Volume rocker.
15. Channel rocker.
16. Mute button.
17. Number keypad.
18. Main menu button.
19. On-screen keyboard button.
20. Microphone indicator.
21. Command confirmation indicator.

 
Secondary Remote Control (for models 50UCG1, 50UCG2, 50UCG1W, 50UCG2W)

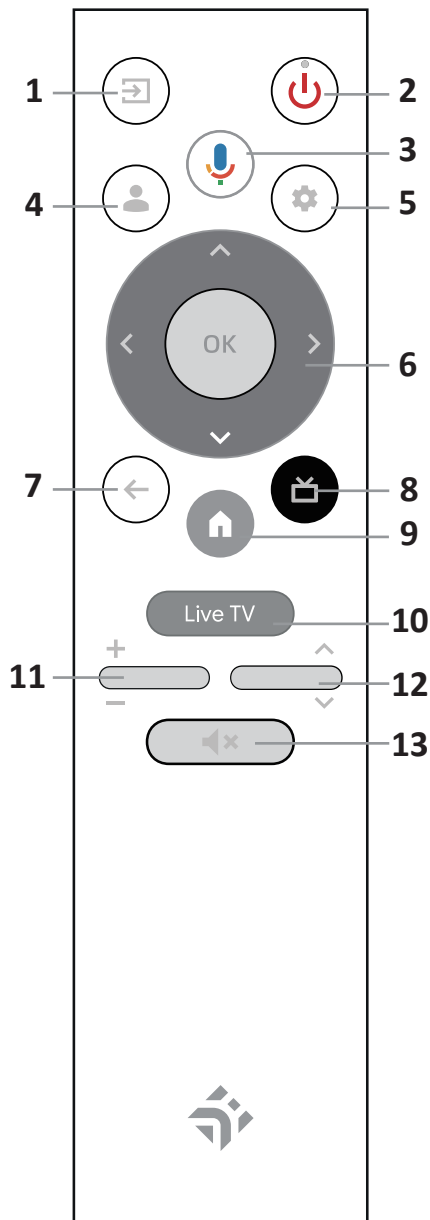

1. Source button.
2. Power button.
3. Google Assistant button.
4. Google Account menu button.
5. Settings button.
6. Navigation buttons / OK.
7. Back button.
8. Electronic program guide (EPG) button.
9. Home button.
10. «Live TV» button.
11. Volume rocker.
12. Channel rocker.
13. Mute button.

Installing Batteries in the Remote Control

 1. Turn the remote control over and, while pressing lightly, slide the battery cover in the direction shown by the arrow in the image below.
2. Insert the batteries into the remote control. Make sure the polarity matches the diagram inside the battery compartment.
3. Close the battery cover by sliding it in the opposite direction.

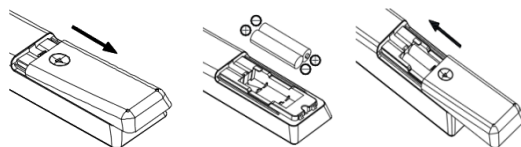

CAUTION! If you do not plan to use the device for an extended period, remove the batteries from the remote control. Otherwise, the remote may be damaged by leaking batteries.

Turning On the TV

1. Connect the power cord to the TV first, then to the power source.
2. The TV must only be connected to an AC power source. Never connect the device to a DC power source. If the power cord is damaged, under no circumstances connect it to the power outlet, as this poses a risk of electric shock.
3. Connect an external antenna to the ANT1/ANT2 connector on the side panel of the TV. The antenna connector (75 Ω — VHF/UHF/cable) can be used to connect an external antenna or other equipment.
 - If you want to receive a signal from a cable line or cable box, connect the coaxial cable to the ANT1 connector on the side panel of the TV.
 - If you want to receive a signal from your satellite receiver, connect the coaxial cable to the ANT2 connector on the side panel of the TV.
4. When the TV is connected to a power source, it will either turn on immediately or automatically enter standby mode.
5. If the power indicator is lit, the TV is in standby mode. Press the «  » button on the remote control or on the TV itself to turn it on.

Initial Setup

The first time you turn on the TV, a **Welcome wizard** will appear to guide you through the initial setup process. Follow the on-screen instructions to complete the setup, such as selecting a language, pairing your remote, connecting to a network, etc. At each step, either make a selection or skip it. If you skip a step, you can complete that setting later from the settings menu.

Notes

- It is recommended to select **Set up Google TV** and complete its setup to access additional features during initial setup. If you have completed the basic TV setup, you can enter Google TV setup again by pressing the «  » button on the remote control, then selecting **Settings → Set up Google TV** and pressing «OK» to confirm.
- When pairing the remote control, keep it within 1 meter of the TV and follow the on-screen pairing instructions. Once remote pairing is complete, you can use the «**Google Assistant**» button. If you skip remote pairing, you will be prompted to pair the remote with the TV again the first time you press the «**Google Assistant**» button.

Connecting the Remote Control

The first time it starts up, the TV will immediately prompt you to connect the remote.

1. Press and hold the «  » button and tilt the volume rocker to the «  » position.
2. The indicator on the remote control will start flashing, indicating that the remote is in pairing mode.
3. Once the indicator turns off, the remote is ready to use.

CAUTION! The remote control must be connected via Bluetooth for the voice assistant to work.

Using the TV

Inputs

Press the «  » button on the remote control to display the list of signal sources. Use the navigation buttons to select an option, then press «OK» to enter the submenu. You can also press the «  » button on the remote control to display the main **Inputs menu**, then press «OK» to enter it. Use the navigation buttons to select the input source and press «OK» to confirm.

Volume Control

Adjusting volume: Tilt the rocker to the «+» / «-» position on the remote control to increase or decrease the volume.

Muting: Press the «  » button to temporarily mute the sound. Press the same button again, or move the rocker to the «+» position to unmute.

Automatic Channel Scan

1. In TV mode, press the «  » button on the remote control, select **Settings → Channels & Inputs → Channels**, and select the TV signal source (cable, antenna, or satellite).
2. Select **Channel Scan** and press «**OK**» to start scanning. The TV will automatically scan for available channels based on your country or region.

Note: If only analog channels are found during the scan, this may be due to a weak TV signal.

Common Interface

Encrypted digital TV channels can be decoded using a Conditional Access Module (CAM) and a card provided by your digital TV operator.

A CAM module may support several digital services. Contact your digital TV operator for more information about services and terms.

Using the Common Interface Function

CAUTION! Turn off the TV before inserting the CAM module. Be sure to follow the instructions below.

Incorrect installation of the CAM module may damage both the module and the TV.

1. Following the instructions printed on the card, carefully insert the module into the Common Interface slot on the TV.
2. Insert the module all the way in.
3. Turn on the TV and wait for the function to activate. This may take a few minutes.

Note: Do not remove the CAM module from the slot while the TV is in operation.

Removing the module will disable digital services.

Accessing Common Interface Services

After installing the CAM module, press the «  » button on the remote control, select **Settings → Channels & Inputs → Channel → Common Interface**, and press «**OK**» to enter. This menu option is only available if the CAM module is correctly inserted and activated. Apps and content are provided by your digital TV operator.

Note: This function is only available for digital broadcast channels.

Accessibility

Google TV actively develops accessibility features for people with disabilities, such as a screen reader, text enlargement, and subtitle support with style customization.

Using Subtitles

You can enable subtitles for each TV channel. Subtitles are broadcast either as Teletext or in DVB-T/DVB-T2/DVB-C/DVB-S/DVB-S2 digital broadcast format. With digital broadcasting, you also have the option to select your preferred subtitle language.

Note: Some options are only available when subtitles are enabled.

Turning Subtitles On/Off

1. Press the «  » button on the remote control, select **TV Settings → Advanced Settings → Subtitles**, and press «**OK**».
2. Select the Subtitles option and press «**OK**» to toggle it on or off.
3. Press the «  » to return to the previous menu.

Enabling Subtitle Language Selection on Digital TV Channels

1. Press the « **≡** » button on the remote control, select **TV Settings → Advanced Settings → Subtitles → 1st Digital Subtitle Language**, and press «**OK/Right**».
2. Press «**Up/Down**» to select the subtitle language, and press «**OK**» to confirm.
3. Press «**Up/Down**» to select the 2nd digital subtitle language, and press «**OK**».
4. Press «**Up/Down**» to select the second subtitle language, and press «**OK**» to confirm.
5. Press the « **←** » button to return to the previous menu.

Selecting Subtitle Type on Digital TV Channels

1. Press the « **≡** » button on the remote control, select **TV Settings → Advanced Settings → Subtitles → Subtitle Type**, and press «**OK**».
2. Press «**Up/Down**» to select the subtitle type, and press «**OK**» to confirm. You can select the Hard of Hearing option to display subtitles in the selected language for viewers with hearing impairments.
3. Press the « **←** » button to return to the previous menu.

Using Teletext

Selecting the Decoding Page Display Language

1. Press the « **≡** » button on the remote control, select **TV Settings → Advanced Settings → Teletext → Decoding Page Language**, and press «**OK**».
2. Press «**Up/Down**» to select the correct language for displaying Teletext, and press «**OK**» to confirm.
3. Press the « **←** » button to return to the previous menu.

Digital Teletext Language

Depending on the broadcaster, digital TV channels may offer several Teletext pages in different languages. This function lets you select a language from the list as the primary language, which is then linked to different Teletext start pages.

1. Press the « **≡** » button on the remote control, select **TV Settings → Advanced Settings → Teletext → Digital Teletext Language**, and press «**OK**».
2. Press «**Up/Down**» to select the language, and press «**OK**» to confirm.
3. Press the « **←** » button to return to the previous menu.

Screen Reader

Enables voice narration of the interface. Activate it under **Settings → Accessibility → TalkBack** (screen reader).

Text Enlargement

Increase the font size under **Settings → Accessibility → Font Size**.

Audio Description

Enable audio description for movies and shows (if supported by the content) under **Settings → Accessibility → Audio Description**.

Note: Some functions can also be enabled using the corresponding buttons on the remote control (see the "Remote Control" section).

Using Quick Start

Enabling this feature allows the TV to exit standby mode faster, but it also increases power consumption in standby mode.

1. Press the «» button on the remote control, select **Settings → System → Power and Energy → Quick Start**, and press «**OK/Right**».
2. Select the Quick Start option and press «**OK**» to toggle it on or off.
3. Press the «» button to return to the previous menu.

Wake on LAN

This feature allows you to turn on the TV from standby mode over your home network.

To use this feature, make sure that:

1. Your TV is connected to your home network.
2. The device you will use to turn on the TV is connected to the same home network.
3. An app that supports Wake on LAN is installed on that device.
4. Network standby is enabled in the Network & Internet menu.
5. In Google TV mode, press the «» button on the remote control, select **Settings → Network & Internet → Network Standby**, and press «**OK**» to enable it.

While the TV is in standby mode, you can use the app to remotely wake it from standby.

Notes

1. This feature is only available in Google TV mode.
2. This feature is not available on all models.
3. This feature will be disabled if you press and hold the «» button on the remote control for a few seconds and confirm turning off the TV.
4. Before using Wake on LAN, make sure Quick Start is enabled.

External Device Control (CEC)

Use this feature to detect and control devices that support the CEC protocol.

Enabling or disabling CEC:

1. Press the «» button on the remote control, select **Settings → Channels & Inputs → Inputs → External Device Control**, and press «**OK/Right**».
2. Select the HDMI Control option and press «**OK**» to toggle it on or off.
3. Press «» to return to the previous menu.

Syncing TV Power-On with Other Devices

This setting allows the TV to turn on automatically when a connected CEC device (such as a DVD player or game console) is turned on. Press «**OK**» to enable this feature.

Device Standby Sync

Allows all CEC devices to automatically enter standby mode when the TV is turned off using the remote control. Press «**OK**» to enable this feature.

Note: CEC functions depend on the connected devices, and some devices may not work correctly when connected to this TV. For more information, refer to the connected device's user manual.

Electronic Program Guide (EPG)

EPG is an on-screen guide that displays scheduled digital TV programs. You can navigate, select, and preview programs.

1. Press the «  » button on the remote control.
2. In the menu that appears, you can view information about the current or next program.
3. Navigate between different programs using the «Up»/«Down»/«Left»/«Right» buttons on the remote control.
4. To view the EPG, use the corresponding buttons, which are indicated on the left side of the screen.

Filter

1. Navigate using the «Up»/«Down» buttons on the remote control.
2. Press «OK» to confirm your selection.

Schedule

1. Press «OK», then select **Reminder** or **Scheduled Recording** to set the channel, date, and reminder time. Follow the on-screen prompts to complete the settings.
2. Press «  » to return to the previous menu.

Shortcut Button

You can set up quick access to any app or setting using the «  » button.

Live TV

Live TV is a function for watching live over-the-air broadcasts. It is activated by pressing the «Live TV» button on the remote control and lets you jump straight to the current program from an antenna, cable, or satellite source.

User Profile Support

Google TV allows you to create multiple user profiles for personalized content. Each profile is linked to a Google Account and stores individual preferences, watchlists, and viewing history.

Creating a Profile

1. Press the «**Google Assistant**» button on the remote control, or select the profile icon in the top-right corner of the home screen.
2. Select **Add Profile** and sign in to a Google Account.
3. Set up profile details, such as the name and avatar.

Creating a Child Profile

1. In the **Add Profile** menu, select **Create Child Profile**.
2. Set age restrictions and select allowed apps (such as YouTube Kids).
3. Set up a PIN for parental controls via **Settings → Accounts & Sign-in → Parental Controls**.

Switching Profiles

On the home screen, select the profile icon and choose the desired profile.

Notes

- An internet connection is recommended for optimal performance.
- Some apps may not support multi-user mode.

Controlling Smart Home Devices via Google TV

A TV running Google TV can serve as a hub for controlling smart home devices that support Google Home.

Setting Up Google Home

1. Make sure the TV is connected to Wi-Fi and linked to your Google Account.
2. Open the Google Home app on your smartphone, or use Google Assistant on the TV.
3. Add smart home devices (lights, outlets, cameras, etc.) via **Settings → Devices & Services → Add Device**.

Controlling Devices

- Use voice commands via Google Assistant, such as: «Turn on the living room lights» or «Show the camera on screen».
- Control devices through the Google TV interface, in the **Devices** section.

Game Mode (available for models 50UCG1, 50UCG2, 50UCG1W, and 50UCG2W)

1. Connect the console to an HDMI port that supports HDMI 2.1 (see port specifications in the "Specifications" section).
2. Enable Game Mode: **Settings** → **Picture** → **Advanced Settings** → **Game** → **Game Mode**.
3. To set up the game menu, assign the Game Optimizer function to the «» button and press it.

Note: VRR and 4K@120Hz require an Ultra High Speed HDMI cable and a compatible game console.

Cloud Gaming Services

- Install apps such as GeForce Now or Xbox Cloud Gaming from the Google Play Store.
- Connect a compatible gamepad via Bluetooth for game streaming.

Additional Game Mode Settings

- **ALLM** — Auto Low Latency Mode. The TV can automatically enable or disable low-latency game mode depending on the signal content. Typically used with game consoles.
- **Low-Latency** — Low-Latency game mode.
- **MEMC** — Motion Estimation and Motion Compensation in game mode, balancing low display latency with image smoothness.
- **DLG** — improves image smoothness, especially with fast-moving content such as video games or video playback.
- **VRR** — variable refresh rate. Dynamically syncs the refresh rate with the frame rate of the graphics source.
- **Crosshair** — turns the crosshair overlay on or off.
- **Crosshair Type** — selects the crosshair style.
- **FPS** — frame rate.
- **Contrast Type** — preset picture contrast modes.
- **Backlight** — screen brightness.
- **Low Blue Light** — electronic device screens emit blue light, which can cause eye strain and, over time, contribute to vision problems.
- **Display Mode** — selects the image aspect ratio.
- **Clarity** — image sharpness.

Settings

Network & Internet

1. Use the navigation buttons to move between options.
2. Press «OK» to confirm your network selection.

About

This menu displays information about the device.

Date & Time

In this menu, you can set the time manually or automatically, select the time zone, and choose the time format.

Power

- **Power Modes** — configures the device's power consumption in standby mode. Includes the following options:
 - Low Power — disables the internet connection when the TV is not in use. Important updates and features remain available.
 - Optimized Power — when the TV is not in use, it enters standby mode. It remains connected to the internet and can be woken remotely via Google Assistant or Google Cast.
 - High Power — the device stays online at all times, with network features available even when the TV is not in use. In addition to the other functions, this mode enables automation setup and integration with the Google Home app.
- **Sleep Timer** — configures automatic shutdown of the device.
 - On Inactivity — automatically turns off the TV if it is not used for a certain period.
 - While Watching — automatically turns off the TV during use.
 - Countdown from Now — turns off the TV after a specified period of time. This function resets after each use.
- **Startup State** — configures the TV's startup screen. Two options are available: Google home screen or last used input.
- **Scheduled On/Off** — turns the device on and off at a set time.
 - Power-On Timer — sets a time for the device to turn on, with a one-time or recurring on/off option.
 - Sleep Timer (Off) — sets a time for the device to turn off, with a one-time or recurring on/off option.
 - Off Timer — turns off the TV a specified period of time after it is turned on. This function repeats until manually disabled.
- **Additional Settings**
 - Turn the standby power indicator on or off.
 - Set indicator brightness — high/Medium/Low.

Picture

- **Picture Mode** — use the navigation buttons to select an option, then press «OK» to enter the submenu.
- **Backlight / Brightness / Contrast / Saturation / Tint / Sharpness** — use the navigation buttons to select and adjust the parameter.
- **Advanced Settings** — use the navigation buttons to select an option, then press «OK» to enter the submenu.
- **Reset to Default Settings** — press to reset settings to factory defaults.
- **Noise Reduction** — removes ripple-type interference to clean up the picture.
- **SDR to HDR** — simulates an HDR picture. The device analyzes the contrast and brightness of the SDR signal and expands the range to approximate HDR quality.
- **Adaptive Brightness Control** — analyzes contrast based on the content histogram to produce deeper blacks and brighter whites.
- **Local Contrast Control** — divides each frame into small zones and automatically adjusts contrast for each zone.
- **DI Film Mode** — a function for 3:2 or 2:2 cadence video content at 24 frames per second that eliminates artifacts such as interlacing or judder. Set DI Film Mode to «Auto», or turn it off by selecting «Off». This item is unavailable when Game Mode or PC Mode is enabled.
- **Cool Blue Stretch** — shifts the white balance at mid-to-high gray levels toward a cooler color temperature.
- **MEMC* (Motion Estimation Motion Compensation)** — optimizes video to improve picture quality and clarity. Set to «Low», «Medium», or «High» to enable MEMC.
- **HDMI RGB Range** — configures the color range for HDMI. Limited (16–235) or Full (0–255). Set your preferred HDMI RGB range. This item is unavailable unless HDMI is selected as the input source.
- **Low Blue Light** — electronic device screens emit blue light, which can cause eye strain and, over time, contribute to vision problems.
- **No Signal Picture** — turns the picture display off.
- **Color Tuning** — saturation, hue, and brightness can be adjusted for red, green, blue, cyan, magenta, yellow, and skin tone, for a more vivid or natural picture.
- **11-Point White Balance** — the white balance function calibrates the TV's color temperature across grayscale levels. Grayscale uniformity can be improved visually or through measurement.
- **Reset** — resets all picture settings to factory defaults.
- **Offset** — offsets the RGB color channels.

* This function is only available on models 50UCG1, 50UCG2, 50UCG2W, and 50UCG1W.

Sound

- **Sound Style** — preset sound modes for different use cases
- **Balance / Bass / Treble** — use the navigation buttons to select and adjust the parameter.
- **Surround Sound** — adds a surround sound effect. Press «OK» to turn the function on or off.
- **Equalizer Settings** — adjusts individual frequency bands.
- **Speakers** — use the navigation buttons to select an option, then press «OK» to activate the function.
- **Audio Delay** — delays audio output through the speakers.
- **Auto Volume Control** — automatically adjusts the volume level. Press «OK» to turn the function on or off.
- **Downmix** — use the navigation buttons to select an option, then press «OK» to enter the submenu.
- **Dialogue Enhancement** — use the navigation buttons to select an option, then press «OK» to enter the submenu.
- **eARC*** — transmits audio via HDMI from the TV to an audio device.
- **Digital Output** — selects the audio output device.
- **SPDIF Delay** — delays audio output through the optical/coaxial connector.
- **Downmix Mode** — selects the number of audio output channels.
- **Dolby Audio Processing** — processes audio using Dolby technologies.
- **Reset to Default Settings** — press to reset settings to factory defaults.

* This function is only available on models 50UCG1, 50UCG2, 50UCG2W, and 50UCG1W.

Storage

- **Internal Shared Storage** — use the navigation buttons to select an option, then press «OK» to enter the submenu.
- **Removable Media** — use the navigation buttons to select an option, then press «OK» to enter the submenu.

Demo Mode

Demo Mode — use the navigation buttons to select an option, then press «OK» to activate.

Google Assistant

In this menu, you can configure voice control, view permissions, enable/disable personal results, set an app filter, and enable SafeSearch.

Use the navigation buttons to select an option, then press «OK» to activate.

Location

Location Services — use the navigation buttons to select an option, then press «OK» to activate.

Always Scan for Networks — use the navigation buttons to select an option, then press «OK» to activate.

Bluetooth

1. Press and hold «» and tilt the volume rocker to the «» position.
2. When the indicator lights up, release the buttons.
3. Press «» to exit.

Data Security

- Manage app permissions in **Settings → Apps → App Permissions**.
- Use a strong password for your Google Account and enable two-factor authentication.
- To protect children, set up parental controls in **Settings → Accounts & Sign-in → Parental Controls**.

Firmware Update

Google TV Update

- The TV automatically checks for updates when connected to the internet.
- To check manually:
 - Go to **Settings → System → About → System Update**. Press **Check for Updates**.
- Make sure the TV is connected to a stable Wi-Fi or Ethernet network.

"Find My Remote" Function

This function is designed to make it easier to locate the remote control.

CAUTION! This function will only work once the remote control has been paired with the TV and subsequently configured. The distance between the remote control and the TV must not exceed 10 meters.

Turning the Function On/Off

1. Press the «  » button.
2. Select **Help** → **Find My Remote** → **Off/On**.

Usage

1. Unplug the power cord and plug it back into the outlet.
2. Press the power button to turn on the TV.

CAUTION! Do not turn off the TV or interact with it in any way.

3. Within 20 minutes, a message will appear on the TV screen indicating that the "Find My Remote" function has started. The remote control will vibrate to indicate its location.

Note: When this function is enabled, the remote control consumes more power.

Troubleshooting Guide

If any issues occur while operating the TV, try turning it off and back on again. You can also use the table below to help resolve issues. If the problem persists, contact a qualified technician.

Issue	Possible Solution
The TV does not turn on	Check that the power cord is correctly plugged into the outlet
	Check that the outlet is receiving power
	Check that the remote control is working
	Unplug the TV's power cord for a few minutes, then plug it back in
No TV signal reception	Check that the TV settings are correct
	Make sure the antenna is connected correctly and the antenna cable is not damaged
	Run a channel scan again
	Make sure the antenna connector is firmly plugged into the TV
No picture	Make sure external signal sources are connected correctly
	Make sure the cable connecting the external device is not damaged
	Make sure the correct signal source is selected
Incorrect color reproduction	Check that the correct color system is selected in the TV settings
	Check that the picture settings are correct
	The signal from the transmitter may be distorted. Try switching to a different channel
The image via HDMI flickers or shows streaks	Check the signal source settings
	The signal source may be too far from the TV
Dead or stuck pixels appear on screen	This TV uses a high-definition LCD panel. Modern panel manufacturing technology may result in a small number of dark or colored dots (pixels) on the screen that do not affect overall picture quality. All panels are tested during manufacturing and meet the applicable standards for this product category
The TV does not output the desired frame rate over HDMI	Make sure you are using the correct HDMI port with the required bandwidth; go to the HDMI settings and select the appropriate HDMI version
	Check the settings on the connected device
No sound	Make sure the sound is not muted via the «  » button
	Make sure the volume is not set to the minimum; move the volume rocker down
	Make sure the correct audio output device is selected
	Check that the sound settings are correct

Issue	Possible Solution
No sound through external outputs	Make sure the audio cable is connected correctly and is not damaged
	Make sure the correct source is selected on your TV
The TV does not respond to the remote control	Replace the remote's batteries with new ones
	Point the remote directly at the remote sensor on the TV's front panel
	Make sure there are no obstacles (furniture, etc.) between the remote and the TV that could block the signal
	Make sure the distance between the remote and the TV does not exceed 5 meters (or 10 meters if the remote is paired via Bluetooth), and that the angle of deviation from a straight line does not exceed 20°
The USB interface does not work	Disconnect the USB device from the TV's USB port. Reconnect it, carefully aligning the connectors
	Make sure the USB device is supported by the TV. Refer to the "Connecting USB Devices" section of this manual for more information
Some files on an external USB device cannot be read	Make sure the TV supports this file type. Refer to the "Specifications" section of this manual for more information
Crackling or humming noise while watching or turning off the TV	This is normal and is caused by thermal expansion or contraction of plastic components due to temperature and humidity changes. The TV may produce a faint hum, buzz, or noise due to the operation of its internal electrical circuits. This is not a defect
Delayed response to commands	The TV's processor needs a short amount of time to process each command accurately. Allow a sufficient pause between commands for stable TV operation. This does not affect the TV's performance and is not a defect
Online video playback is choppy or buffers	Stop playback, wait 2–3 minutes, then resume watching. Your internet plan may not be suitable — the manufacturer recommends a plan with a speed of at least 10 Mbps
	Additional wireless devices connected to your home router may reduce performance
	Check your router's settings, and replace it if it is malfunctioning
One of the installed third-party apps does not work (or has no sound, or shows other issues)	This is likely an issue with the app itself. Try launching it again later, or contact the app developer's support team. The manufacturer is not responsible for the performance of third-party apps

Issue	Possible Solution
The wireless mouse does not work (cannot be controlled)	Install a new battery, or replace the existing one, in the wireless mouse. Make sure there are no obstacles between the wireless mouse and its receiver (included, connected to the TV's USB port) and that there is a clear line of sight. Replace the wireless mouse if necessary
Control is unstable or erratic	Unplug the TV, wait a minute, then plug it back in
	Reset the TV to factory settings (see the "Reset Settings" section)
	Always exit open apps using the « ⬅ » button
Smart TV online services do not work over a wired (LAN) connection	Make sure the power cord is not damaged and is connected correctly
	Check whether you can access the service from another device
	The service may currently be unavailable for all users
	Check your TV's network settings
Smart TV online services do not work over a wireless connection	Check that the time and region are set correctly
	Check whether you can access the service from another device
	The service may currently be unavailable for all users
	Check your TV's network settings
	The Wi-Fi signal source may be the issue. Check your router
The app does not launch or shows an error	Check that the time and region are set correctly
	Check for app updates in the Google Play Store
A Bluetooth device won't connect	Clear the app's cache under Settings → Apps → [App Name] → Clear Cache . Reinstall the app if the problem persists
	Make sure the device is in pairing mode. Go to Settings → Remotes & Accessories → Add Device and try again
The TV won't update its firmware	Check the battery level of the device you are connecting
	Check your internet connection
	Go to Settings → System → About → System Update and try again
	If issues persist, perform a reset: Settings → System → About → Reset → Factory Reset . Back up any important data before resetting

Screen Information

An LCD TV is a highly advanced product. The TV screen contains several million thin-film transistors, providing a sharp and vivid picture. Occasionally, the TV screen may display a few inactive pixels appearing as fixed blue, green, red, black, or white dots. Please note that this does not affect the TV's performance and is not considered a defect. All LCD panels comply with Class II under ISO 13406-2.

The ISO 13406-2 standard defines four types of defective pixels:

- **Type 1** — permanently lit pixels (white).
- **Type 2** — permanently unlit pixels (black).
- **Type 3** — pixels with other defects, including defects in the sub-pixels or RGB cells that make up a pixel. This refers to permanently lit red, green, or blue pixels.
- **Cluster** (a group of defective pixels) — several defective pixels within a 5 × 5 pixel area.

Table 1. Maximum Allowable Number of Defective Pixels per Million Pixels

Class	Type 1	Type 2	Type 3	Number of clusters containing more than 1 Type 1 or Type 2 defect	Number of clusters containing more than 1 Type 3 defect
II	2	2	5	0	2

The ISO 13406-2 standard defines four LCD quality classes based on the number of defective pixels. Most LCD TVs and displays from leading global manufacturers meet the Class II tolerance.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The installation and mounting conditions for the device are described in the «TV Placement» section of this user manual.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- To ensure correct transportation of the device, the following requirements must be observed:
 - Remove any internal accessories from the device, if present, and pack them separately.
 - Ensure the device is properly packed to maintain its functionality and appearance (large appliances must be wrapped in polyethylene or bubble wrap, with corrugated cardboard padding in critical areas).
 - Secure the device firmly with straps to prevent any movement inside the transport vehicle.
 - To completely eliminate exposure to the environment, use only enclosed transport.
 - Exercise extreme caution when handling the packaging during loading and unloading operations.
 - Protect the device from sharp impacts and drops.
 - Avoid prolonged exposure to rain or wet snow.
 - Do not place heavy objects on the packaging.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- Upon expiration of the service life of batteries supplied with the device, do not dispose of them with other household waste. Batteries must be disposed of in accordance with local waste recycling regulations to prevent potential environmental harm resulting from uncontrolled waste disposal.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 36 months

Service Life: 48 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Production Unitary Enterprise «N-TV».

Room 16, 62 Sofya Kovalevskaya Lane, Minsk, 220014, Republic of Belarus.

Made in the Republic of Belarus.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Maintenance and Service Life

Provided that the operating rules outlined in this User Manual are followed, the service life of the television is 4 years from the date of sale through the retail network. If the date of manufacture cannot be determined, the service life is calculated from the date of manufacture of the television. During this period, the manufacturer ensures the consumer's ability to use the product for its intended purpose, as well as the production and supply of spare parts to retail and repair facilities.



The production date is indicated on the packaging.

v.1

Appendix to the User Manual

Certificate of Conformity to the requirements of: TR CU 004/2011 «On the Safety of Low-voltage Equipment», TR CU 020/2011 «Electromagnetic Compatibility of Technical Products». The television complies with the requirements of technical specifications TU RB 100085149, 176-2004. In terms of operational safety, the television meets the Class II protection requirements according to GOST IEC 60065-2013. The quality management system for the design, production, and maintenance of consumer radio-electronic equipment. household electrical appliances, and information technology equipment complies with the requirements of STB ISO 9001-2015.						
The product complies with the requirements of the Eurasian Economic Union Technical Regulation TR EAEU 037/2016 «On the Limitation of the Use of Hazardous Substances in Electrical and Radio Electronics Products».						
Model	Net weight, kg	Gross weight, kg	Packaging dimensions, mm	Specific power consumption of operating mode, W/cm ²	Power consumption in standby mode, W	Power consumption in off mode, W
43FCG1	5.2	7.3	1055 × 100 × 635	0.012		
43FCG1W						
50UCG1	8.1	10.5	1210 × 100 × 735	0.017	0.5	0
50UCG1W						
50UCG2						
50UCG2W						

