

User Manual

Air Fryer
AGR-1805

DEXP

Before First Use



Remove all packaging materials and wash the basket with a mild detergent.



Dry it and put it back in place.



Turn on the air fryer for 30 minutes at a temperature of 200 °C.



Wash the basket again.

Note: During the first use of the device, a small amount of smoke or odor may appear. This is normal and does not indicate a malfunction.

Contents

- Intended Use.....4**
- Safety Precautions4**
- Device Diagram6**
- Operating Instructions7**
 - Control Panel..... 7
 - Before First Use..... 7
 - Getting Started..... 8
 - Manual Mode..... 8
 - Automatic Mode 8
 - Cooking Programs 8
- Specifications.....9**
- Cleaning and Maintenance.....9**
- Troubleshooting Guide..... 10**
- Rules and Conditions for Installation, Storage, Transportation, Sale
(Distribution), and Disposal..... 11**
- Additional Information 11**
- Warranty Information 12**

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use


The air fryer is designed for cooking food using hot air circulation.

Safety Precautions

- Use the appliance exclusively for the purposes described in this manual.
- Before connecting the device, ensure that the voltage indicated on it matches the voltage of the local grounded power supply.
- Do not use the device near sources of water or other liquids. Never expose the device and the power cord to running water or immerse them in water.
- Do not place the device near heat sources (heaters, radiators, etc.) or on hot surfaces (electric or gas stoves).
- Place the device on a flat, stable surface at least 20 cm away from walls and other objects.
- Certain surfaces of the device become very hot during use, which may cause burns. Exercise caution when handling the appliance, use oven mitts, and touch only the handle and controls during operation.
- Always turn off the device before unplugging it from the power source. To disconnect, grasp the plug — do not pull the cord itself.
- Do not move the device while it is plugged in; first disconnect the power cord.
- Never pull or carry the device by the power cord. Ensure that the power cord is not pinched by doors and does not touch sharp edges or corners. Keep the cord away from hot surfaces.
- Before operating the device, check that the basket is correctly installed to avoid damage. Do not turn on the device without the basket installed.
- Do not leave the device unattended during operation.
- Do not turn on the air fryer if the basket is empty.
- Do not cover the device during operation or block the ventilation openings to prevent overheating and damage.
- During operation, keep your face and hands away from the steam outlet opening, as this may cause burns.
- This device is not intended to be operated by means of an external timer, separate remote-control system, or software module.
- Always unplug the device immediately after use. Before cleaning or long-term storage, ensure that it has cooled down completely.
- Exercise caution when moving the device if it contains hot liquids, oil, etc., to avoid burns.

- Do not place cardboard, plastic, paper, or other flammable materials in the air fryer basket.
- The use of accessories not recommended by the manufacturer is prohibited.
- Protect the device from sharp objects, abrasive substances, and other items that may damage it.
- Do not disassemble the device yourself to avoid the risk of electric shock. Contact an authorized service center.
- Immediately unplug the device if it is damaged or malfunctions. Do not use the device if the power cord, plug, or the device itself is damaged.
- Do not attempt to repair the device yourself. If any malfunction is detected, immediately stop using it and contact an authorised service center.
- This device is not intended for use by children and persons with limited physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety.
- This device is not intended for commercial use.


Device Diagram

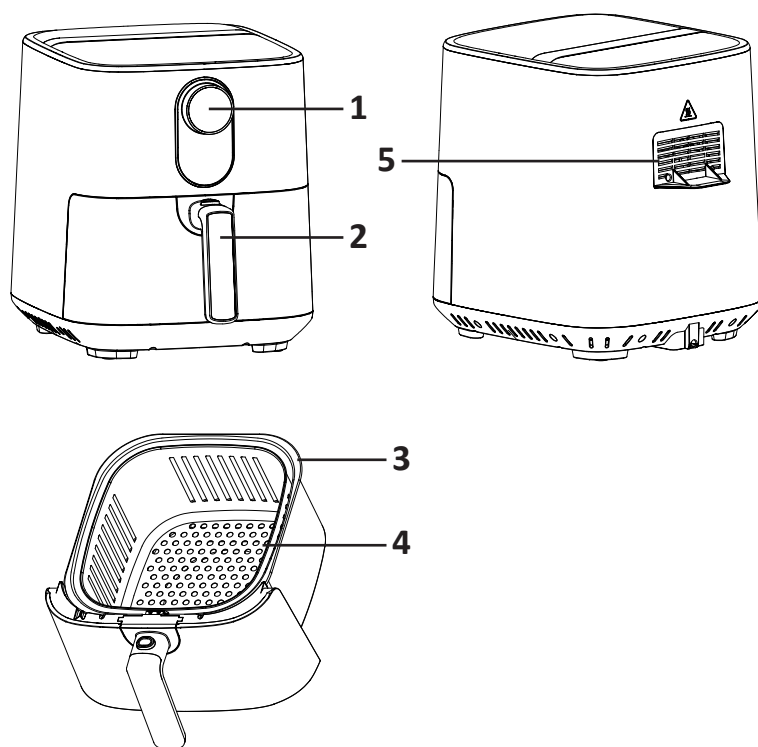

1. Control panel with rotary knob.
2. Basket handle
3. Outer basket
4. Inner basket
5. Steam outlet vent.

Operating Instructions

Control Panel

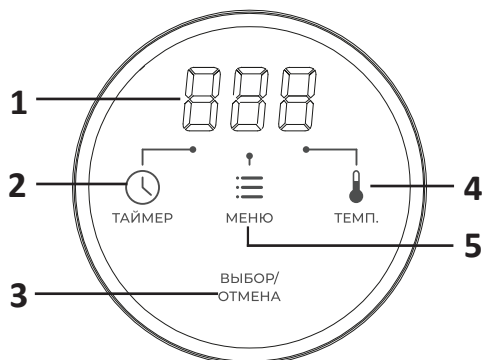

1. Display.
2. Timer: To set the cooking time, press the «SELECT/CANCEL» button until the indicator above the timer icon starts flashing. Turn the knob clockwise to increase the time, or counter-clockwise to decrease it. The minimum timer setting is 1 minute, the maximum is 60 minutes. The time adjustment step is 1 minute.
3. «SELECT/CANCEL» button: Press to select functions; press and hold to cancel the current program.
4. Temp.: To set the cooking temperature, press the «SELECT/CANCEL» button until the indicator above the temperature icon starts flashing. Turn the knob clockwise to increase the temperature, or counter-clockwise to decrease it. The minimum cooking temperature is 80 °C, the maximum is 200 °C. The temperature adjustment step is 5 °C.
5. Menu: To select a cooking program, press the «SELECT/CANCEL» button until the indicator above the menu icon starts flashing. Turn the knob to select the desired cooking program (C-1, C-2, C-3, C-4, C-5, C-6, C-7, C-8).

Before First Use

1. Remove all packaging materials, wipe the exterior of the device with a clean, damp cloth, and let it dry completely.
2. Place the device on a flat, stable surface so that the emitted hot steam does not come into contact with wallpaper, decorative coatings, electronic devices, or other items or materials sensitive to temperature and moisture.
3. Preheat the device for 30 minutes at 200 °C to eliminate any factory lubricants.

Note: During the first use of the device, a small amount of smoke or odor may appear. This is normal and does not indicate a malfunction.

Getting Started

1. Place the air fryer on a flat and stable surface. Put the food in the basket, and insert the basket into the device body. Do not pour oil or other liquids into the basket.
2. Connect the device to the power source. A beep will sound, and the default temperature (200 °C) will be displayed on the screen. If no action is taken, the display will turn off, and the air fryer will enter standby mode. Press the «SELECT/CANCEL» button or turn the knob to return the device to its working state.
3. Set the temperature and time, or select one of the preset programs. The device will start automatically a few seconds after the settings are completed.

Manual Mode

1. Set the desired cooking temperature.
2. Set the desired cooking time.
3. Three seconds after the settings are completed, the device will automatically start cooking, and the display will begin counting down.
4. When the set time has elapsed, the device will stop automatically, and «End» will appear on the display.
5. The built-in fan will continue to run for another 10 seconds. After 10 seconds, the device will emit three beeps, the display will turn off, and the device will enter standby mode.

Automatic Mode

1. Press the «SELECT/CANCEL» button to enter the menu selection mode, and select the desired cooking program by turning the knob.
2. Three seconds after selecting the program, the device will automatically start cooking, and a countdown will begin on the display.
3. To pause cooking, remove the basket. To resume the selected program, reinsert the basket. To cancel the program, press and hold the «SELECT/CANCEL» button; «OFF» will be displayed on the screen.
4. After the set time has elapsed, the device will automatically stop, the buttons will become inactive, and «End» will be displayed on the screen.
5. The built-in fan will continue to run for another 10 seconds. After 10 seconds, the device will emit three beeps, the display will turn off, and the device will enter standby mode.

Cooking Programs



C-1



C-2



C-3



C-4



C-5



C-6



C-7



C-8

1. C-1 — «Defrost», temperature 80 °C, time 10–30 min.
2. C-2 — «French fries», temperature 200 °C, time 10–15 min.
3. C-3 — «Corn», temperature 180 °C, time 15–20 min.
4. C-4 — «Shrimp», temperature 160 °C, time 15–20 min.
5. C-5 — «Chicken», temperature 190 °C, time 20–25 min.
6. C-6 — «Steak», temperature 180 °C, time 10–25 min.
7. C-7 — «Fish», temperature 190 °C, time 10–25 min.
8. C-8 — «Bake», temperature 170 °C, time 12–30 min.

Note: You can adjust the time and temperature of the selected program.

Specifications

- Model: AGR-1805.
- Trademark: DEXP.
- Power supply: 220–240 V ~ 50–60 Hz.
- Power: 1800 W.
- Capacity: 5 L.
- 8 automatic cooking programs.
- Touch control.
- Operating temperature: 80–200 °C.
- Heating element type: Tubular heating element.
- Maximum timer setting: 60 min.
- Cord type: Y.
- Cord length: 80 cm.
- IP code: IPX0.
- Protection class: I.
- Scope of application: Domestic.
- Package contents: Device, user manual.

Cleaning and Maintenance

CAUTION

- Before cleaning, disconnect the device from the power source and ensure it has cooled down completely.
 - Clean the device after each use to prolong its service life.
 - Do not use solvents, bleach, or other abrasive cleaning agents to clean the device. Do not use stiff brushes (nylon, metal, etc.) as they may damage the surfaces and negatively affect its performance.
 - Never immerse the device body in water.
1. The inner and outer surfaces of the device can be wiped with a dry soft cloth or a sponge using a mild cleaning agent.
 2. The inner basket has a non-stick coating. Clean it carefully to avoid damage and loss of its performance.
 3. The inner basket can be washed in a dishwasher.
 4. If you need to clean the upper heating element, ensure it has cooled down completely. Use a brush to remove food residue.

Troubleshooting Guide

Issue	Possible Cause	Possible Solution
The device does not work	No power supply	Ensure the power cord is plugged into the socket and the socket is powered
	The inner basket is not inserted properly	Remove the basket from the device and then insert it back
	Device malfunction	Contact an authorized service center
The fan does not work	Fan malfunction	Contact an authorized service center
White smoke comes from the device	Cooking food with high fat content	This is normal
	The device is dirty	Clean the device after each use
	Flammable materials (e.g., packaging paper) are placed in the basket	Do not place anything other than food into the basket

Error Codes

When this error code appears on the device display, try turning the air fryer off and on again. If the error persists, contact an authorized service center.

Error Code	Description
E+	NTC sensor malfunction
	Short circuit

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Additional Information

Manufacturer: Zhejiang Lanbao Electrical Appliance Co., Ltd.

899 Kaifa East Road, Zhouxiang Town, Cixi City, Ningbo City, Zhejiang Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months.

Service Life: 36 months.

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

