

User Manual

Electric Coffee Grinder
CG-150P

DEXP

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


Intended Use

The coffee grinder is designed for grinding coffee beans for further brewing.

Safety Precautions

- Please read this instruction manual carefully before use and keep in a safe place for future reference.
- This device is intended for use in household and similar environments
- Before plugging in the device, ensure it is properly assembled. Before each use, check that all parts are securely in place.
- Do not touch the device, plug, or power cord with wet hands.
- Before plug in, make sure that the voltage of your home power source corresponds to the devices specifications.
- Do not use the device if the power cord, plug, or other parts are damaged. Ensure the power cord and plug are kept away from hot surfaces.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- Always unplug the device when not in use and before assembling, disassembling, replacing accessories or cleaning.
- Do not use any solvents to clean the device.
- Do not disassemble the device yourself to avoid electric shock. This device contains no user-serviceable parts. Maintenance and repairs should only be performed by qualified technicians at an authorized service center.
- Do not use the device if the power cord, plug, or other parts are damaged. Ensure the power cord and plug are kept away from hot surfaces.
- Use only the accessories supplied with the device. Using of any other accessories may pose a risk to life and health and will void your warranty.
- Never leave the device unattended while in use.
- Do not block the ventilation openings of the device.
- Never place the device under running water or immerse it in water.
- While the coffee grinder is in operation, it is strictly forbidden to insert any objects into the container or perform any maintenance operations.
- Do not operate the coffee grinder without coffee beans.
- Do not place any objects on top of the device.

Device Diagram

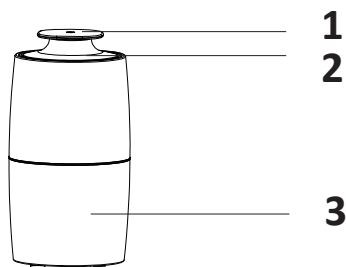

1. Push-button lid.
2. Blades.
3. Housing.

Operating Instructions

Before First Use

1. Remove all packaging materials from the device, except for warning stickers and the serial number label on the housing.
2. Place the coffee grinder on a flat, solid, horizontal surface. Wipe the bowl and blades with a soft, damp cloth. Be careful, as the blades are very sharp.
3. Thoroughly dry all parts of the device.

Using the Device

- The coffee grinder capacity is approximately 60 grams of beans. Do not fill the grinder above the Max mark.
- Close the lid tightly over the beans.
- Fully unwind the power cord and plug the coffee grinder into the power source.
- The coffee grinder operates in pulse mode¹. To grind the coffee, press and hold the lid (no longer than 30 seconds).
- The degree of grind depends on the quality of the beans and the grinding time. The shorter the grinding time, the coarser the grind you will get.
- After grinding, release the button, wait until the blades come to a complete stop before opening the lid.
- Unplug the coffee grinder, carefully remove the lid, remove the bowl from the housing, and take out the ground coffee.
- Clean the device according to the instructions in the “Cleaning and Maintenance” section.

Note: It is not recommended to process high-oil content foods (e.g., peanuts) or very hard foods (e.g., rice). Processing wet foods is prohibited.

¹ A special operating mode of the automatic coffee grinder in which the motor runs with brief pauses to prevent overheating.

Cleaning and Maintenance

- Before cleaning, disconnect the device from the power source.
- After each use, remove coffee residue from the grinder with a slightly damp, soft cloth and dry thoroughly.
- Do not lubricate or sharpen the grinder blades.
- Store the appliance in a dry, well-ventilated area.

Specifications

- Model: CG-150P.
- Trademark: DEXP.
- Mains voltage: 220 V, 50 Hz.
- Power: 150–180 W.
- Maximum grinding capacity: 60 g.
- Grinding system: Rotary blade.
- Device dimensions: 105 × 105 × 200 mm.
- Weight: 660 g.
- Cable length: 0.8 m.
- Blade material: Stainless steel.
- Housing material: Plastic.
- Cord type: X.
- Protection class: II.
- Motor overload protection.
- Scope of application: Domestic.

Package Contents

Coffee grinder, user manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 18 months

Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Zhongshan Meiming Electronic Industry Co., LTD.
North Heping Avenue, Dongheping Village, Dongfeng Town, Zhongshan City,
Guangdong Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

