

User Manual

Capsule Coffee Machine
CMC-01PW

DEXP

Contents

Intended Use.....	3
Safety Precautions	3
Specifications.....	4
Package Contents.....	4
Device Diagram	5
Control panel.....	5
Operating Instructions	6
First Use	6
Using Nespresso Original Capsules	6
Using Dolce Gusto Capsules	6
Using Ground Coffee.....	7
Standby Mode	7
Setting Brew Duration.....	7
Factory Reset	7
Cleaning and Maintenance.....	8
Descaling Mode.....	8
Additional Accessories	9
Manual Pump	9
Troubleshooting Guide.....	10
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal.....	10
Warranty Information	11
Additional Information	11

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The capsule coffee machine is designed for the automatic preparation of coffee from capsules.

Safety Precautions

- Before connecting the device to the power source, ensure that the voltage of your household electrical network matches its technical specifications.
- Do not touch the plug or power cord with wet hands.
- To avoid short circuits, do not allow the device to come into contact with any liquids, and do not place open containers with liquids near it.
- Do not leave the operating device unattended.
- Do not use the device if the power cord, plug, or any other parts are damaged. Ensure that the power cord or plug does not come into contact with hot surfaces.
- Install the device in a well-ventilated area.
- Do not cover the device.
- Use only the accessories supplied with the device. The use of any other components may pose a risk to life and health and will void your free warranty service.
- Use the coffee machine only as described in this user manual. With proper operation and adherence to the usage rules, the service life of the device may significantly exceed the manufacturer's specified period.
- Never operate the coffee machine without water. Do not overfill the water tank. Monitor the water level scale. Fill the coffee machine with cold water only.
- Do not lift the device handle during the brewing process.
- Do not touch the needle located above the capsule adapter to avoid injury.
- Some parts of the device become very hot during operation. Do not touch hot surfaces with your hands.
- Do not make any modifications to the design of the device.
- Disconnect the device from the power supply when not in use, before cleaning, or in the event of a malfunction.
- Always turn off the device before unplugging it. To disconnect, grasp the plug — do not pull the cord itself.
- Do not disassemble or attempt to repair the device yourself. Maintenance and repairs must be performed only by qualified specialists at an authorized service center.

- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- Do not use the device outdoors.
- This device is not intended for commercial use.
- This device is intended for use in household and similar environments, such as: staff kitchen areas in shops, offices, and other working environments; in farmhouses, hotels, motels, and other residential environments; in bed and breakfast type establishments; in catering services.





Specifications

- Model: CMC-01PW.
- Trademark: DEXP.
- Type: Capsule coffee machine.
- Material: Plastic.
- Power: 1450 W.
- Water tank capacity: 0.9 L.
- Pump pressure: 19 bar.
- Number of operating modes: 2.
- Protection class: I.
- IP code: IPX0.
- Cord type: Y.
- Power supply: 220–240 V ~ 50 Hz.
- Scope of application: Domestic.

Package Contents


- Coffee machine.
- Nespresso Original capsule adapter.
- Dolce Gusto capsule adapter.
- Ground coffee adapter.
- Cleaning needle.
- Manual water pump.
- Tamper spoon.
- User manual.

Device Diagram

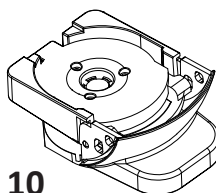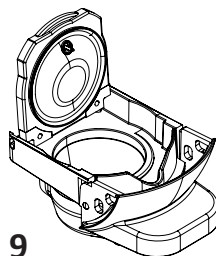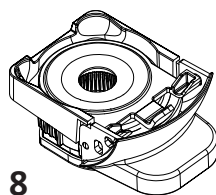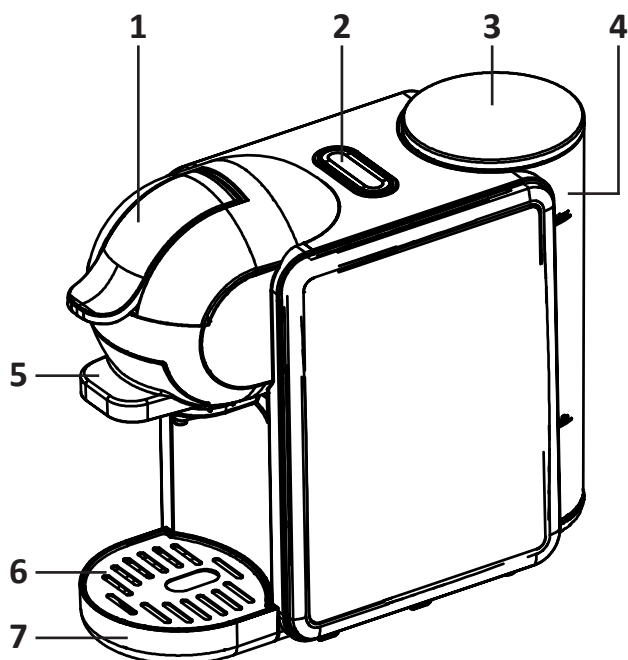

1. Handle.
2. Control panel.
3. Water tank lid.
4. Water tank.
5. Adapter.
6. Removable drip tray grid.
7. Drip tray.
8. Nespresso Original capsule adapter.
9. Dolce Gusto capsule adapter.
10. Ground coffee adapter.

Control panel

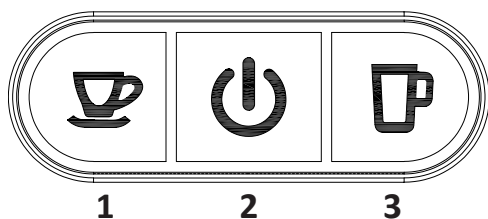

1. Small cup button (Espresso).
2. Power button.
3. Large cup button (Lungo).

Operating Instructions

First Use

Before first use or after prolonged periods of inactivity, the machine must be rinsed.

Note: The water tank can be filled in two ways: by detaching it from the coffee machine, or by using a jug with a spout without removing the tank.

1. Fill the tank with cold, fresh water (maximum water temperature: 35 °C), not exceeding the maximum mark.
2. Plug in the power cord.
3. Press the power button.
4. The indicators on the buttons will stop flashing when the coffee machine has warmed up (warming time is approximately 45 seconds).
5. Press the lungo (large cup) brewing button and wait for the cycle to complete. Before pressing the button, ensure that:
 - The handle is closed and there is no capsule inside.
 - The water tank is full.
 - The water tank is securely attached (otherwise, water may leak).
 - A cup or container of at least 250 ml capacity is placed under the dispenser.

Using Nespresso Original Capsules

1. Lift the handle. Pull out the Nespresso capsule adapter.
2. Press the adapter lid to open it. Insert the capsule into the adapter.
3. Insert the adapter into the coffee machine. Lower the handle.
4. Place a cup under the dispenser.
5. Press the button for the desired cup size.
6. The button indicator will start flashing, and the coffee machine will begin brewing.
7. The water flow will stop automatically after the default brewing time (25 seconds for espresso, 47 seconds for lungo).
8. Lift the handle and pull out the adapter to remove the used capsule.

Using Dolce Gusto Capsules

1. Lift the handle. Pull out the Dolce Gusto capsule adapter.
2. Insert the capsule into the adapter.
3. Insert the adapter into the coffee machine. Lower the handle.
4. Place a cup under the dispenser.
5. Press the button for the desired cup size.
6. The button indicator will start flashing, and the coffee machine will begin brewing.
7. The water flow will stop automatically after the default brewing time (25 seconds for espresso, 47 seconds for lungo).
8. Lift the handle and pull out the adapter to remove the used capsule.

Using Ground Coffee

1. Lift the handle. Pull out the ground coffee adapter.
2. Fill the adapter with coffee. Tamp the coffee to form a puck.
3. Insert the adapter into the coffee machine. Lower the handle.
4. Place a cup under the dispenser.
5. Press the button for the desired cup size.
6. The button indicator will start flashing, and the coffee machine will begin brewing.
7. The water flow will stop automatically after the default brewing time (25 seconds for espresso, 47 seconds for lungo).
8. Lift the handle and pull out the adapter to remove the used coffee grounds.

Note: After pressing the brewing button, it may blink for a few seconds while the coffee machine reaches the required temperature and begins operation.

CAUTION: The adapter becomes very hot during brewing. Do not touch the adapter immediately after brewing to avoid burns.

Standby Mode

The coffee machine automatically enters standby mode if no action is taken for 15 minutes; all indicators will turn off. Press the Power button to wake the device from standby.

Standby Mode Settings

1. Press and hold both the Espresso and Lungo buttons simultaneously, then plug the power cord into the outlet.
2. The small cup button indicator will light up, indicating that standby mode is enabled.
3. Press the small cup button; the indicator will turn off, indicating that standby mode is disabled.

Setting Brew Duration

You can customize the brewing time for espresso and lungo.

1. Place a cup under the dispenser.
2. Press and hold the espresso or lungo brewing button until you reach the desired coffee volume. The available range is 15–90 seconds.
3. Subsequent brews will follow the set duration.

Factory Reset

1. Press and hold the lungo (large cup) button and plug the power cord into the outlet.
2. All indicators will flash twice, and the device will return to factory settings.

Cleaning and Maintenance

- Before cleaning, unplug the coffee machine from the power supply.
- Ensure that the device has cooled down completely.
- Use a soft cloth and a non-abrasive cleaning agent to clean the body. Wipe the body dry.
- Use warm water, dish soap, and a soft brush to clean the water tank, adapters, and drip tray.

Descaling Mode

1. Place a cup under the dispenser.
2. Add a special descaling solution to the water tank according to its instructions.
3. Press and hold the small cup button while plugging the power cord into the outlet.
4. The power button and small cup button indicators will light up. Press the small cup button to start the descaling process.


CAUTION

When using the Dolce Gusto capsule adapter during cleaning, ensure the presence of two parts: the piercing needle and the water nozzle. Follow the diagram below to clean the adapter:

Piercing needle




Water nozzle

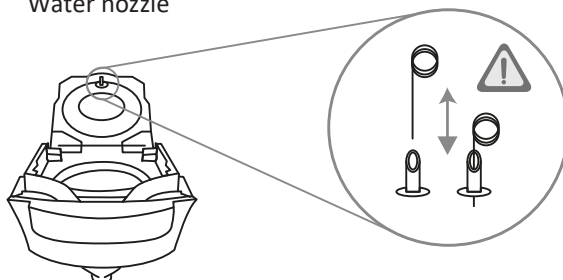

Additional Accessories


Manual Pump

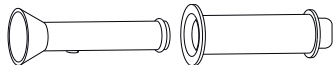


Using the Manual Pump

If water does not flow from the adapter while the pump is running, take the manual pump from the kit and follow the procedure below.

1. Remove the water tank and insert the tube (without the plunger) into the hole.
2. Fill the tube halfway with water.
3. Insert the plunger into the tube. Press the lungo (large cup) button. As soon as you hear the pump running, slowly push the plunger.
4. You may need to repeat this procedure 2–3 times to prime the hydraulic system (water will start flowing from the adapter or from the pressure relief valve, indicated by an arrow in the diagram).
5. Replace the water tank and repeat the procedure described in the «First Use» section.
6. The coffee machine is ready for normal use.

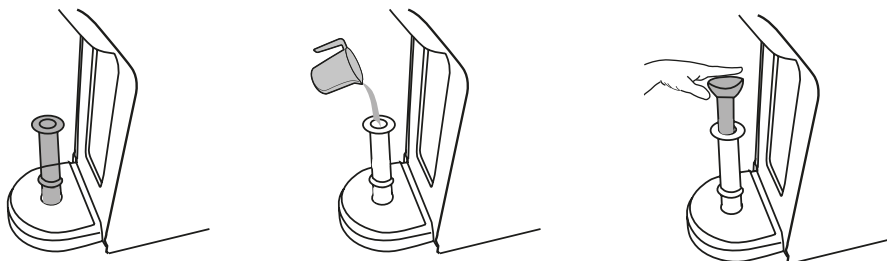

CAUTION: To avoid burns from hot water coming out of the pressure relief valve (indicated by an arrow in the diagram), do not get distracted during this procedure and keep your hands clear.

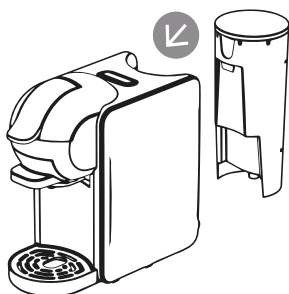

Troubleshooting Guide

Issue	Possible Cause	Solution
No coffee is dispensed	No water in the tank	Fill the water tank
Coffee is not hot enough	The coffee cup is cold	Preheat the cup beforehand
	Limescale buildup in the device	Descale the device
	The machine is cold	Run a brew cycle without coffee to warm up the device
Water on the work surface	The water tank is leaking	Check if the water tank valve is stuck or blocked
	The drip tray is full	Empty the drip tray
Handle does not lower	The adapter is installed incorrectly	Install the adapter in the correct position

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer’s and at the consumer’s sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device’s service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Foshan Shunde Stelang Electric Appliance Co.,Ltd.

Nanpu Industrial, Junan Town, Shunde District, Foshan City, Guangdong Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

