

User Manual

Iron
DI-2430T

DEXP

Contents

- Intended Use.....3
- Safety Precautions3
- Device Diagram4
- Operating Instructions5
 - Filling the Water Tank..... 5
 - Steam Ironing 5
 - Auto-Off Function 5
 - Dry Ironing 5
 - Self-cleaning 6
- Troubleshooting Guide6
- Specifications6
- Package Contents.....6
- Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal.....7
- Warranty Information8
- Additional Information.....8

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use


The iron is designed for smoothing wrinkles and creases on clothing.

Safety Precautions

- Use the device only for its intended purpose.
- Before plug in, make sure that the voltage of your home power source corresponds to the devices specifications. Plug the device only into a grounded outlet.
- Fully unwind the cord before use.
- Before connecting the device to the power source, ensure that the cord and plug are dry.
- Do not pull or move the device by the cord. Do not bend or wrap the cord around the device. Also ensure the power cord does not bend over the edge of the countertop or come into contact with hot surfaces or sharp edges.
- Do not leave the iron plugged in unattended. After use, always unplug the device and place it in an upright position.
- Do not place the iron near flammable objects to avoid the risk of fire.
- To avoid burns, do not touch the soleplate while the iron is plugged in.
- Do not iron clothes while they are being worn.
- Avoid contact with hot steam from the iron.
- Unplug the iron before filling it with water or emptying residual water after use.
- Do not use the device near sources of water or other liquids. Never place the device under running water or immerse it in water.
- Immediately unplug the device if it malfunctions, or if the power cord or plug is damaged. Contact an authorized service center.
- It is recommended to fill the iron only with filtered water. The use of various additives may lead to clogging of the steam vents.
- To avoid overloading the power source, do not use the iron simultaneously with other high-power electrical appliances.
- Exercise caution when using the iron near children.
- Do not tilt the iron forward too much, as water may leak from the water tank cover at a steep angle.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- This device is not intended for commercial use.
- Place the device only on a flat, stable surface.

- Do not direct the steam jet at people or animals.
- Before storing the iron after use, allow it to cool down completely.

Device Diagram

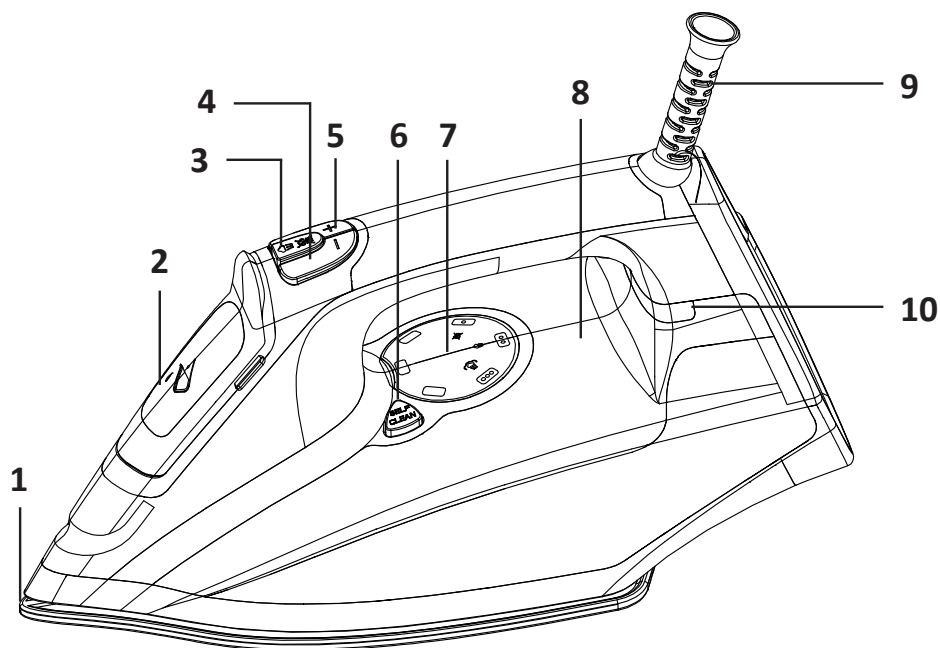

1. Soleplate.
2. Water tank cover.
3. Steam on/off button.
4. Temperature decrease button.
5. Temperature increase button.
6. Self-cleaning button.
7. Control panel.
8. Water tank.
9. Power cord.
10. Heating indicator.

Operating Instructions

When using the iron for the first time, a small amount of smoke may be emitted due to manufacturing lubricant on the soleplate. This will disappear after a short time.

Filling the Water Tank

The device must be disconnected from the power source. Place the device on a flat, stable surface, open the water tank cover, and fill it with water.

Steam Ironing

Before steam ironing, fill the water tank.

1. Set the required temperature depending on the fabric type.
2. Wait for the heating indicator to light up.
3. When steam is first supplied, a few drops of water may drip from the soleplate.
4. To achieve maximum steam output, adjust the temperature to the ●●● level.
5. To achieve minimum steam output, adjust the temperature to the ●● level.
6. The heating indicator will turn on and off automatically during use. Sometimes a slight noise caused by the pump operation may be heard.

Temperature setting	Fabric type	Steam
●	Delicate fabrics (silk, nylon)	No
●●	Wool	Yes
●●●	Cotton, linen	Yes

Auto-Off Function

The auto-off function is activated after approximately eight minutes of inactivity in the vertical position or approximately thirty seconds in the horizontal position. The indicator lights up to signal activation. As soon as you move the iron, it will turn back on and resume operation. The indicator flashes when the iron is turned on.

Dry Ironing

1. Plug the device into the power source and set the desired temperature.
2. Turn the iron on and press the steam on/off button to switch to “No Steam” mode.
3. In this mode, you can iron clothes, curtains, etc. in the vertical position.
4. For ironing cotton and linen, hold the iron so that its soleplate touches the fabric.
For other more delicate fabrics, hold the iron’s soleplate a few centimeters away from the fabric.

Self-cleaning

It is recommended to perform self-cleaning after 10 hours of use.

1. Fill the water tank with clean water.
2. Set the temperature to the minimum level.
3. Press the self-cleaning button and leave the iron for about 1 minute.
4. Then set the temperature to the maximum level until the steam stops.
5. Disconnect the device from the power source and let it cool down for 30 minutes.

CAUTION: Do not iron clothes during self-cleaning. Hot water will come out of the soleplate.

Troubleshooting Guide

Issue	Possible cause	Solution
Water comes out of the holes in the soleplate when the steam button is pressed	The water tank is overfilled	Drain the water
	The iron is tilted at an angle	Place the iron horizontally
Scale appears on the soleplate	Too much limescale in the water tank	Clean the device. See the “Self-cleaning” section
Steam does not come out when the steam button is pressed	The water tank is empty	Fill the water tank
	The temperature is set to the ● level	Adjust the temperature

Specifications

- Model: DI-2430T.
- Trademark: DEXP.
- Power supply: 220–240 V ~ 50–60 Hz.
- Power cord length: 1.8 m.
- Protection class: I.
- Soleplate material: Ceramic.
- Power: 2400 W.
- Water tank capacity: 380 ml.
- Measuring cup capacity: 200 ml.
- Continuous steam output: 30 g/min.
- Cord type: Y.
- Weight: 1.4 kg.
- IP code: IPX0.
- Scope of application: Domestic.

Package Contents

- Iron.
- Measuring cup.
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Yuyao Tasun Electrical Appliance Co., Ltd.

No.40 Zhennan Road, Ditang Street, Yuyao City, Ningbo, Zhejiang, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____ v.1



