

User Manual

Iron
DI-CE2800E

DEXP

Contents

- Intended Use.....3**
- Safety Precautions3**
- Device Diagram4**
- Control panel5**
- Operating Instructions5**
 - Filling the Water Tank..... 5
 - Temperature Setting 5
 - Dry Ironing 6
 - Steam Ironing 6
 - «Steam Shot» Function 6
 - Vertical Steaming 6
 - Low-Temperature Protection..... 7
 - Auto Shut-Off..... 7
- Cleaning and Maintenance.....7**
- Specifications.....7**
- Package Contents.....7**
- Rules and Conditions for Installation, Storage, Transportation, Sale
(Distribution), and Disposal.....8**
- Warranty Information9**
- Additional Information9**

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


Intended Use

The iron is designed for smoothing wrinkles and creases on clothing.

Safety Precautions


- Use the iron only for its intended purpose.
- Before connecting the device to the power source, ensure that the voltage of your household electrical network matches its technical specifications and is properly grounded. If it does not match, contact the place of purchase.
- Fully unwind the power cord before use.
- Before connecting the device, ensure that the cord and plug are dry.
- Do not leave the plugged-in iron unattended. Unplug the iron from the socket and place it in an upright position when not in use.
- Do not place the iron near flammable items to avoid the risk of fire.
- To avoid burns, do not touch the hot surfaces of the device, and do not allow hot water or steam to come into contact with exposed skin. Do not iron clothes while they are being worn.
- Unplug the iron before filling the water tank or emptying the remaining water.
- Do not immerse the iron in water or any other liquids.
- Do not use the iron if the power cord is damaged. In case of damage, contact an authorized service center.
- Ensure that the power cord does not come into contact with hot surfaces.
- It is recommended to use distilled water. The use of various additives may lead to clogging of the steam holes.
- To avoid overloading the power network, do not use the iron simultaneously with other high-power devices.
- Never pull the cord to disconnect the iron from the power source.
- The iron should be used and stored on a flat and stable surface.
- Do not use the iron if it has been dropped, shows visible damage, or leaks water.
- Do not direct the steam jet at people or animals.
- Before storing the iron, allow it to cool down completely after use.
- Be careful when using the iron near children.
- Do not tilt the iron forward too much, as water may leak from the filling hole.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of device by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- The device is not intended for commercial use.

Device Diagram

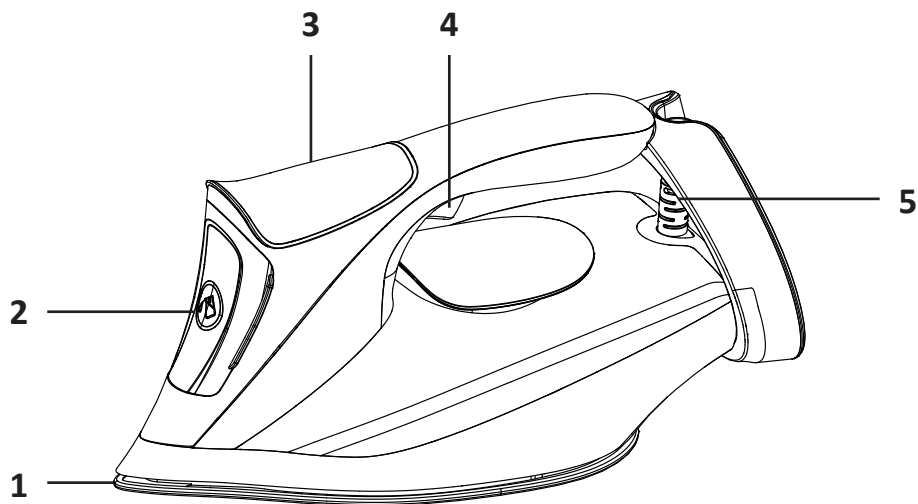

1. Soleplate.
2. Water tank cap.
3. Control panel.
4. Steam shot button.
5. Power cord.

Control panel

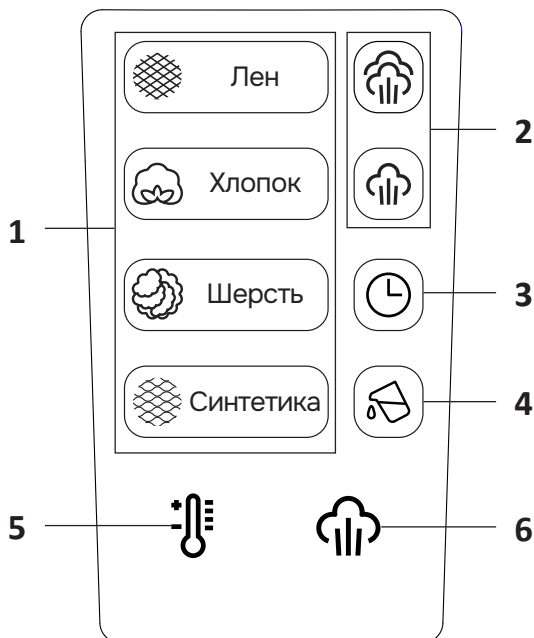

1. Temperature mode indicators.
2. Steam power indicators.
3. Auto-shut-off indicator.
4. Water tank empty indicator.
5. Temperature setting button.
6. Steam power setting button.

Operating Instructions

Filling the Water Tank

- Ensure that the iron is disconnected from the power source.
- Fill the tank with clean, filtered water.
- The water level in the tank must not exceed the maximum mark.

Temperature Setting

Before ironing, sort all items by fabric type. We recommend starting with fabrics that require low temperatures, then moving to those requiring higher temperatures. There are 4 temperature modes available for different types of fabric: «Linen», «Cotton», «Wool», and «Synthetics». To set the required temperature mode, press the «» button.

Temperature Ranges:

- Synthetics: 70–90 °C;
- Cotton: 160–190 °C;
- Wool: 100–150 °C;
- Linen: 180–205 °C.

Dry Ironing

1. Place the iron in an upright position and connect it to the power source.
2. Set the required temperature mode using the «  » button. The indicator of the selected temperature mode will start flashing.
3. Once heated to the required temperature, the light indicator will stop flashing, and you can begin ironing.

Note: Do not press the steam power setting button during dry ironing.

Steam Ironing

1. Set the temperature mode to «Cotton» or «Linen»: the indicator of the selected temperature mode will start flashing.
2. Once heated to the required temperature, the light indicator will stop flashing. After that, select the steam power.
3. Start ironing while holding the handle – steam will be emitted through the holes in the soleplate.

Note: The iron is equipped with a special sensor that detects whether you are holding the handle or not. Thus, steam will not be emitted if you are not holding the handle.

4. Press the steam power setting button again to pause the steam release.

Note: Steam ironing is only available in the «Cotton» and «Linen» modes. Steam ironing is not provided for the «Wool» and «Synthetics» modes.

«Steam Shot» Function

This function allows you to smooth out stubborn wrinkles or other hard-to-iron areas of clothing.

- Set the temperature to «Wool», «Cotton», or «Linen».
- Wait until the iron has fully heated to the required temperature.
- To use the steam shot, press the corresponding button. Press it several times to make the steam release more stable.

Note: To achieve a more powerful steam release, it is recommended to press the button no more than once every 30 seconds.

Vertical Steaming

1. Set the temperature to «Cotton» or «Linen».
2. Wait until the mode indicator stops flashing. Otherwise, the water will not be able to turn into steam.
3. Bring the iron close to the item being steamed (without touching it), and press the steam shot button.
4. Allow 4 seconds between presses to let the steam build up.

Notes

- Smooth out wrinkles on hanging clothes, curtains, and upholstery.
- Ensure that the material is sufficiently ventilated; otherwise, moisture may accumulate and cause mold.
- Ensure that there is nothing behind the item being steamed that could be damaged by steam.
- Ensure that pockets, folds, and cuffs are empty.

Low-Temperature Protection

This appliance is equipped with a low-temperature protection function. Operating at a low temperature may cause water to leak from the soleplate, which will result in wetting the fabric.

Auto Shut-Off

- If the plugged-in iron is left in a horizontal position or on its side, it will automatically shut off after approximately 30 seconds.
- If the plugged-in iron is left in an upright position, it will automatically shut off after approximately 8 minutes.

Cleaning and Maintenance

- Before cleaning, disconnect the iron from the power supply and allow it to cool down.
- Wipe the soleplate with a damp cloth using a liquid (non-abrasive) cleaning agent.
- To avoid damaging the soleplate, do not use concentrated acids and alkalis, or stiff brushes.
- Use a toothpick to clean clogged steam holes.
- The best way to remove burnt synthetic fabric residue from the soleplate is to iron an old, unnecessary cotton cloth for a few minutes.

Specifications

- Model: DI-CE2800E.
- Trademark: DEXP.
- Power supply: 220–240 V ~ 50/60 Hz.
- Power: 2800 W.
- Soleplate material: Ceramic.
- Continuous steam output: 27 g/min.
- Steam shot: 0.7 g/shot.
- Water tank capacity: 320 ml.
- Measuring cup capacity: 100 ml.
- Power cord length: 3 m.
- Vertical steaming.
- Protection class: I.
- Cord type: Y.
- IP code: IPX0.
- Scope of application: Domestic.
- Auto shut-off:
 - Upright position: after 8 min.
 - Horizontal position: after 30 sec.

Package Contents

- Device.
- Measuring cup.
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 36 months

Service Life: 48 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Cixi Sanlian Electric Appliance Co., Ltd.

Dagutang Village, Zhouxiang Town, Cixi City, Zhejiang Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____ V.1



