

User Manual

Wireless Gamepad
G-14

DEXP

Contents

Intended Use	3
Safety Precautions	3
Rechargeable Battery Guidelines (Li-pol/Li-ion)	4
Device Diagram	6
Operating Instructions	7
Wired Connection	7
Wireless Connection.....	7
Charging.....	7
Macro Setup	7
Maintenance and Care	8
Specifications	8
Package Contents	8
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal.....	9
Warranty Information	10
Additional Information.....	10

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The gamepad is an input device designed for controlling characters or gameplay in video games.

Safety Precautions

- Read this manual carefully and keep it for future reference.
- Keep the device out of the reach of children.
- Do not attempt to disassemble or repair the device yourself; doing so may void your warranty. If a malfunction occurs, contact an authorised service center.
- Do not use the device in a humid environment or where it may be exposed to splashes of liquids. Do not immerse the device in water or other liquids, and do not touch the device or the power cord with wet hands.
- Do not store the device in environments with excessively high or low temperatures. Protect the device from exposure to dust, smoke, steam, and direct sunlight.
- Protect the device from drops and impacts.
- Do not place heavy objects on the device.
- Use the device only for its intended purpose.
- Do not touch the USB port and do not insert any foreign objects into it.
- Before using the device, ensure that there is sufficient space around you to avoid striking other people or objects.
- Take a 15-minute break every hour while using the device.
- Do not look directly at the gamepad's light bar when it is flashing.
- Using headphones or earphones at high volume for prolonged periods may cause irreversible hearing damage. Do not increase the volume to drown out ambient noise. Reduce the volume if you cannot hear people nearby. If you experience ringing or discomfort in your ears, or if speech sounds muffled, stop using the headphones and have your hearing checked.
- Do not use the vibration function if you have any injuries or diseases of the joints, muscles, and/or bones of your hands. This function can be disabled in the PS3/PS4 settings.
- If you experience any of the following symptoms, stop using the device. If symptoms persist for an extended period, consult a doctor:
 - Dizziness, nausea, fatigue.
 - Discomfort or pain in the eyes, ears, or hands.

Rechargeable Battery Guidelines (Li-pol/Li-ion)

Dear Customer, please note that this device uses a lithium-based rechargeable battery as its power source. Please carefully read the information below to help extend the life of your battery and prevent undesirable consequences during its operation.


Battery Capacity and Charge-Discharge Cycles

During prolonged storage and use, the rechargeable battery (hereinafter referred to as «the battery») tends to lose its charge and capacity. After 300 charge-discharge cycles (approximately one year of device use), the battery capacity may decrease to 80% of its nominal value. After 400 charge-discharge cycles, the battery capacity may decrease to 60% of its nominal capacity. Partial capacity reduction within these limits and time frames is natural battery wear and is not considered a defect.

Natural Battery Wear

The battery loses charge even when stored separately from the device. The self-discharge rate is approximately 5% per month. Due to their design, batteries are not durable and constantly degrade regardless of whether they are in use. This degradation accelerates at higher temperatures and when the charge level deviates from the «optimal» storage level, which is generally considered to be 40%. In other words, if the battery is not in use, it is advisable to keep the charge level between 40% and 50%.

Battery Capacity and Number of Charge-Discharge Cycles

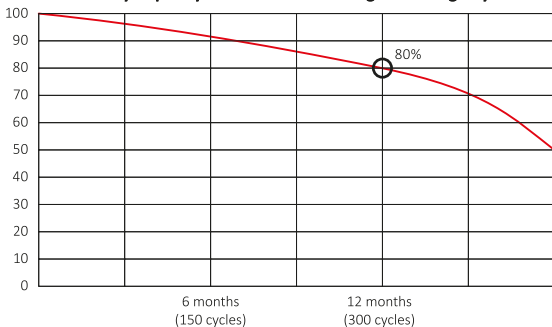

Use Only the Original Charger

The battery's charge and discharge capability is controlled by its built-in Battery Management System (BMS). Forced «fast charging» modes using external chargers for Li-ion batteries are strictly not recommended, as charge and discharge currents are limited.

Li-ion batteries do not have a so-called «memory effect» You can start charging or discharging the battery from any charge level.

Most devices have charge and discharge limits—the controller may prevent the battery charging if, for example, the charge is already above 90%. It will also prevent the battery from fully discharging, protecting the cells from damage. Even if the device is powered by the electrical grids, the Li-ion battery should undergo a full charge/discharge cycle at least once a month (until the «low battery» warning appears). Never let the battery discharge completely. A Li-ion battery degrades quickly if stored in a discharged state for a prolonged period. If this happens, charge it immediately. If the battery remains in a discharged state for two weeks or more, irreversible capacity loss occurs in the cells, which will ultimately lead to battery failure.

Observe the Temperature Requirements

Batteries must be stored in a charged state at temperatures between +15 °C and +35 °C with normal humidity. Batteries do not perform well prolonged operation in very high (above +40 °C) or very low (below -10 °C) ambient temperatures. Do not leave the battery in direct sunlight.

Do Not Disassemble, Burn, or Use Damaged Batteries


Under no circumstances should you attempt to disassemble the battery or charge its individual cells. For repair or maintenance, please contact an authorized service center.

Puncturing or crushing the cells can cause an internal short circuit, leading to fire and explosion. Melting of lithium due to high temperatures can also cause an explosion. If the seal is broken, water or condensed atmospheric moisture can enter the cell, potentially triggering a reaction that releases hydrogen and causes a fire. You can check the current battery status using the battery indicator, which is available on almost all devices (please check its location and operation method at the time of purchase).

CAUTION

- Be careful — damaged batteries may release harmful substances.
- If the battery is replaceable (removable), and you discover problems with its performance, contact a service center (see the warranty period in the warranty information). If the battery is built-in (an integral part of the device), the warranty applies to the device itself. You should also contact a service center. The sooner you bring a malfunctioning battery in for repair, the more likely it can be restored with minimal cost.
- Battery operating time depends on many other factors, and the actual operating time may differ from the stated value.
- Rechargeable batteries have a limited number of charge cycles and may eventually need replacement (see the limited warranty conditions for the battery in the warranty information). Battery operating time depends on the usage mode and settings.

Device Diagram

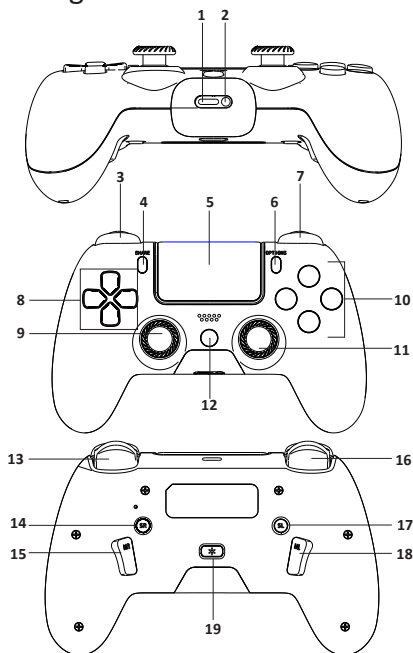

- | | |
|---------------------|-------------------------------|
| 1. Charging port. | 11. Right stick. |
| 2. Headphone jack. | 12. HOME button. |
| 3. L1 button. | 13. R2 button. |
| 4. SHARE button. | 14. SR button. |
| 5. Touchpad*. | 15. MR button. |
| 6. OPTIONS button. | 16. L2 button. |
| 7. R1 button. | 17. SL button. |
| 8. D-pad. | 18. ML button. |
| 9. Left stick. | 19. Backlight control button. |
| 10. Action buttons. | |

*Available only for PS4.

Operating Instructions

Wired Connection

When using the gamepad with a device for the first time, pairing is required. Turn on the device you wish to pair with (e.g., PS4 or PC) and connect the gamepad using a USB cable.

When connecting the gamepad to a PS4, the backlight color depends on the order in which the gamepads are connected. The first connected gamepad glows blue, and subsequent ones glow red, green, and pink, respectively.

Wireless Connection

PS4

Perform a wired connection between the gamepad and the PS4, then disconnect the cable and press the HOME button to establish a wireless connection between the gamepad and the console.

Android/iOS Mobile Devices

Turn on Bluetooth on your device, and then press and hold the SHARE and HOME buttons on the gamepad simultaneously to establish pairing.

Charging

Connect the gamepad using a USB cable to a powered-on device with a USB port. Some devices may not be able to charge the gamepad.

Macro Setup

- Configurable buttons: L1/L2/R1/R2/D-pad and action buttons.
- Maximum number of buttons in a combination: 16.
- To configure macros, press and hold the ML and SL or MR and SR buttons for 3 seconds. The backlight will flash blue, red, and green sequentially. Release the buttons to enter configuration mode. Enter the desired combination of configurable buttons, then press ML or MR to save the settings. During gameplay, press ML/MR to activate the macro, or press and hold ML/MR to activate the macro in a loop.
Note: The configuration mode lasts for 30 seconds, after which the settings are automatically saved.
- To reset macro settings, press and hold the SL and SR buttons. The backlight will flash blue, red, and green in sequence. Continue holding the buttons; after 3 seconds, all settings will be reset.

Maintenance and Care

- Do not leave rubber or vinyl materials on the outer surface of the product for an extended period.
- To clean the device, use a soft, dry cloth.
- Do not use solvents or other chemical agents to clean the device.

Specifications

- Model: G-14.
- Trademark: DEXP.
- Type: Wireless.
- Compatibility: PS4, PS3, PC, Android, iOS.
- Interface: Bluetooth, USB Type-C.
- N buttons: 18.
- Battery: Li-ion, 800 mAh.
- Power supply (input): 5 V = 400 mA.
- Battery life: 180 min.
- Charging time: 2 hours.
- Cord type: X.
- Wireless standard: IEEE 802.15.1.
- Frequency range: 2412–2472 MHz.
- Transmitter power: 3 dBm.
- D-pad.
- X-Input.
- Vibration feedback.
- Scope of application: Domestic.

Package Contents

- Device.
- Charging cable (USB Type-C).
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months.

Service Life: 24 months.

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: SHENZHEN SITAKE ELECTRONIC CO., LTD.

Room 301, Huayong, No. 1 Dongshangang Road, Gushu Community, Xixiang Street, Bao'an District, Shenzhen City, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ v.1

