

User Manual

Blender
HB-900L

DEXP

Contents

Intended Use	3
Safety Precautions	3
Device Diagram	4
Operating Instructions	5
Using the Blending Attachment	5
Using the Chopper Attachment	6
Using the Whisk Attachment	7
Cleaning and Maintenance	8
Specifications	8
Package Contents	8
Troubleshooting Guide.....	9
Reference Guide	10
Processing Speed and Quantity Table	10
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	11
Warranty Information	12
Additional Information	12

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


Intended Use

The blender is designed for chopping food, preparing emulsions, purees, and beverages, as well as whipping cream and performing similar tasks.

Safety Precautions

- Before connecting the device to the power source, ensure that the voltage of your household electrical network matches the technical specifications of the blender.
- Do not use the device if the power cord, plug, or other parts are damaged. Ensure the power cord and plug are kept away from hot surfaces.
- Do not use the device if visible damage is detected. Unplug it immediately and contact an authorized service center. Do not attempt to repair or disassemble the device yourself.
- Do not touch the moving parts of the device.
- Do not use the device outdoors.
- Always unplug the device when not in use, as well as before cleaning, assembling, or disassembling.
- Do not place very hot ingredients (above 60 °C) into the blending jar.
- Do not overfill the blending jar.
- The device is intended for household use only.
- Before connecting the device to the power source, ensure that it is assembled correctly. Before each use, verify that all parts are securely locked in place.
- Do not leave the operating device unattended.
- Do not touch the plug or power cord with wet hands.
- Use only the accessories supplied with the device. Using of any other accessories may pose a risk to life and health and will void your warranty.
- Do not connect the blender to an extension cord that is already powering high-wattage household devices.
- In case of overheating, the device will automatically shut off. If this occurs, unplug the device from the power source.
- Do not place the blending jar, measuring cup, or any other blender accessories in a microwave oven.
- Prevent water from entering the motor unit, and do not immerse it in water.
- Keep hands, hair, loose clothing, kitchen utensils, and other objects away from the rotating whisk and knife blades. Do not touch the moving parts of the device.
- This device is not intended for commercial use.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.

Device Diagram

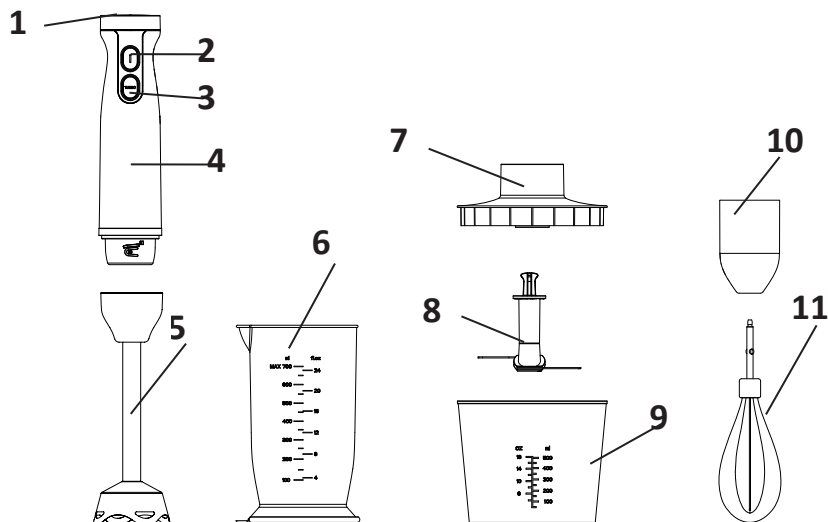


1. Speed control dial.
2. «ON/OFF» button: Operates the device at the selected speed.
3. «TURBO» button: Operates the device at maximum speed.
4. Motor unit.
5. Blending attachment.
6. Blending jar.
7. Chopping bowl lid.
8. Chopper blades.
9. Chopping bowl.
10. Whisk attachment.
11. Whisk.

Operating Instructions


Using the Blending Attachment

This attachment is suitable for preparing sauces, soups, purees, and mixed drinks.

1. Attach the blending attachment to the motor unit and twist it clockwise until it locks into place.
2. Cut the necessary ingredients into small cubes and place them in the blending jar. Add water, milk, or another liquid if necessary.

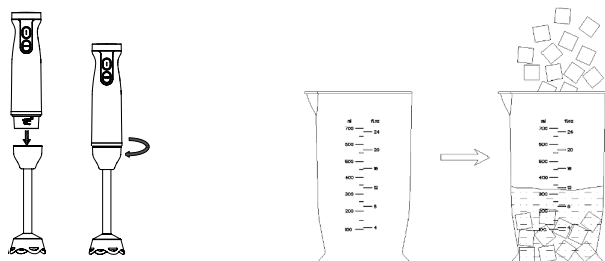

3. Lower the blender into the cup and press and hold the «ON/OFF» or «TURBO» button. Hold the cup steady while blending, moving the blender slowly up and down or in circular motions. To turn off the blender, release the «ON/OFF» or «TURBO» button.

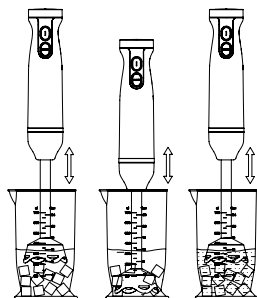

4. After use, unplug the device and remove the attachment by turning it counter-clockwise.


CAUTION

- Do not operate the device continuously for more than 1 minute. After 1 minute of operation, turn off the device and let it cool down for 1 minute.
- If the device has completed 5 cycles of «1 minute of operation / 1 minute of cooling», allow it to cool down for 30 minutes, as the motor heats up significantly.
- Ensure that the attachment is fully submerged in the liquid to avoid splashing.


Using the Chopper Attachment

This attachment is designed for chopping medium-hard foods: meat, vegetables, fruits, nuts, etc.


1. Insert the chopper blades into the bowl.

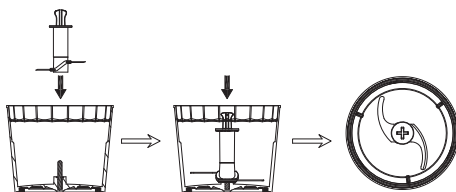

 2. Cut the food into pieces, place it in the bowl, and close it with the lid.

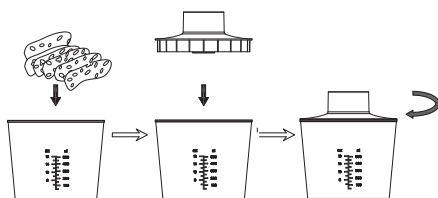

3. Insert the motor unit into the socket on the bowl lid until it clicks into place. Connect the device to the power source. Press and hold the «ON/OFF» or «TURBO» button.

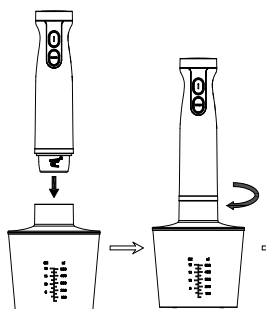

4. Once the desired consistency is reached, turn off the blender. Before removing the contents of the bowl, disconnect the device from the power source.

CAUTION


- Do not place more than 200 g of food in the bowl at one time.
- Do not operate the device continuously for more than 10 seconds. After 10 seconds of operation, turn off the device and let it cool down for 2 minutes.
- After 3 such cycles, allow the device to cool down for 30 minutes, as the motor heats up significantly.

Notes


- It is recommended to use the «TURBO» button when preparing minced meat, as fast processing helps preserve the meat structure and thus improves the taste. Vegetables are best chopped at low speed.
- For making minced meat, it is best to use lean meat without veins, skin, or bones. The fat content should not exceed 1/5 of the total meat, otherwise the chopping quality may be reduced.

Using the Whisk Attachment

1. Insert the whisk into the whisk attachment. Attach the assembly to the motor unit and twist it clockwise until it locks into place.

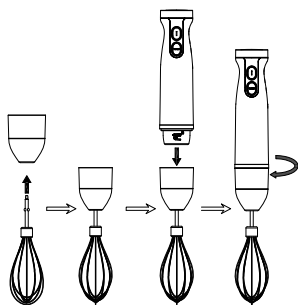

2. Place 2–3 egg whites into the blending jar and immerse the whisk into the jar.

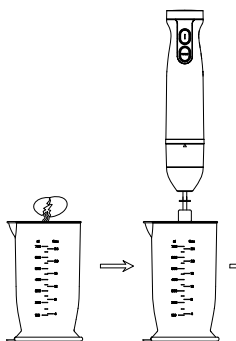

3. Connect the device to the power source. Press and hold the «TURBO» button. To turn off the blender, release the button.
4. After use, disconnect the device from the power source and remove the attachment by twisting it counterclockwise.

Cleaning and Maintenance

- Unplug the device from the power source before cleaning.
- Wipe the motor unit with a dry cloth. Do not immerse the motor unit in water.
- Do not use metal or nylon brushes, household cleaning agents, solvents, or other similar substances to clean the device and its accessories.
- The blending attachment can be rinsed under running water. Do not wash it in a dishwasher.
- Wipe the power cord with a dry cloth.

CAUTION: Be careful when cleaning to avoid injury from the sharp blades.

Specifications

- Model: HB-900L.
- Trademark: DEXP.
- Power supply: 220–240 V ~ 50/60 Hz.
- Max. power: 900 W.
- N speed settings: Standard adjustable mode + «TURBO» mode.
- Chopping bowl capacity: 500 ml.
- Blending jar capacity: 700 ml.
- Body material: Plastic.
- Immersion part material: Stainless steel.
- Protection class: II.
- Cord type: Y.
- Scope of application: Domestic.

Package Contents

- Blender.
- Chopper attachment.
- Blending attachment.
- Blending jar.
- Whisk.
- User manual.

Troubleshooting Guide

Issue	Possible Cause	Solution
The motor runs, but the blades do not rotate	The attachment is not properly secured	Check the attachment and ensure it is properly locked into place
	Food particles are jammed under the blade	Unplug the device, remove the jammed food, and cut it into smaller pieces before processing
The device suddenly stops working during operation	Excessive operating time	Follow the operating instructions regarding continuous run time provided in this manual
	No power supply / device is unplugged	Check the power supply and ensure the device is properly plugged in
Unusual vibration or excessive noise	The attachment is not properly secured	Check the attachment and ensure it is properly locked into place
	Too much food is being processed	Unplug the device, remove the excess food, and process the remaining ingredients at a lower speed
The device does not work	No power supply / device is unplugged	Check the power supply and inspect the power cord for any damage
	Internal electronic board malfunction	Contact an authorized service center for repair

Reference Guide

Processing Speed and Quantity Table

Product	Optimal piece size for processing	Max. capacity for chopper bowl	Max. capacity for blending jar	Processing time (sec)	Speed	Recommended speed dial setting
Beef	2 x 2 x 6 cm	300 g	--	8–10	High	--
Carrot	Cut into 4 pieces		200 g + 300 g (food + water)	40–60	Low	10–12
Garlic	Peeled clove	100 g	--	20–30		4–8
Onion	Cut into 8–16 rings	300 g	--	5–10		0–4
Apples	Cut into 4–8 flat pieces	500 g	200 g + 300 g (food + water)	30–40	High	8–10
Egg whites	--	--	Whites of 3–4 eggs	60		--

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 18 months

Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Zhejiang Lanbao Electrical Appliance Co., Ltd.

899 Kaifa East Road, Zhouxiang Town, Cixi City, Ningbo City, Zhejiang Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

