

User Manual

Multi-purpose baker
MB-8505

DEXP

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


Intended Use

The multi-purpose baker is designed for preparing waffles, sandwiches, and grilled dishes.

Safety Precautions

- Before connecting the device to the power source, ensure that the voltage of your household electrical network matches its technical specifications.
- Use the device only for its intended purpose. Do not use the device outdoors.
- Do not immerse the device or the power plug in water or any other liquid. If the device accidentally falls into water, disconnect it from the power source immediately and have it checked by a qualified specialist before resuming use to avoid the risk of electric shock.
- Do not touch the power plug with wet hands.
- Do not insert any objects into the device housing.
- Do not disassemble the device yourself to avoid electric shock. This device contains no user-serviceable parts. Maintenance and repairs should only be performed by qualified technicians at an authorized service center.
- Do not use accessories not recommended by the manufacturer.
- Do not pull or move the device by the cord. Do not bend or wrap the cord around the device. Also ensure the power cord does not bend over the edge of the countertop or come into contact with hot surfaces or sharp edges.
- The device must be operated on a sturdy, heat-resistant surface.
- The device is not intended for commercial use.
- Always unplug the device when not in use, as well as before cleaning.
- This device is not intended for use by children under 8 years of age or by persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.
- If the power cord is damaged, it must be replaced by a specialist at an authorized service center.
- Do not immerse the device in water or any other liquid to avoid the risk of electric shock.
- Some parts of the device become very hot during operation. Do not touch the cooking plates or the housing to avoid burns. Hold the device only by the handle.
- Do not leave the device unattended while it is operating.

Device Diagram

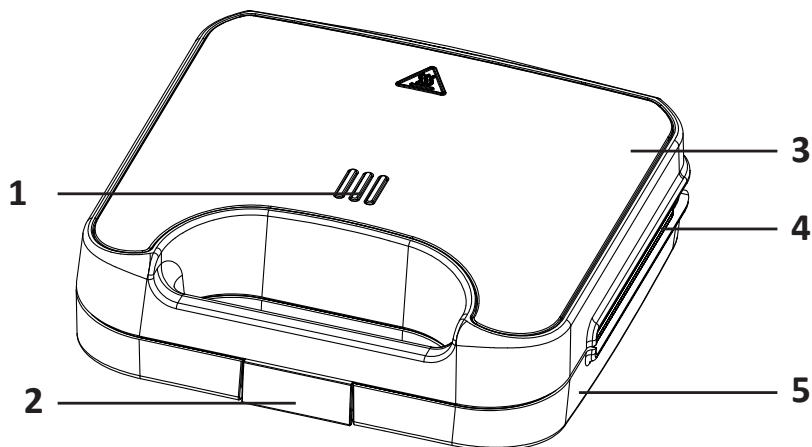

1. Power indicators.
2. Locking latch.
3. Upper housing.
4. Cooking plates.
5. Lower housing.

Specifications

- Model: MB-8505.
- Trademark: DEXP.
- Power supply: 220–240 V, 50 Hz.
- Power: 850 W.
- Plate coating: Non-stick.
- Housing material: Metal, bakelite.
- Cooking surface dimensions: 22.5 × 12.6 cm.
- Power cord length: 75 cm.
- Handle type: Heat-insulated.
- Scope of application: Domestic.
- IP code: Y.
- IP code: IPX0.
- Protection class: I.
- Package Contents: Device, 5 pairs of removable cooking plates (sandwich, grill, Belgian waffle, thin waffle, nut), user manual.

Operating Instructions

1. Before first use, remove all packaging materials from the device and its parts.
2. Clean the device according to the «Cleaning and Maintenance» section of this manual.
3. Open the upper housing and install the desired cooking plates (grill, sandwich, etc.). Close the upper housing.
4. Plug the device into a power outlet. Two red and one green power indicators will light up simultaneously. The device will begin to heat up. The red indicators are heating indicators. They will turn off after 1 minute and 40 seconds, indicating that the initial preheating is complete.
5. Subsequently, the device will cycle its heating every 5 minutes and 10 seconds. The red indicators will light up again during each heating cycle.
6. When the red indicators turn off, release the locking latch and open the upper housing. Place the food or pour the batter onto the cooking plates, then close the upper housing.
7. After cooking is complete, unplug the device from the power supply and open the upper housing. Be careful – the food is very hot. Wait a few minutes for the dish to cool before serving.
8. Allow the device to cool down completely before moving, cleaning, or storing it.

Cleaning and Maintenance

- To extend the service life, clean the device after each use. This will prevent damage to the cooking plates caused by food residue or grease.
- Do not immerse the device in water or any other liquid. Never use abrasive cleaning agents or sharp tools for cleaning, as this may damage the non-stick coating of the plates.
- Use only soft utensils, such as plastic or wooden spatulas.
- Wipe the device with a soft, damp cloth. If necessary, use a mild, non-abrasive detergent.
- After cleaning, wipe off any remaining moisture with a soft, dry cloth. Store the device in a dry, cool place.

Troubleshooting Guide

The indicator does not light up, and the device does not heat up	Check if the plug is inserted firmly into the outlet
	Check if the device is switched on
	Check the integrity of all device components
	If the problem persists, contact an authorized service center
The indicator is on, but the device does not heat up	Check the integrity of the heating element
	Contact an authorized service center
Current leakage	Check if the device is properly grounded
	Contact an authorized service center
Unpleasant odor	Check the cleanliness of the plates; clean and dry them before use
	A slight odour and smoke may appear during first use. This is normal and will disappear over time. Ensure that the room is well ventilated

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months

Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Ningbo Jintai Electrical Appliance Co., Ltd.

No. 588 Xinyi Road, Zhouxiang Town, Cixi City, Ningbo City, Zhejiang Province, P.R. China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

