

User Manual

Wired Speakers 2.0
R630

DEXP

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


Intended Use

Audio speakers are sound reproduction devices designed to connect to a personal computer, laptop, or other devices serving as an audio source, provided that the appropriate audio jacks are available.

Safety Precautions

- To avoid electric shock, do not disassemble or open the device housing. Do not attempt to repair it yourself. Any servicing must be performed only by qualified specialists at an authorized service center.
- Disconnect the device from the power source if it will not be used for an extended period.
- When unplugging the device from the power source, hold only the insulated part of the plug. Do not pull the cord.
- Do not touch the device with wet hands.
- Protect the device from foreign objects entering its housing or openings. Make sure needles, pins, coins, and other small items, as well as insects, do not get inside the device.
- Protect the device from water and other liquids, moisture, extreme temperatures, dust, and dirt.
- Do not install the device in areas with high humidity or dust levels. Do not place containers of liquid (vases, glasses, bottles, etc.) on or near the device.
- Protect the device from overheating. Do not place it near powerful heat sources (heating appliances, etc.), and do not expose it to direct sunlight.
- Do not use benzene-based substances, alcohol, or solvents to clean the device, as they may damage the device and its painted surface. Use only a soft, dry cloth to clean the device.
- Use the device only for its intended purpose.
- To avoid device damage and electric shock, use only undamaged connectors.
- If the device stops working or functions incorrectly, stop using it immediately and contact a service center.
- This device is not intended for commercial use.
- This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.

Device Diagram

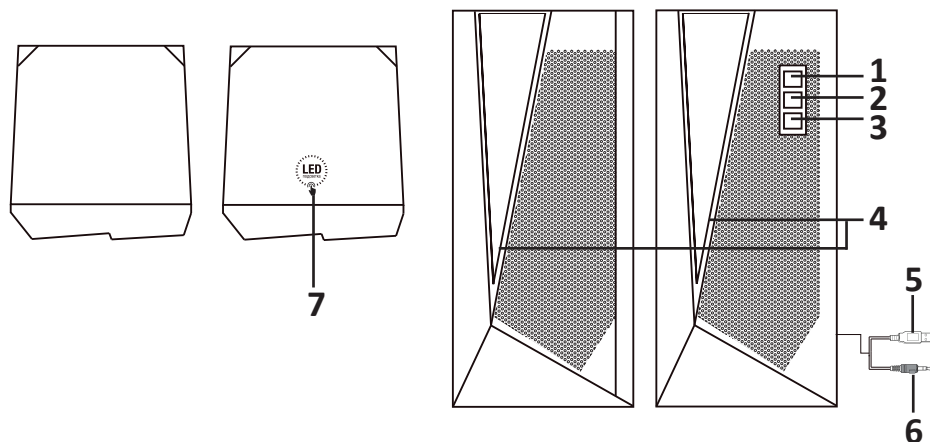

1. Volume up button.
 - In AUX/Bluetooth mode: hold to increase volume.
 - In Bluetooth mode: press to skip to the previous track.
2. Volume down button.
 - In AUX/Bluetooth mode: hold to decrease volume.
 - In Bluetooth mode: press to skip to the next track.
3. Power / backlight control / mode switch button.
 - Hold to turn the device on/off.
 - Press to switch between AUX/Bluetooth mode.
 - Press twice to turn the backlight on/off.
4. LED backlight.
5. USB power cable connector.
6. AUX audio cable input connector.
7. LED backlight switch.
 - Tap to change the backlight color.

Operating Instructions

1. Connect the device's USB connector to a USB port on your computer/laptop or another power source.
2. Connect the device's audio cable to the corresponding port on the source device (media player/smartphone/tablet/PC, etc.).
3. Turn on the device by holding the power button.
4. To turn the backlight on/off, double-press the backlight control button.
5. Press the mode switch button to toggle between AUX and Bluetooth mode.
6. Set the desired volume level using the volume buttons.
7. To change the backlight color, tap the backlight switch.

Playing Music via Bluetooth

1. Connect the device's USB connector to a USB port on your computer/laptop or another power source.
2. Turn on the device.
3. Press the mode switch button to enable Bluetooth mode.
4. Find the device in the list of Bluetooth devices on your mobile phone (device name: DEXP R630) and connect to it.
5. Play music from your mobile device.

Specifications

- Model: R630.
- Trademark: DEXP.
- Total output power: 6 W (2×3 W).
- Power supply: USB (DC 5 V).
- Frequency response: 150 Hz – 20 kHz.
- Signal-to-noise ratio: 60 dB.
- Total harmonic distortion: 1%.
- Impedance: 4 Ω .
- Bluetooth wireless connection.
- Bluetooth version: 5.0.
- Wireless standard: IEEE 802.15.1.
- Frequency range: 2400 – 2483.5 MHz.
- Transmitter power: 10 mW.
- Power cable length: 180 cm.
- Audio cable length: 180 cm.
- Driver diameter: 50 mm.
- Connector: 3.5 mm.
- RGB backlight.

Package Contents

- Device.
- User manual.

Troubleshooting Guide

Issue	Cause	Solution
The device does not turn on	The device is not connected to a power source, or is connected incorrectly	Check the device's connection to the power source
No sound, or sound is too quiet	The volume control is set to the minimum position	Adjust the volume control
	The audio source is connected incorrectly	Connect the signal source correctly
Sound distortion	Input signal amplitude is too high	Adjust the volume at the source device to an optimal level, and also adjust the speaker volume

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months

Service Life: 24 months

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: SHENZHEN FENGMINGYI TECHNOLOGY CO. LTD.

1-3 Building, ShengTong Industry Area, ZhangKengJing, Shenzhen, Guangdong, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

