

User Manual

TV Mount
DTB-200LTTU

DEXP

Contents

Intended Use.....	3
Safety Precautions	3
Dimensions	4
Installation Instructions	5
Hardware Kit	5
Tools	5
Attaching the Adapter to the TV	6
Mounting on the Wall	6
Adjusting the Tilt Angle	7
Specifications.....	8
Package Contents.....	8
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	9
Warranty Information	9
Additional Information	9

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use


This product is designed to mount a TV on various installation surfaces, depending on the model's design.

Safety Precautions

- This mount is intended for indoor use only.
- The mounting kit contains small parts that pose a choking hazard if swallowed. Keep these parts out of the reach of children.
- Use only the screws included with the mount for installation. Tighten them securely, but do not overtighten, as this may damage the components.
- Before assembling the mount and attaching a TV to it, check the VESA standard, screen size, and maximum load rating of the product. Using the mount with a TV that exceeds its rated weight capacity may cause the TV to become unstable and fall.
- Assemble and install the product according to the «Installation Instructions» section. Improper assembly may result in damage or injury.

- Installation may require specialized tools, such as a power screwdriver or drill (not included). The use of personal protective equipment (not included) is recommended. Installation should be performed by a qualified professional.
- This mount is designed for installation on wood-frame walls, solid concrete walls, or brick walls.
- This product is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the product.
- This product is not intended for commercial use.

Dimensions

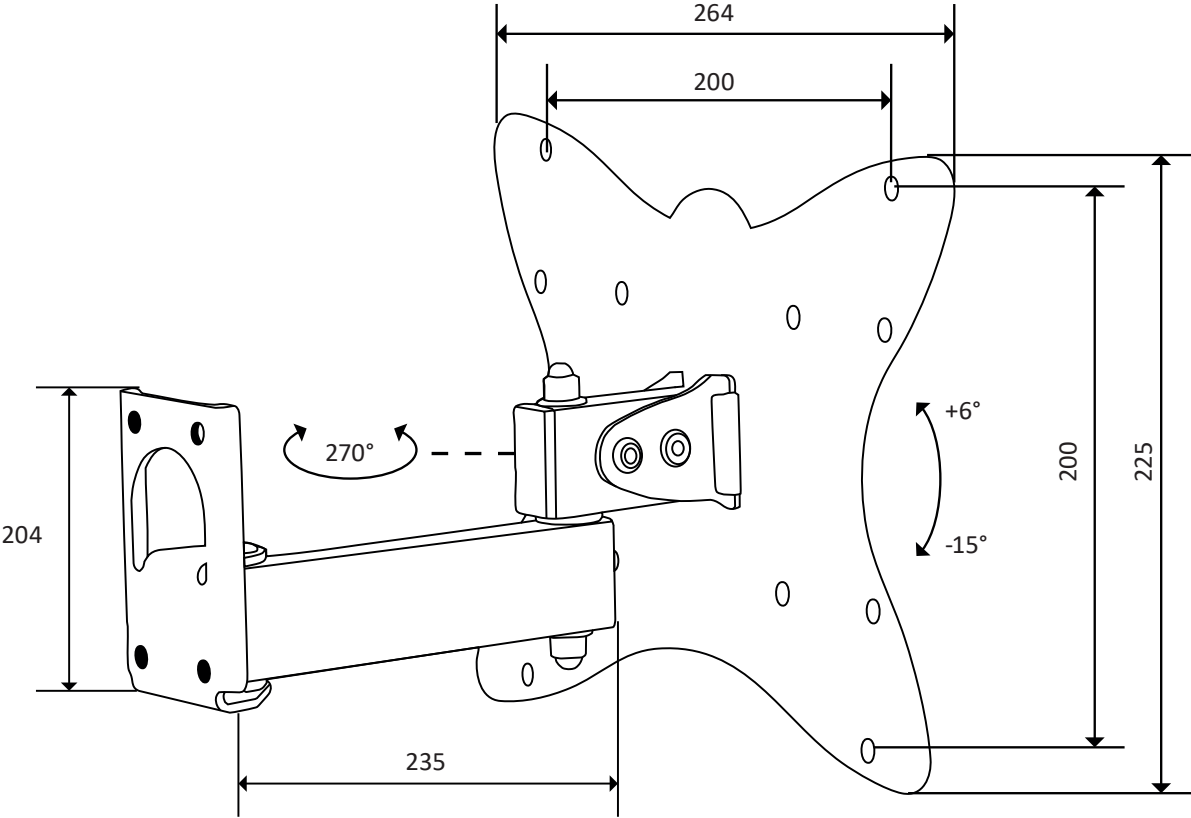


Note: Dimensions are given in millimeters.

Installation Instructions


Hardware Kit



 A (× 4)
5 × 60 mm



B (× 4)
M6 × 16 mm

 


C (× 4)
M6 × 25 mm



D (× 4)
8 × 50 mm


Tools

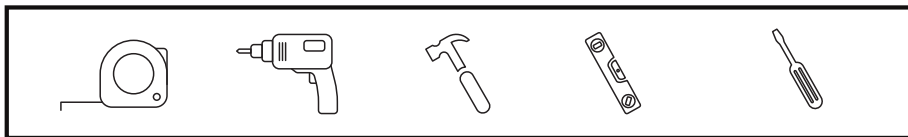

Note: Tools are not included, except for the bubble level.

Attaching the Adapter to the TV

1. Position the adapter against the back of the TV, aligning it with the VESA mounting holes.
2. Secure the adapter using suitable screws (M6 × 16 or M6 × 25, depending on the TV's mounting holes) and a Phillips screwdriver or power screwdriver.

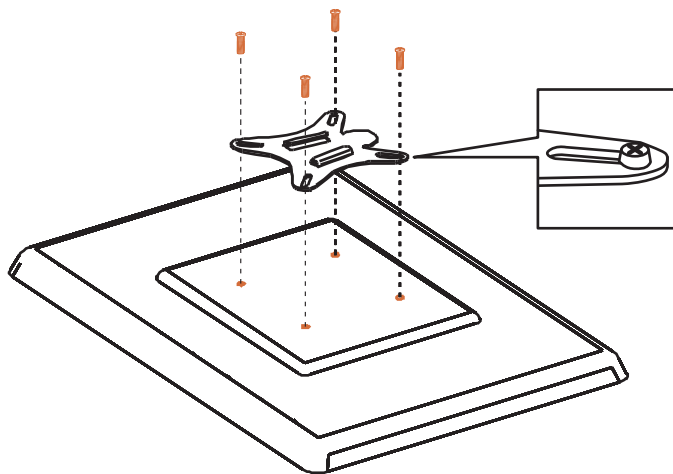

Note: All images in this manual are provided for reference only and may differ from the actual product.


Mounting on the Wall

CAUTION!


- The included hardware is intended solely for mounting the bracket to concrete, brick, or solid wood surfaces.
- Mounting the bracket and hanging the TV must be performed by at least two people.

1. Hold the bracket base against the wall and level it using a spirit level or laser level. Mark the hole positions with a marker.
2. Using a hammer drill, drill holes in the wall matching the length of the wall plugs. Insert the wall plugs into the holes using a hammer.

Note: Wall plugs are only used when mounting on concrete or brick walls. They are not required for wooden walls.

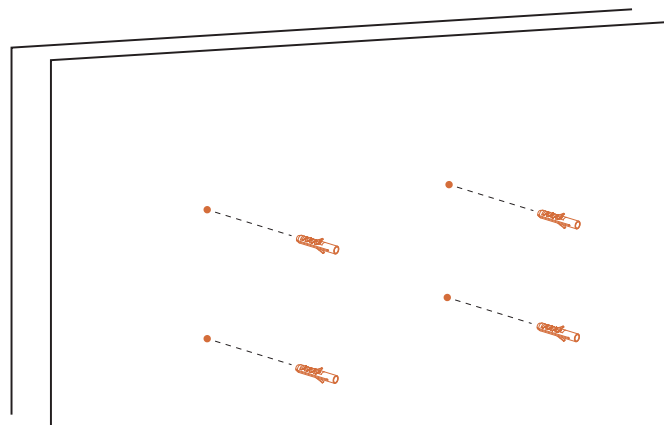

3. Secure the base to the wall using 5 × 60 screws.
4. Hang the TV on the bracket using the adapter previously attached to its rear panel.

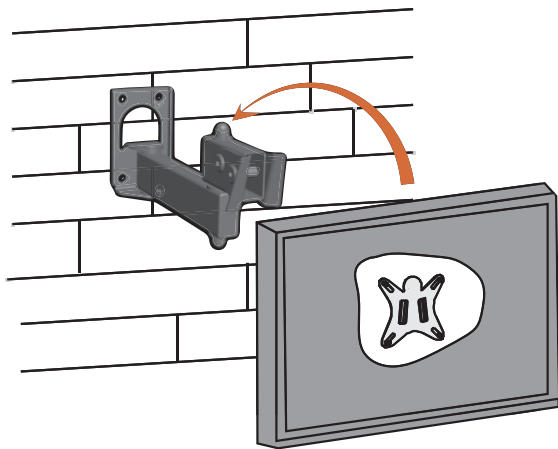

5. Installation is now complete.

Adjusting the Tilt Angle

To ensure comfortable viewing and reduce glare, you can adjust the tilt angle of the TV.

To tilt the TV forward:


1. With one hand, gently press the lower center of the TV.
2. With your other hand, support the top of the TV to smoothly adjust the tilt.

To return the TV to its original position:

1. With one hand, gently press the upper center of the TV.
2. With your other hand, support the bottom of the TV to smoothly adjust the tilt.

Notes

- Use both hands for all adjustments, to ensure safety and precision.
- Avoid sudden or jerky movements.

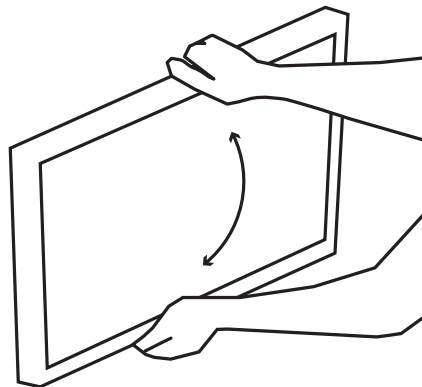

Specifications

- Model: DTB-200LTTU.
- Trademark: DEXP.
- Maximum load: 35 kg.
- Minimum distance from wall: 95 mm.
- Maximum distance from wall: 235 mm.
- Minimum screen size: 10".
- Maximum screen size: 55".
- Compatible VESA standards: 100 × 100; 200 × 100; 200 × 200.
- Adjustment type: Tilt and swivel.
- Upward tilt angle: 6°.
- Downward tilt angle: 15°.
- Swivel angle: 270°.
- Scope of application: Domestic.

Package Contents

- Mount.
- Hardware kit.
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The installation and mounting conditions for the product are described in the «Installation Instructions» section of this user manual.
- The product must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The product must be transported in a dry place.
- The product requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the product must be carried out in accordance with local legislation.
- If product damage is detected, immediately contact an authorized service center or dispose of the product.
- Disposal of this product must be carried out in accordance with local waste recycling regulations. By ensuring proper disposal of this product, you help prevent potential harm to the environment and human health resulting from uncontrolled waste disposal and promote the sustainable reuse of material resources. For more detailed information on collection and disposal points for this product, please contact your local municipal authorities or household waste collection service.

Warranty Information

The manufacturer guarantees the product will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 84 months

Service Life: 84 months

For the up-to-date list of authorized service centers, please visit:
<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: LLC «KS-GRUPP».
268 Pushkinskaya St., Izhevsk, 426008, Russia.

Made in Russia.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____ v.1

