 


RT400 Серия

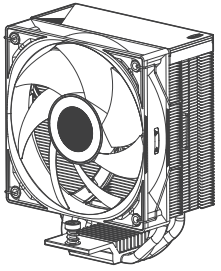

 
01.Содержимое упаковки

A




x1

B

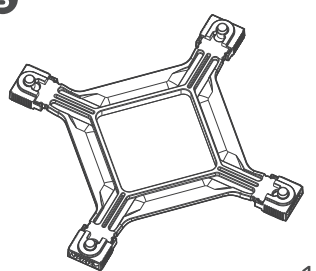

x1

 C

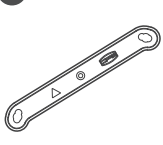


x2

E



x4

 D

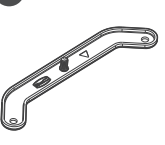

x2

F



x4

G



x1

02.INTEL&AMD

 
AMD AM5/AM4:D, E, F

INTEL LGA 18XX/1700/1200/115X: B, C, E, F


E




F

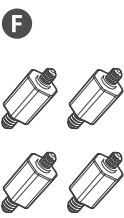


B

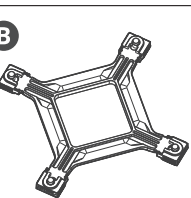 

C

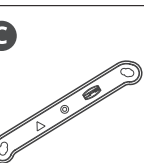 


D

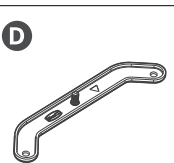 

INTEL


AMD

 03.INTEL&AMD

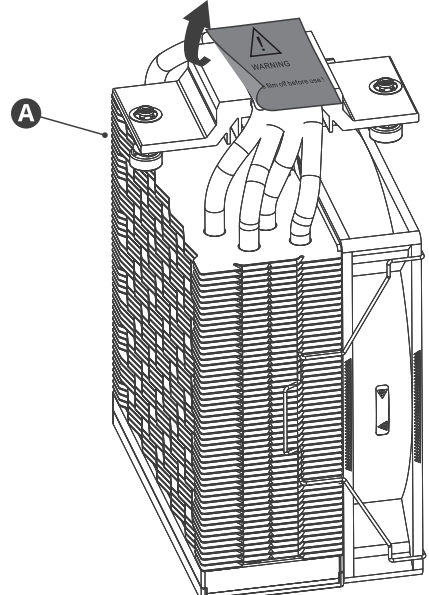


04.INTEL-LGA 18XX/1700/1200/115X

 
1

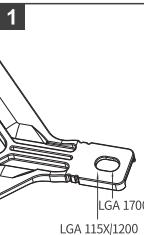


2

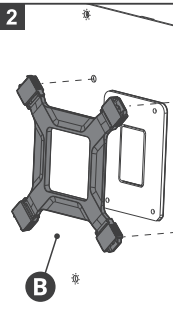 

3

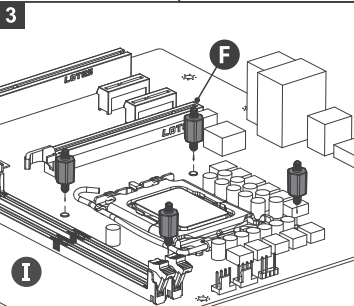 

4

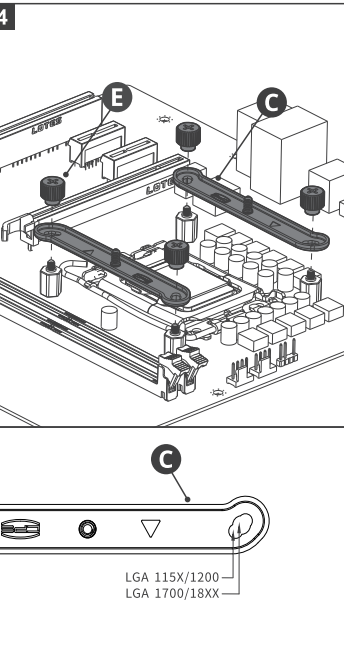 

LGA 1700/18XX

 
LGA 115X/1200

LGA 115X/1200


LGA 1700/18XX

05.INTEL-LGA 18XX/1700/1200/115X


1

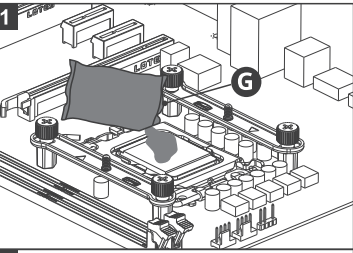

2

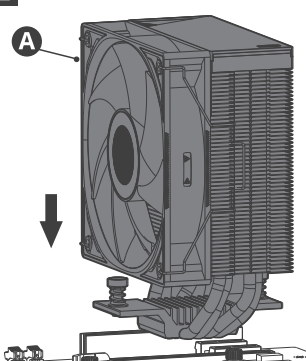 


3

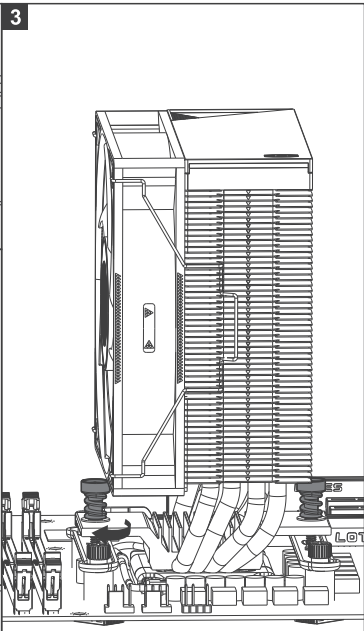 


06.AMD- AM5/AM4

 
1

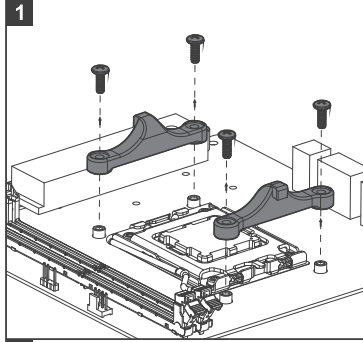

2

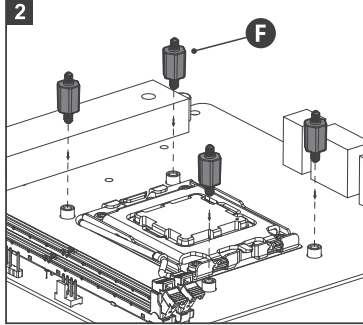 


3

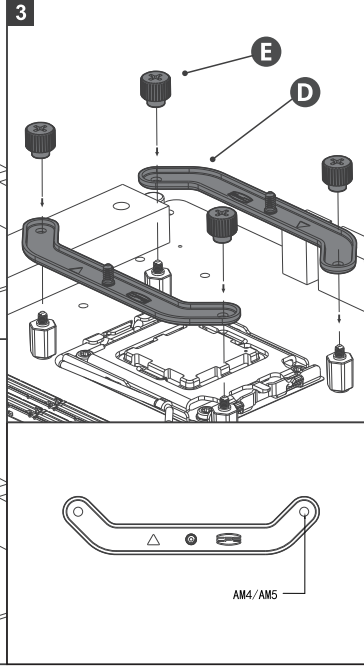 


AM4/AM5

07.AMD- AM5/AM4

 
1

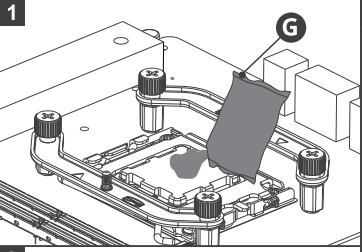


2

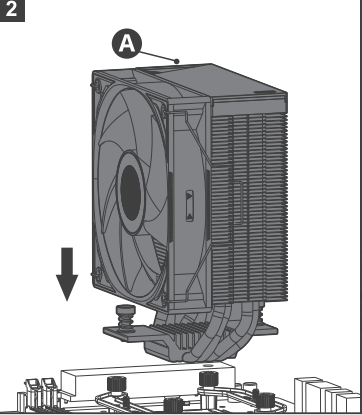 

3

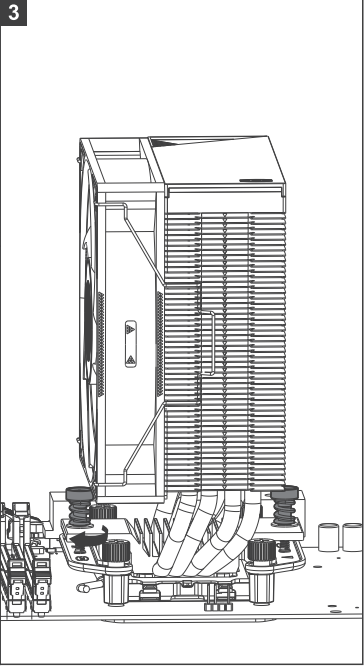 

 
08.INTEL&AMD

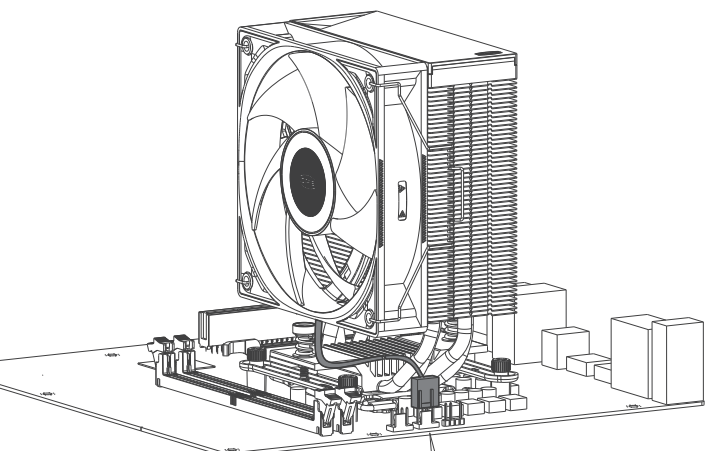



CPU Вентилятор

 09.INTEL&AMD ARGB

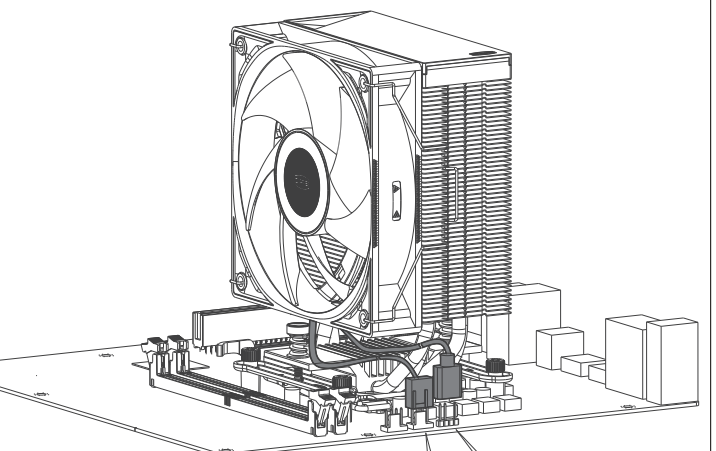





CPU Вентилятор



ARGB

  
10.INTEL USB

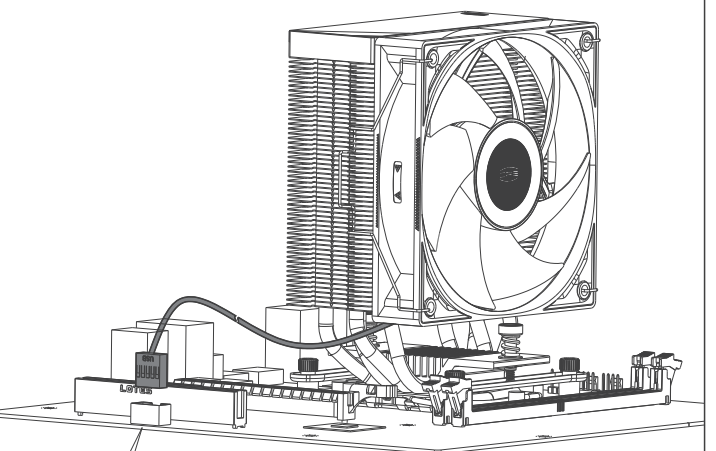




Подключите к 9-контактному USB

  11.AMD USB

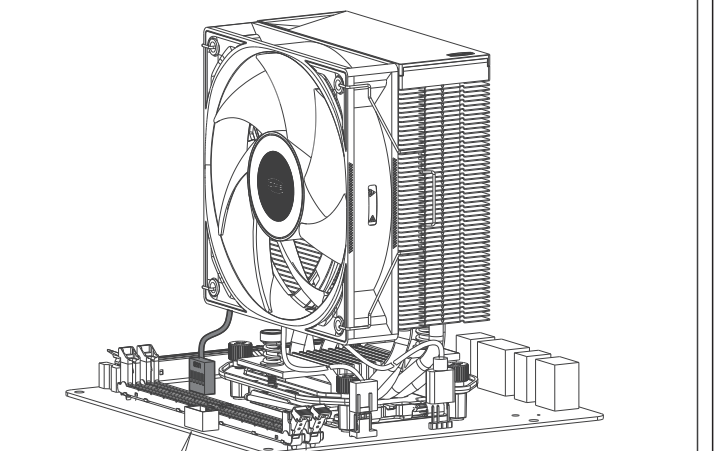



Подключите к 9-контактному USB