




5-052-424-42(1)

©2023 Sony Corporation
Printed in Vietnam
<https://www.sony.net/>



* 5 0 5 2 4 2 4 4 2 * (1)

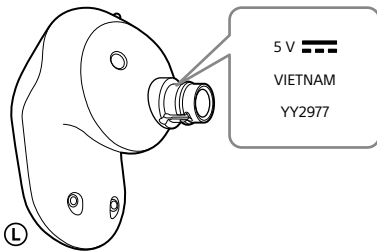

Model: YY2977

The term "product" in this document refers to the unit or its accessories.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.

Do not dismantle, open, or shred secondary batteries.

In the event of a secondary battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions.

After extended periods of storage, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance.

Dispose of properly.

Reduction in the Use of Hazardous Substances in Electrical & Electronic Equipment (Applicable in Republic of India)

This product and its components, consumables, parts or spares comply with the hazardous substances restriction of India's E-Waste (Management) Rules. The maximum allowable concentrations of the restricted substances are 0.1% by weight in homogenous materials for Lead, Mercury, Hexavalent Chromium, Polybrominated Biphenyls (PBB) and Polybrominated Diphenyl Ethers (PBDE), and 0.01% by weight in homogenous materials for Cadmium, except for the exemptions specified in Schedule II of the aforesaid Rules.

High volume may adversely affect your hearing.

Do not use the unit while walking, driving, or cycling. Doing so may cause traffic accidents.

Do not use in hazardous areas unless the surrounding sound can be heard.

If water or foreign matter enters the unit, it may result in fire or electric shock. If water or foreign matter enters the unit, stop use immediately and consult your nearest Sony dealer. In particular, be careful in the following cases.

- When using the unit near a sink or liquid container
Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations

For details on the effects of contact with the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

If the earbud tips are not securely attached, they may fall off and remain inside the ear during use. Make sure that the earbud tips are securely attached before use.

Never insert the USB plug when the unit or charging cable is wet. If the USB plug is inserted while the unit or charging cable is wet, a short circuit may occur due to liquid (tap water, seawater, soft drink, etc.) or foreign matter on the unit or charging cable, and cause abnormal heat generation or malfunction.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

This product has magnet(s). Swallowing magnet(s) could cause serious harm, such as choking hazard or intestinal injuries. If magnets (or a magnet) were swallowed, consult a doctor immediately. Keep this product away from children or other supervised individuals to prevent accidental ingestion.

There is a danger that this unit or its small parts may be swallowed. After use, store the unit in the charging case and store in a location out of reach of small children.

Note about static electricity

If you use the unit when the air is dry, you may experience discomfort due to static electricity accumulated on your body. This is not a malfunction of the unit. You can reduce the effect by wearing clothes made of natural materials that do not easily generate static electricity.

Precautions

The two-dimensional code or the URL on the cover will help you access the help guide that describes useful notes or procedures in details.

On water resistant of the unit

- The charging case and the USB transceiver are not water resistant.
- Unless the unit is used correctly, water may get into the unit and cause fire, electrocution, or malfunctions.
Note the following cautions carefully and use the unit correctly.

To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.

- Do not splash water forcibly into the sound output holes.
- Do not drop the unit into water, and do not use underwater.
- Do not allow the unit to remain wet in a cold environment, as the water may freeze. To prevent malfunction, make sure to wipe off any water after use.
- Do not place the unit in water or use it in a humid place such as a bathroom.
- Do not drop the unit or expose it to mechanical shock. Doing so may deform or damage the unit, resulting in deterioration of water resistance performance.

On BLUETOOTH® communications

- Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as it may cause an accident:
– in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
- The audio playback on this unit may be delayed from that on the transmitting device, due to the characteristics of Bluetooth wireless technology. As a result, the sound may not be in sync with the image when viewing movies or playing games.

On charging the unit

- Be sure to use the supplied USB Type-C cable.

Notes on wearing the unit

- After use, remove the headphones slowly.
- Because the earbud tips achieve a tight seal in the ears, forcibly pressing them in or quickly pulling them out can result in eardrum damage.
When wearing the earbud tips, the speaker diaphragm may produce a click sound. This is not a malfunction.

Other notes

- If you experience discomfort while using the unit, stop using it immediately.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Specifications

Headset

Power source:

DC 5 V (Using a commercially available USB AC Adaptor)
Using built-in lithium-ion batteries (Product Operation Power: DC 3.85 V)

Operating temperature:

0 °C to 40 °C

Rated power consumption:

1 W (Headset), 3 W (Charging case)

Mass:

Approx. 6.5 g × 2 (Headset (including earbud tips (M)))

Approx. 50 g (Charging case)

Approx. 2.9 g (USB Transceiver)

Included items:

Wireless Noise Canceling Gaming Headset (1)

USB Type-C® cable (USB-A to USB-C®) (1)

Hybrid silicone (copper) rubber earbud tips (SS (2), S (2), M (attached to the unit at the factory)) (2), LL (2))

Charging case (1)

USB Type-C® Transceiver: YY2980 (1)

Documents (1 set)

Communication specification

Communication system:

Bluetooth Specification version 5.3

Output:

Bluetooth Specification Power Class 1.5

Frequency band:

Bluetooth: 2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

Wireless Transmitter Receiver Section:

2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

Design and specifications are subject to change without notice.

System requirements for battery charge using USB

USB AC adaptor:

A commercially available USB AC adaptor capable of supplying an output current of 0.5 A (500 mA) or more.

Recommended Personal Computer OS version

Windows®: Windows 10 or later

Mac: macOS 11 or later

Trademarks

- Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- macOS and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- Sony and INZONE are registered trademarks or trademarks of Sony Group Corporation or its affiliates.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
<https://rd1.sony.net/help/mdr/sl/23/>
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.