

TELESIN


For Hero 11/10/9

Battery Fast Charging box

User Guide

Introduction

Using the fast charging box with the PD20W adapter can fully charge the Telesin Hero 9/10/11 fast charging battery within 90 minutes. The unique box structure design can accommodate 2 batteries and 2 TF cards. Different colored lights will show whether the battery is fully charged.

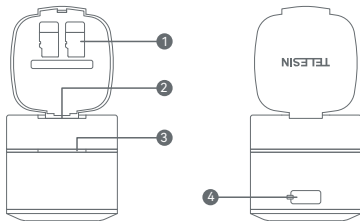

① TF card slot


② Battery slot

③ Indicator

④ Type C

Use

Please put the battery into the battery slot, and then connect the charging box and the PD charger with a TYPE-C cable (two-slot fast charging needs to be at least PD20W), and plug in to charge.

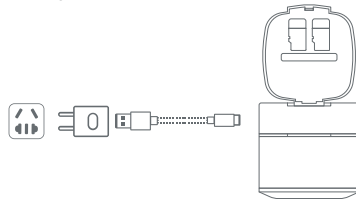

Indicator light status

Red light always on	battery level < 75%, charging
Red light dynamic breathing	battery level ≥ 75%, charging
Green light always on	the battery is fully charged

Specification

Model	GP-FCK-B11	
Applicable Battery	Telesin 9/10/11 Hero Fast charging Battery	
Operating Temperature	0°C~40°C	
Input	Dual slot fast charge	12V=1.66A(PD≥20W)
	One slot for fast charging, one slot for normal charging	PD18W
Output	fast charge	4.4V 2A
	normal charge	4.4V 850mA
<i>Note: If you install a non-fast-charging battery, the charging case can only charge normally.</i>		

Caution

- Only with PD charging head and TELESIN fast charging battery, this charging box can achieve fast charging.
- To fast charge 2 batteries at the same time, you need to use a charging head of PD20W or above;
- If you only need to fast charge 1 battery, you only need to use the PD18W or above charging head;
 - At this point, if you connect the PD18W charger first and then insert the battery, the first battery you put in will be fast charged first.
 - If you put the battery in first and then connect the PD18W charger, the charging box will randomly select one of the batteries to charge first.
- Place the charger in a stable position when in use and take care of the insulation and fire protection.

Disclaimer

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that Telesin Digital Co.,Ltd ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations.

