

ROGUE

WIRELESS GAMEPAD



Contents

Intended Use	3
Safety Precautions	3
Rechargeable Battery Guidelines (Li-pol/Li-ion)	3
Specifications	6
Package Contents	6
Device Diagram	7
Connection	9
Mute Function.....	9
Backlight Control	9
Macro Setup.....	10
FAQ	10
Driver	11
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	11
Warranty Information	12
Additional Information	12

Wireless Gamepad ARDOR GAMING Rogue

User Manual

Dear Customer,

Thank you for your trust!

Our team fully shares your passion for computer games, which is why we put all our efforts into making your gaming experience unforgettable with our accessories for gamers. Wishing you new victories and the brightest impressions ahead!

Intended Use

The gamepad is an input device designed for controlling characters or gameplay in video games.

Safety Precautions


- Do not disassemble the device for repair or modification, as this will void your warranty and may cause damage to the device.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- Protect the device from drops, shaking, and scratches.
- To avoid short circuits, do not allow the device to come into contact with any liquids, and do not place open containers with liquid near it.
- Do not store the device in humid environments.
- Do not expose the device to high temperatures or hot objects.
- This device is not intended for commercial use.

Rechargeable Battery Guidelines (Li-pol/Li-ion)

Dear Customer, please note that this device uses a lithium-based rechargeable battery as its power source. Please carefully read the information below to help extend the life of your battery and prevent undesirable consequences during its operation.

Battery Capacity and Charge-Discharge Cycles

During prolonged storage and use, the rechargeable battery (hereinafter referred to as «the battery») tends to lose its charge and capacity. After 300 charge-discharge cycles (approximately one year of device use), the battery capacity may decrease to 80% of its nominal value. After 400 charge-discharge cycles, the battery capacity may decrease to 60% of its nominal capacity. Partial capacity reduction within these limits and time frames is natural battery wear and is not considered a defect.

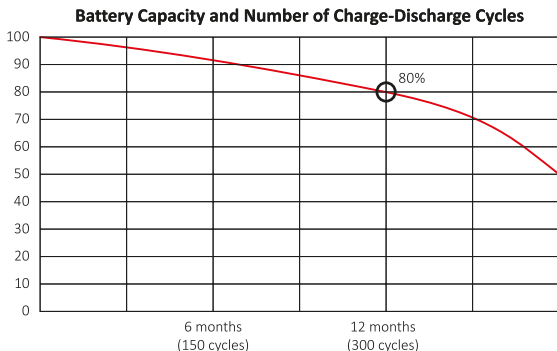

Natural Battery Wear

The battery loses charge even when stored separately from the device. The self-discharge rate is approximately 5% per month. Due to their design, batteries are not durable and constantly degrade regardless of whether they are in use. This degradation accelerates at higher temperatures and when the charge level deviates from the «optimal» storage level, which is generally considered to be 40%. In other words, if the battery is not in use, it is advisable to keep the charge level between 40% and 50%.

Use Only the Original Charger

The battery's charge and discharge capability is controlled by its built-in Battery Management System (BMS). Forced «fast charging» modes using external chargers for Li-ion batteries are strictly not recommended, as charge and discharge currents are limited. Li-ion batteries do not have a so-called «memory effect» You can start charging or discharging the battery from any charge level.

Most devices have charge and discharge limits—the controller may prevent the battery charging if, for example, the charge is already above 90%. It will also prevent the battery from fully discharging, protecting the cells from damage. Even if the device is powered by the electrical grids, the Li-ion battery should undergo a full charge/discharge cycle at least once a month (until the «low battery» warning appears). Never let the battery discharge completely. A Li-ion battery degrades quickly if stored in a discharged state for a prolonged period. If this happens, charge it immediately. If the battery remains in a discharged state for two weeks or more, irreversible capacity loss occurs in the cells, which will ultimately lead to battery failure.

Observe the Temperature Requirements

Batteries must be stored in a charged state at temperatures between +15 °C and +35 °C with normal humidity. Batteries do not perform well prolonged operation in very high (above +40 °C) or very low (below -10 °C) ambient temperatures. Do not leave the battery in direct sunlight.

Do Not Disassemble, Burn, or Use Damaged Batteries

Under no circumstances should you attempt to disassemble the battery or charge its individual cells. For repair or maintenance, please contact an authorized service center.

Puncturing or crushing the cells can cause an internal short circuit, leading to fire and explosion.

Melting of lithium due to high temperatures can also cause an explosion. If the seal is broken, water or condensed atmospheric moisture can enter the cell, potentially triggering a reaction that releases hydrogen and causes a fire. You can check the current battery status using the battery indicator, which is available on almost all devices (please check its location and operation method at the time of purchase).

CAUTION

- Be careful — damaged batteries may release harmful substances.
- If the battery is replaceable (removable), and you discover problems with its performance, contact a service center (see the warranty period in the warranty information). If the battery is built-in (an integral part of the device), the warranty applies to the device itself. You should also contact a service center. The sooner you bring a malfunctioning battery in for repair, the more likely it can be restored with minimal cost.
- Battery operating time depends on many other factors, and the actual operating time may differ from the stated value.
- Rechargeable batteries have a limited number of charge cycles and may eventually need replacement (see the limited warranty conditions for the battery in the warranty information). Battery operating time depends on the usage mode and settings.

Specifications


- Model: Rogue
- Trademark: ARDOR GAMING
- Power supply: 5 V = 500 mA
- Operating current: 110–200 mA
- Maximum operating current: 500 mA
- Battery type: Li-ion
- Battery capacity: 1000 mAh
- Cable connector: USB Type-C
- Cable length: 1 m
- Battery life: 6–8 hours
- Charging time: 3 hours
- Bluetooth version: 5.3
- Bluetooth standard: IEEE 802.15.1
- Frequency range: 2402–2480 MHz
- Transmitter power: <4 dBm
- Compatibility: PlayStation 5, PC, Android™, iOS
- Dimensions: 159.8 × 105.9 × 68.1 mm
- Weight: 250±10 g
- Scope of application: Domestic


Package Contents

- Device
- USB Type-C cable
- User manual

*Android is a registered trademark of Google LLC

Device Diagram

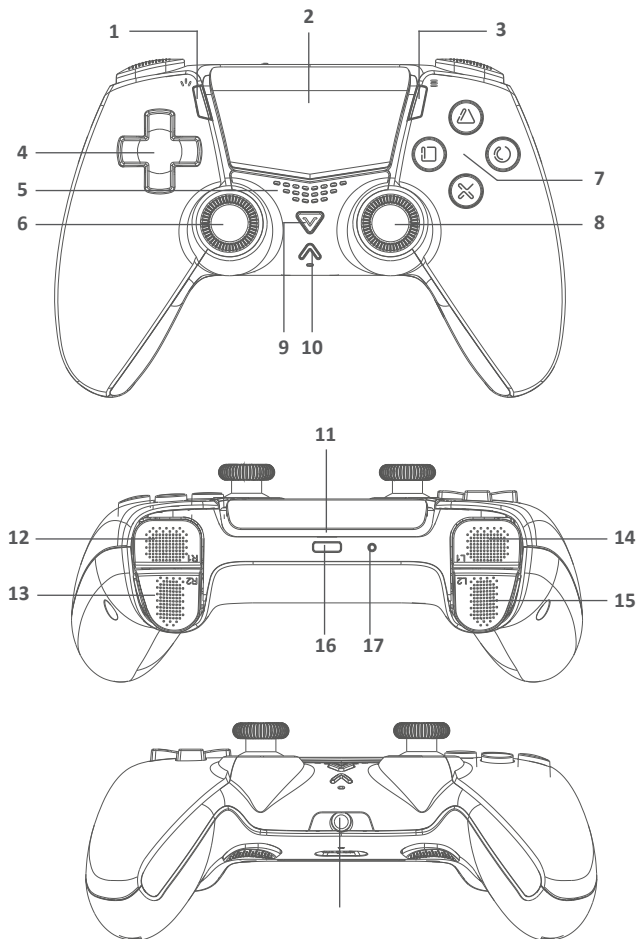

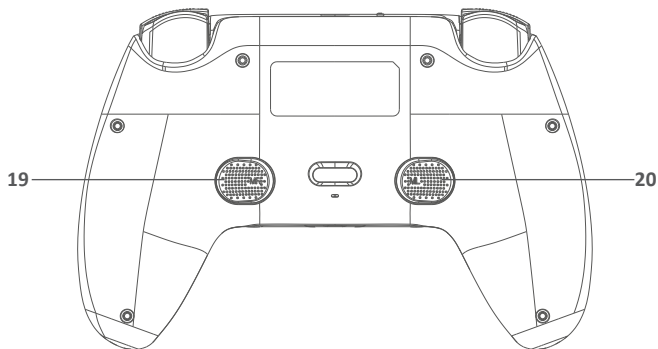

1. «Share» button
2. Touchpad
3. «Options» button
4. D-pad
5. Speaker
6. Left stick, «L3» button
7. Action buttons «□» / «△» / «○» / «×»
8. Right stick, «R3» button
9. «Home» button
10. Mute button
11. Light bar
12. Right bumper «R1»
13. Right trigger «R2»
14. Left bumper «L1»
15. Left trigger «L2»
16. USB port
17. Reset button
18. 3.5 mm audio jack
19. «MR» button
20. «ML» button

Connection

PS5

1. Connect the controller to the PS5 console using the included Type-C cable. Then press the «Home» button on the gamepad — the gamepad's light bar will turn on, indicating a successful connection.
2. Disconnect the cable and press the «Home» button to connect to the console wirelessly.
3. To reconnect (if the gamepad does not respond to a short press of «HOME» or if the console no longer detects the gamepad), press and hold the «HOME» button until the light bar starts flashing.

PC (for Steam)

Connect the gamepad to the PC's USB port using the cable — the light bar will turn on. By default, the gamepad will operate in PS5 mode, and the PC will recognize it as a «DualSense Wireless Controller».

In this mode, the gamepad supports Steam features and headphone connectivity.

iOS / Android

Press and hold the «Share» + «Home» buttons for 3 seconds — the gamepad will enter pairing mode, and the light bar will start flashing. In the Bluetooth settings of the paired device, select «DualSense Wireless Controller» and tap to connect. Upon successful connection, the light bar will remain steadily lit.

CAUTION

- The gamepad supports connection to Apple devices with iOS 13.0 and above.
- When connected via Bluetooth, gamepad functions may be limited: pressing certain buttons and some games may not be supported.

Mute Function

- Briefly press the (⏏) button to toggle the headset microphone on/off. The indicator below the button will light up or turn off accordingly.
- Press and hold the Mute button for 2 seconds to mute all audio output from the device. The indicator below the mute button will start flashing. Press the Mute button again to restore audio — the indicator will turn off.

Note: The device does not have a built-in microphone.

Backlight Control

- To turn off the backlight of the action buttons (⏏ / ⬆ / ⬇ / ⏏), press and hold «OPTIONS» + the Left button on the D-pad.
- To turn on the backlight of the action buttons (⏏ / ⬆ / ⬇ / ⏏), press and hold «OPTIONS» + the Right button on the D-pad.

Macro Setup

This function allows a single button press to trigger a sequence of commands (multiple button presses).

«ML» Button

Press and hold the Touchpad + «ML» simultaneously and release when the light bar starts flashing. Press and hold the desired combination of action buttons you want to record (e.g., «L1», «R1», «○», «×»), then press the «ML» button again. After successful configuration, the light bar will return to its normal state, and the «ML» button will execute the recorded combination when pressed.

«MR» Button

Press and hold the Touchpad + «MR» simultaneously and release when the light bar starts flashing. Press and hold the desired combination of action buttons you want to record (e.g., «L1», «R1», «○», «×»), then press the «MR» button again. After successful configuration, the light bar will return to its normal state, and the «MR» button will execute the recorded combination when pressed.

FAQ

1. Is a Bluetooth adapter included in the package?

No, a Bluetooth adapter is not included in the package. The device's package contents are listed on page 6 of this manual.

2. The gamepad has a built-in speaker. How do I output audio to the device?

The gamepad supports audio playback only when connected to a PS4 or PS5 console. On other platforms (e.g., Windows, Android/iOS), audio output via the speaker is not available.

3. How do I connect the gamepad to a PC via Bluetooth?

You need to press the «Share» + «Home» buttons to enable Bluetooth on the gamepad, then select the gamepad from the list of available devices.

4. How do I configure audio output through headphones connected to the gamepad?

After connecting wired headphones to the gamepad, the sound will be routed to the headphones automatically; no additional configuration is required. If you need to adjust the volume, adjust it in the game or gaming console settings.

5. How do I monitor the battery level and know when the gamepad is low on charge?

The gaming platform displays a low battery warning on the screen. While charging, the light bar will pulse orange; once fully charged, the backlight will turn off.

Driver

Vibration Level Adjustment

After installing the driver, you can adjust the vibration level. There are 4 vibration levels available in total: 100% — 70% — 30% — 0% (no vibration).

- To increase the vibration level: move the left stick up while simultaneously pressing the touchpad — the vibration level will increase by one step.
- To decrease the vibration level: move the left stick down while simultaneously pressing the touchpad — the vibration level will decrease by one step.

Calibration After Driver Installation

If the light bar starts flashing after installing the driver, the gamepad must be calibrated. To do this:

1. Press the «L2» and «R2» buttons 3 times to start the calibration process.
2. Rotate the left and right joysticks of the gamepad for 2–3 full rotations.
3. Place the gamepad on a flat surface and press the «X» button to complete the calibration.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months.

Service Life: 24 months.

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Targetever (Guangdong) Technology Co., Ltd.

Building 10, Floors 3 & 6-11th, and Building 11, Floors 1 and 3, 6-11th, Lang Yuan, 16 Chenghai Avenue, Chenjiang Street, Zhongkai High-Tech Zone, Huizhou, Guangdong Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____ v.1





LEARN MORE:
ARDOR-GAMING.COM
VK.COM/ARDOR_GAMING

