

User Manual

Wireless Gamepad
G-15

DEXP

Contents

Intended Use	3
Safety Precautions	3
Rechargeable Battery Guidelines (Li-pol/Li-ion).....	3
Device Diagram	6
Operating Instructions	7
Android (Standard Mode).....	7
Android V3 (Direct Play Mode)	7
Xbox Wireless Mode for Android and iOS version 13.0 and above	8
MFI Mode for iOS version 13.0 and above	8
Nintendo Switch.....	9
PS3/PS4.....	9
Wired PC Connection.....	10
Turbo Function.....	10
Sleep Mode	10
Power Off.....	10
RGB Backlight Control.....	10
Reset Settings.....	10
Screenshot.....	11
Troubleshooting Guide	11
Specifications	12
Package Contents	12
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal.....	13
Warranty Information	14
Additional Information.....	14

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The gamepad is an input device designed for controlling characters or gameplay in video games.

Safety Precautions

- Do not attempt to disassemble or repair the device yourself; doing so may void your warranty. If a malfunction occurs, contact an authorised service center.
- Do not use the device in a humid environment or where it may be exposed to splashes of liquids. Do not immerse the device in water or other liquids, and do not touch the device or the power cord with wet hands.
- Protect the device from drops and impacts, as well as from dust, smoke, and steam.
- Use the device only for its intended purpose.


Rechargeable Battery Guidelines (Li-pol/Li-ion)

Dear Customer, please note that this device uses a lithium-based rechargeable battery as its power source. Please carefully read the information below to help extend the life of your battery and prevent undesirable consequences during its operation.

Battery Capacity and Charge-Discharge Cycles

During prolonged storage and use, the rechargeable battery (hereinafter referred to as «the battery») tends to lose its charge and capacity. After 300 charge-discharge cycles (approximately one year of device use), the battery capacity may decrease to 80% of its nominal value. After 400 charge-discharge cycles, the battery capacity may decrease to 60% of its nominal capacity. Partial capacity reduction within these limits and time frames is natural battery wear and is not considered a defect.

Battery Capacity and Number of Charge-Discharge Cycles

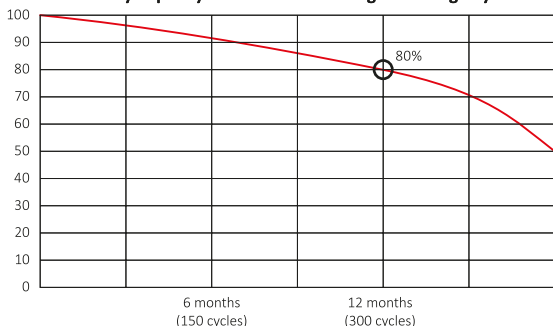

Natural Battery Wear

The battery loses charge even when stored separately from the device. The self-discharge rate is approximately 5% per month. Due to their design, batteries are not durable and constantly degrade regardless of whether they are in use. This degradation accelerates at higher temperatures and when the charge level deviates from the «optimal» storage level, which is generally considered to be 40%. In other words, if the battery is not in use, it is advisable to keep the charge level between 40% and 50%.

Use Only the Original Charger

The battery's charge and discharge capability is controlled by its built-in Battery Management System (BMS). Forced «fast charging» modes using external chargers for Li-ion batteries are strictly not recommended, as charge and discharge currents are limited.

Li-ion batteries do not have a so-called «memory effect» You can start charging or discharging the battery from any charge level.

Most devices have charge and discharge limits—the controller may prevent the battery charging if, for example, the charge is already above 90%. It will also prevent the battery from fully discharging, protecting the cells from damage. Even if the device is powered by the electrical grids, the Li-ion battery should undergo a full charge/discharge cycle at least once a month (until the «low battery» warning appears). Never let the battery discharge completely. A Li-ion battery degrades quickly if stored in a discharged state for a prolonged period. If this happens, charge it immediately. If the battery remains in a discharged state for two weeks or more, irreversible capacity loss occurs in the cells, which will ultimately lead to battery failure.

Observe the Temperature Requirements

Batteries must be stored in a charged state at temperatures between +15 °C and +35 °C with normal humidity. Batteries do not perform well prolonged operation in very high (above +40 °C) or very low (below -10 °C) ambient temperatures. Do not leave the battery in direct sunlight.

Do Not Disassemble, Burn, or Use Damaged Batteries


Under no circumstances should you attempt to disassemble the battery or charge its individual cells. For repair or maintenance, please contact an authorized service center.

Puncturing or crushing the cells can cause an internal short circuit, leading to fire and explosion. Melting of lithium due to high temperatures can also cause an explosion. If the seal is broken, water or condensed atmospheric moisture can enter the cell, potentially triggering a reaction that releases hydrogen and causes a fire. You can check the current battery status using the battery indicator, which is available on almost all devices (please check its location and operation method at the time of purchase).

CAUTION

- Be careful — damaged batteries may release harmful substances.
- If the battery is replaceable (removable), and you discover problems with its performance, contact a service center (see the warranty period in the warranty information). If the battery is built-in (an integral part of the device), the warranty applies to the device itself. You should also contact a service center. The sooner you bring a malfunctioning battery in for repair, the more likely it can be restored with minimal cost.
- Battery operating time depends on many other factors, and the actual operating time may differ from the stated value.
- Rechargeable batteries have a limited number of charge cycles and may eventually need replacement (see the limited warranty conditions for the battery in the warranty information). Battery operating time depends on the usage mode and settings.

Device Diagram

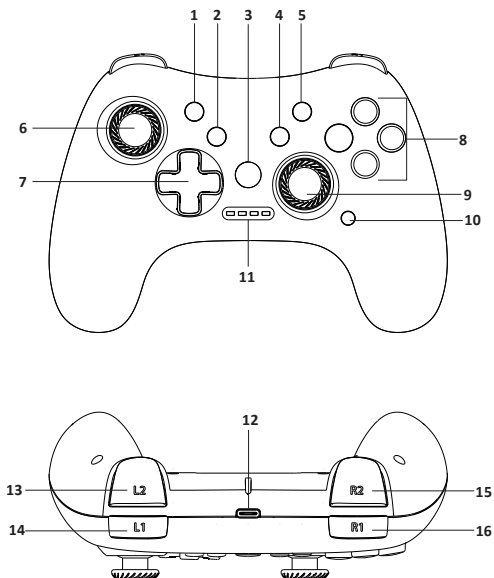

1. -/SHARE/SELECT button.
2. TURBO button.
3. HOME button.
4. SCREEN button.
5. +/SHARE/START button.
6. Left stick.
7. D-pad.
8. Action buttons.

9. Right stick.
10. Backlight control button.
11. Indicators.
12. Charging port.
13. L2 button.
14. L1 button.
15. R2 button.
16. R1 button.

Operating Instructions

Android (Standard Mode)

Launch games from the Google Play Store that support the gamepad in this mode.

1. Press the left action button and the HOME button to turn on the gamepad — the LED3 indicator will flash, and the gamepad will enter pairing mode.
2. Turn on Bluetooth on your Android device and select the gamepad from the list of available devices to pair. Upon successful pairing, the LED3 indicator will remain steadily lit.
3. To reconnect, press the HOME button to turn on the gamepad — pairing will be established automatically.

Android V3 (Direct Play Mode)

1. Press the bottom action button and the HOME button to turn on the gamepad — the LED1 indicator will flash, and the gamepad will enter pairing mode.
2. Turn on Bluetooth on your Android device and select the gamepad from the list of available devices to pair.
3. After successful pairing, the LED1 indicator will remain steadily lit.

In this mode, after pairing is established, the default button configuration is «No. 1». Select the required configuration according to the specific game.

Configuration No.	Switching Method	LED Indication
№1	 + HOME button	
№2	 + HOME button	
№3	 + HOME button	
№4	 + HOME button	

Editing Button Configuration

The device allows you to save up to 4 button configurations and switch between them during gameplay. For some games, a preset button configuration is available. You can modify or set up a configuration (if none exists) before starting the game. To do this, follow these steps:

1. Go to Google Play and install the «ShootingPlus» app.
2. Open «ShootingPlus».
3. Connect the gamepad to your Android device.
4. Launch the game and press the START button on the gamepad to open the button configuration menu.

5. Assign the gamepad buttons to the on-screen virtual buttons according to your preferences.
6. To apply the changes, press «Save» > «Close».
7. To reset the button settings, open the «ShootingPlus» app and go to «Settings» > «Advanced Settings» > «Reset Device».

Notes

- After resetting, disconnect the gamepad from your device, then pair it again.
- During gameplay, press the SELECT button to view the current button configuration. Press the START button to apply the desired button configuration.
- If you edit configuration No. 1, the new settings will be saved under this number.

Xbox Wireless Mode for Android and iOS version 13.0 and above

1. Press the R1 and HOME buttons to turn on the gamepad — the LED1, LED2, and LED3 indicators will flash, and the device will enter pairing mode.
2. Turn on Bluetooth on your iOS/Android device and select the gamepad from the list of available devices to pair. Upon successful pairing, the LED1, LED2, and LED3 indicators will remain steadily lit.
3. To reconnect, press the HOME button to turn on the gamepad, then select the gamepad from the device's Bluetooth list to connect.

MFi Mode for iOS version 13.0 and above

1. Press the right action button and the HOME button to turn on the gamepad — the LED4 indicator will flash, and the device will enter pairing mode.
2. Turn on Bluetooth on your device and select the gamepad from the list of available devices to pair. Upon successful pairing, the LED4 indicator will remain steadily lit.
3. To reconnect, press the HOME button to turn on the gamepad — pairing will be established automatically.

Applications

You can install the following apps with a collection of games for the gamepad:




Game Controller Apps



Shan Wan MFi

Nintendo Switch

1. Turn on the console and go to the «Controllers» section.

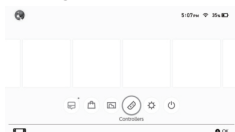

2. Select «Change Grip/Order».



3. Press the L1 and HOME buttons simultaneously — all 4 indicators will flash sequentially, and the device will enter pairing mode. The device will automatically connect to the console in 5–7 seconds*.
4. To reconnect, press the HOME button. If a firmware update or settings reset was performed, pairing must be established again.

PS3/PS4

1. Connect the gamepad to the PS3/PS4 using a cable. The LED1, LED2, and LED3 indicators will remain steadily lit.
2. Press the HOME button to start pairing with the console.
3. If the LED4 indicator remains steadily lit after a few seconds, pairing is successful.
4. Disconnect the cable to establish a wireless connection.
5. To reconnect, press the HOME button to turn on the gamepad — pairing will be established automatically.

Firmware Update

If connection issues occur after a console software update, perform the following steps:

1. Install the «ShootingPlus V3» app by downloading it from Google Play or the App Store.
2. Connect the device with the installed app to the gamepad.
3. Open the Shooting Plus V3 app and select «Firmware Update» from the menu. Follow the on-screen instructions.

*Ensure that the console is not in Airplane Mode.

Wired PC Connection

X-Input

Connect the gamepad to the PC using the cable. Once recognized by the Windows system, the gamepad is ready to use. Indicators LED1, LED2, and LED3 will remain steady.

D-Input

In X-Input mode, press and hold the HOME button to switch to D-Input mode. In this mode, the LED3 indicator will turn on.

Turbo Function

The «Turbo» function can be configured for the L1/L2/R1/R2 buttons and the action buttons.

1. Press the TURBO button and one of the above-mentioned buttons simultaneously to enable the Turbo function.
2. Repeat step 2 to disable the Turbo function.
3. Press the TURBO and  buttons simultaneously to increase the «Turbo» speed.
4. Press the TURBO and  buttons simultaneously to decrease the «Turbo» speed.
5. Press and hold the TURBO button for 5 seconds. Once all 4 indicators flash and the gamepad vibrates, all «Turbo» function settings will be reset.

Sleep Mode

The gamepad will automatically enter sleep mode after 5 minutes of inactivity.

Power Off


Press and hold the HOME button for 3–5 seconds to turn off the gamepad; all indicators will turn off.

RGB Backlight Control

Press the backlight control button to cycle through backlight modes. The mode sequence is as follows: «Breathing» — «Static» (no color change) — Backlight off.

Reset Settings

Restart the gamepad in case of a malfunction after charging or during gameplay. To do this, insert a pin into the RESET hole on the back of the gamepad.

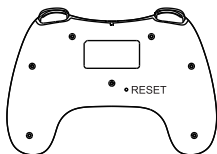



Screenshot

Press the SCREEN button to take a screenshot of the gameplay.

Troubleshooting Guide

1. The LED4 indicator does not flash when the gamepad is connected to the NS console.

Solution: The LED4 indicator does not flash if a wired connection to the console is established. Disable the wired connection function as shown in the images below.

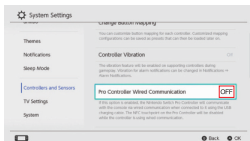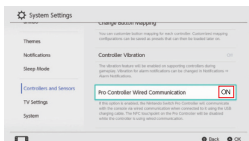

2. The stick gets stuck after prolonged use.
Solution: Press firmly on the stick.
3. The gamepad does not charge fully.
Solution: Turn off the RGB backlight. Consider the power specifications of the device and the power grid during charging.
4. The gamepad is not charging.
Solution: The gamepad will not charge if the temperature is below 2 °C or above 45 °C. Ensure that the ambient temperature is within this range.
5. The gamepad does not turn off after pressing the HOME button, and the backlight remains on.
Solutions:
 - Press RESET (see the «Reset Settings» section).
 - If the gamepad is connected to a mobile device (especially when using the «Keylinker» app), turn off Bluetooth on your mobile device.

Specifications

- Trademark: DEXP.
- Model: G-15.
- Type: Wireless.
- Compatibility: PS4, PS3, PC, Nintendo Switch, Android, iOS.
- Interface: Bluetooth, USB Type-C.
- N buttons: 17.
- Battery: Li-ion, 800 mAh.
- Power supply (input): 5 V = 400 mA.
- Cord type: X.
- Battery life: 5 hours.
- Charging time: 180 min.
- Wireless standard: IEEE 802.15.1.
- Frequency range: 2412–2472 MHz.
- Transmitter power: 3 dBm.
- D-pad.
- X-Input.
- Vibration feedback.
- Scope of application: Domestic.

Package Contents

- Device.
- Smartphone holder.
- Charging cable (USB Type-C).
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months.

Service Life: 24 months.

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: SHENZHEN SITAKE ELECTRONIC CO., LTD.

Room 301, Huayong, No. 1 Dongshangang Road, Gushu Community, Xixiang Street, Bao' an District, Shenzhen City, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ v.1

