



Ergo 8200S

Ergonomic Wireless Silent Mouse




Multi-language Quick Guide


PDF Copyright © KYE SYSTEMS CORP.





Overview

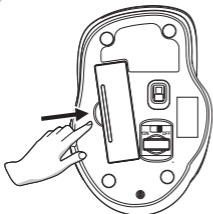

Open Battery Cover

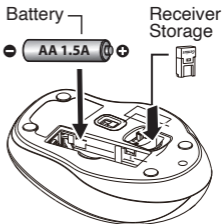

** Battery life may vary based on user and computing conditions*

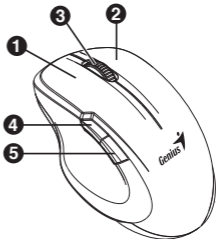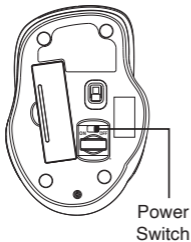


Hardware Installation

1. You can connect the receiver to a USB port of a PC.
2. Install one AA battery in the mouse as instructed.
3. Make sure that you have switched on the power switch underneath the mouse.

Button definitions:

1. **Left Button:** Provides traditional mouse functions like click double click and drag.
2. **Right Button:** Provides traditional mouse click functions.
3. **Middle Button:** Press the “Middle Button” to surf the Internet and Windows documents.
4. **Page up:** Go to last page of Internet Explorer.
5. **Page down:** Go to next page of Internet Explorer

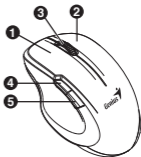

Warning: (Troubleshooting)


1. Do not use the wireless optical/laser mouse on a desk which is made of glass or mirror.
2. If you feel the mouse does not move smooth as usual, it is possible the batteries have lost their charge so you need to replace them. Remember to put the batteries in the correct direction.

Установка оборудования

1. Приемник подключается к порту USB на компьютере.
2. Установите в мышь один элемент питания типоразмера AA, как описано в инструкции.
3. Включите питание на днище мыши.

Заводские настройки

1. **Левая кнопка:** традиционные функции мыши (щелчки, двойные щелчки, перетаскивание).
2. **Правая кнопка:** Традиционные функции правой кнопки мыши
3. Ролик «**Средняя кнопка**»: для поиска в Интернете и в документах Windows.
4. **Страница вверх:** переход к предыдущей странице в Internet Explorer
5. **Страница вниз:** переход к следующей странице в Internet Explorer

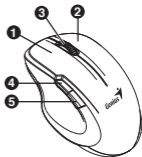

Внимание! (Поиск и устранение неисправностей)


1. Не пользуйтесь беспроводной оптической/лазерной мышью на стеклянных и зеркальных столах.
2. Если мышь двигается не так плавно, как обычно, причина может быть в разряде батареек. Замените их. Соблюдайте полярность.

Жабдықты орнату

1. Қабылдағышты дербес компьютердің USB портына жалғауға болады.
2. Тінтуірге бір АА батареясын салыңыз.
3. Тінтуірдің астындағы қорек қосқышының қосылғанына көз жеткізіңіз.

Зауыттық параметрлер

1. **Сол жақ батырма:** Шерту, қос шертім жасау және жылжытып апару сияқты тінтуірдің әдеттегі жетелерін қамтамасыз етеді.
2. **Оң жақ батырма:** Тінтуірдің әдеттегі шерту жетелерін қамтамасыз етеді.
3. **“Ортаңғы түйме”:** Интернет пен Windows құжаттарында кезек жылжу үшін “сиқырлы аунақша” батырмасын басыңыз.
4. **Бет жоғары:** Internet Explorer шолғышының алдыңғы бетіне барыңыз
5. **Бет төмен:** Internet Explorer шолғышының келесі бетіне барыңыз.

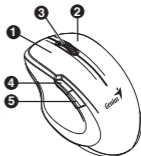

Ескерту: (Ақауларды жою)

1. Әйнек немесе айнадан жасалған үстелде сымсыз оптикалық/лазерлі тінтуірді пайдаланбаңыз.
2. Егер тінтуірдің әдеттегідей жақсы жылжымайтынын байқасаңыз, батареялар зарядының таусылып қалуы және оларды ауыстыру қажет болуы мүмкін. Батареяларды дұрыс бағытта салуды ұмытпаңыз.



KYE Systems Corp.

#492, Sec. 5, Chongxin Rd., Sanchong Dist.,
New Taipei City 241017, Taiwan

Tel: 886-2-2995-6645

Fax: 886-2-2995-6649

Email: support@geniusnet.com.tw (Tech. Support)

http://www.geniusnet.com



Mouse: Ergo 8200S
FCC ID: FSUGMZM6

Dongle M/N: GM-150036/R

FCC ID: FSUGMZLM

Rating: DC 5V \pm 100mA(Max)

www.geniusnet.com | KYE Systems Corp.

MADE IN CHINA



* For actual items, refer to the physical goods contained herein.

* Product storage conditions : Temperature: -20°C~50°C / Humidity : 5%~85%.

12030102400-A