aceline

User Manual

Electric Kettle
EK-P727NN

Contents

Intended Use **3**

Safety Precautions **3**

Specifications **4**

Package Contents **4**

Device Diagram **5**

Operating Instructions **6**
Before First Use 6
Boiling 6
Descaling 6

Maintenance and Care **7**

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal **7**

Warranty Information **8**

Additional Information **8**

Dear Customer,

Thank you for choosing our products.
We are pleased to offer you products and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the product, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The kettle is designed for heating water for household use.

Safety Precautions

- Before connecting the device to the power supply, ensure that your home power supply voltage matches its technical specifications. Connect the device only to a grounded outlet.
- Place the device only on flat, stable surfaces. Do not place it near heat sources (heaters, radiators, etc.) or hot surfaces (electric or gas stoves).
- This device is not intended for commercial use.
- This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.
- Do not immerse the device, power cord, base, or plug in water or other liquids to avoid electric shock.
- Disconnect the device from the power supply by grasping the plug, not the power cord. Do not bend or wrap the cord around the device. Also, do not allow the power cord to drape over the edge of the countertop or touch hot surfaces.
- Exercise caution when handling the device to avoid steam burns.
- Ensure that hot steam from the device does not come into contact with nearby furniture, as this may cause damage over time.
- Do not place the operating device near flammable or explosive substances.
- Do not use the device outdoors.
- Some parts of the device become very hot during operation. Do not touch hot surfaces with your hands; hold the device only by the handle.
- Be careful when moving the kettle with hot water to avoid splashing.
- This device is intended for use in domestic and similar environments, for example: in staff kitchens in shops, offices, and other work environments; in farmhouses, hotels, motels, and other residential environments; in bed and breakfast establishments; in catering.
- Do not use accessories not recommended by the manufacturer to avoid injury or device damage.
- Disconnect the device from the power supply when it is not in use, as well as before cleaning.
- Before turning on the kettle, ensure that the lid is closed. Never attempt to heat water with the lid open.

- Do not turn on the kettle without water or if the water level is below the minimum mark on the scale.
- Do not fill the kettle beyond the specified volume: the water level must not exceed the maximum mark on the scale. Otherwise, water may splash out when boiling.
- Never use the device with a damaged power cord or plug. To replace the cord, contact an authorized service center.
- Do not attempt to repair the device yourself. If any malfunctions are detected, immediately discontinue use and contact an authorized service center. Repair performed by an unqualified person will void the warranty and may lead to extremely dangerous situations for the user.
- Be careful and attentive when using the kettle near children.
- Do not leave the operating device unattended.
- This device is intended only for boiling water. Do not use it to heat other liquids.
- Do not insert any objects or fingers into the openings of the device.


Specifications

- Model: EK-P727NN.
- Trademark: Aceline.
- Power supply: 220–240 V ~ 50–60 Hz.
- Device power: 2000 W.
- Capacity: 1.7 L.
- Body material: Frosted glass.
- Heating element type: Concealed.
- Protection class: I.
- Cord attachment type: Y.
- Power cord length: 0.75 m.
- IP code: IPX0.
- Scope of application: Domestic.

Package Contents

- Device.
- User manual.

Device Diagram

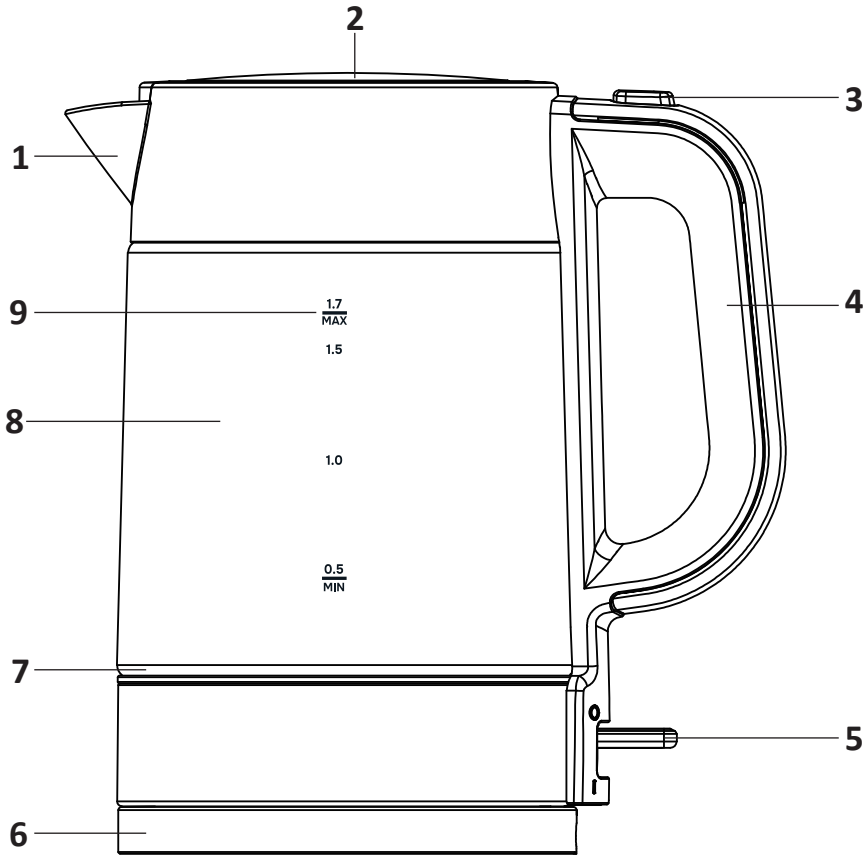

1. Spout.
2. Lid.
3. Lid release button.
4. Handle.
5. Power switch.
6. Heating base.
7. Backlight.
8. Body.
9. Water level scale.

Operating Instructions

Before First Use

1. Place the device on a flat and stable surface.
2. Unwind the power cord located on the bottom of the heating base and connect the kettle to the power supply.
3. Open the lid, fill the kettle with water up to the maximum mark, and close the lid. Ensure it is tightly closed.
4. Press the power switch to start heating — the backlight will light up.
5. Once the boiling point is reached, the kettle will turn off.
6. Remove the kettle from the base and pour out the water.
7. Repeat the steps above 1–2 more times.

Notes

- Do not exceed the maximum mark to avoid water spilling during boiling.
- Do not open the lid while the water is boiling.

Boiling

1. Place the device on a flat and stable surface.
2. Unwind the power cord located on the bottom of the heating base and connect the kettle to the power supply.
3. Open the kettle lid, fill it with water between the «MIN» and «MAX» marks, and then close the lid tightly. Place the filled kettle on the base.
4. Press the power switch to start heating — the backlight will light up.
5. When the water boils, the device and the backlight will automatically turn off.
6. Disconnect the device from the power supply and pour the water into a container.

Descaling

Mineral deposits in tap water can cause limescale to build up on the inner surfaces of the kettle. To extend the device's service life and minimize any impact on your health, we recommend descaling it several times a year, depending on your local water hardness. For this purpose, it is necessary to use solutions exclusively with organic acids in the correct concentration, such as:

- Specialized descaling agents.
- Granulated citric acid solution. To obtain the required concentration, we recommend using 4 level teaspoons per 1 liter of water.

Descaling instructions using a citric acid solution:

1. Pour the solution into the kettle, bring it to a boil, then let it cool to room temperature.
2. If a thick layer of mineral deposits remains, repeat the procedure.
3. Pour out the acid solution and refill the kettle with clean water.
4. Bring the water to a boil, then pour it out.
5. Once this procedure is complete, the kettle can be used as normal again.

Note: For descaling using a specialized agent, follow the instructions provided with that product.

Maintenance and Care

- Always unplug the device before cleaning.
- Wipe the housing with a soft, damp cloth, then dry it thoroughly.
- Make sure the heating base stays dry.
- To clean the inside of the device, use a soft cloth dampened with a cleaning agent, then rinse thoroughly with water.
- Remove the filter and rinse it under running water.
- Do not use harsh abrasive cleaners or sharp metal scrapers for cleaning, as they may damage the device.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The device does not require installation or permanent mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported under dry conditions.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 18 months
Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:
https://www.dns-shop.ru/service-center/

Additional Information

Manufacturer: Yuyao City Fuda Electronic Co., Ltd.
No. 78 Feng Yi Road, Yuyao City, Ningbo City, Zhejiang Province, P.R. China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy):_____v.1

aceline