User Manual

Electric Oven
DEO-4815HP

DEXP

Contents

Intended Use **3**

Safety Precautions **3**

Specifications **4**

Package Contents **4**

Device Diagram **5**

Control Panel **6**

Electric Oven Controls **7**

Installation **8**

Before First Use **8**

Operating Instructions **9**
Cooking on Infrared Hotplates 9
Cooking in the Oven 9
Rotisserie Cooking 10

Maintenance and Care **10**

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal **11**

Warranty Information **12**

Additional Information **12**

Dear Customer,

Thank you for choosing our products.
We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The electric oven is a heating device designed for cooking food and reheating prepared meals.

Safety Precautions

- During operation, the temperature of the oven door, as well as the external and internal parts, can be very high. To avoid the risk of burns, do not touch these parts of the electric oven.
- Do not use extension cords to connect the device.
- Do not use the device outdoors. Keep it away from heat sources, direct sunlight, humidity (never immerse in liquid), and sharp edges. If the device is damp or wet, immediately disconnect it from the power supply.
- Do not place the device near combustible materials, electric heaters, stoves, or hot gas burners.
- Maintain a safe distance from flammable objects, such as furniture, curtains, etc.
- The device is not intended for built-in installation.
- Do not place paper, plastic, cardboard, etc., near or on the device.
- Ensure that the power cord does not contact hot parts of the device or sharp corners and objects.
- Ensure that the power cord is always easily accessible.
- During installation, leave a clearance of at least 10 cm on all sides of the oven to ensure sufficient airflow during use.
- Do not block the ventilation openings of the device.
- Do not cover any parts of the device with aluminum foil or similar materials, as this may cause the oven to overheat.
- Always use oven mitts when inserting or removing accessories.
- Place the device on a flat, heat-resistant surface.
- To avoid the risk of burns, do not move the device during operation.
- Do not turn on the hotplates without cookware on them.
- Disconnect the device from the power supply when it is not in use.
- Do not use the device with a damaged cord. To avoid the risk of electric shock, never attempt to repair the device yourself. Contact an authorized service center for repairs. Use only original spare parts.
- Do not touch the device with wet or damp hands.
- This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the device.
- This device is not intended for commercial use.


Specifications

- Model: DEO-4815HP.
- Trademark: DEXP.
- Internal oven volume: 46 L.
- Power supply: 220–240 V ~ 50–60 Hz.
- Oven power: 3500 W.
- Timer.
- Cable length: 120 cm.
- Number of hotplates: 2 pcs.
- Number of cooking programs: 5 modes.
- Cord type: Y.
- Protection class: I.
- IP code: IPX0.
- Scope of application: Domestic.

Package Contents


- Device.
- Rotisserie holder.
- Baking tray holder.
- Crumb tray.
- Baking tray.
- Wire rack.
- Rotisserie spit.
- User manual.

Device Diagram

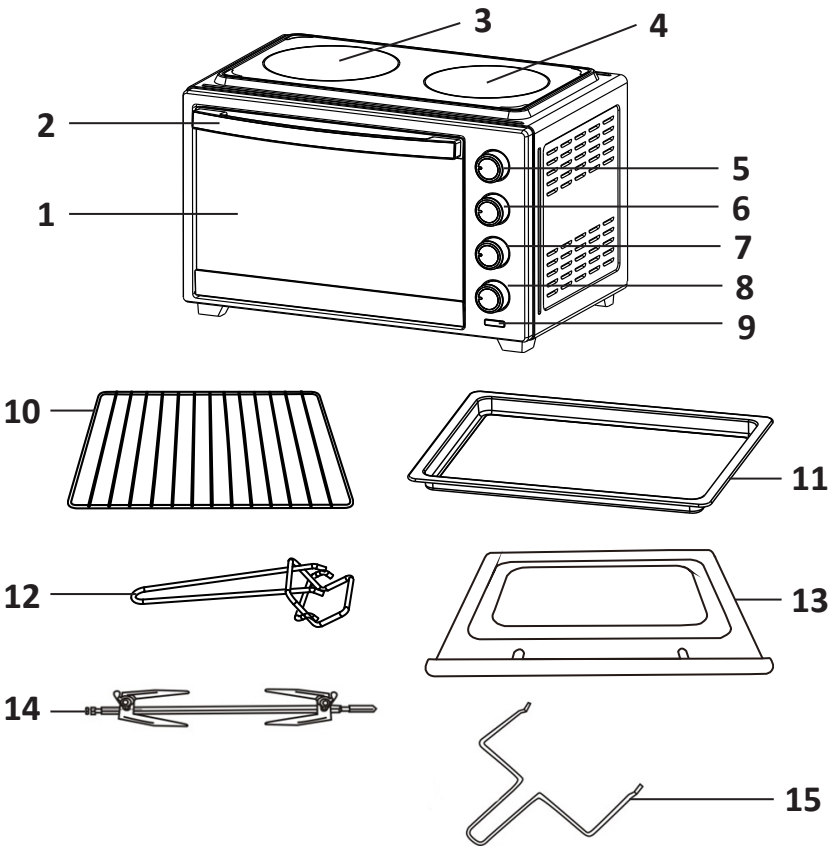


1. Oven door.
2. Oven handle.
3. Large hotplate.
4. Small hotplate.
5. Oven temperature control knob.
6. Small hotplate power control knob.
7. Large hotplate power control knob.
8. Oven cooking mode selector.
9. Oven indicator.
10. Wire rack.
11. Baking tray.
12. Baking tray holder.
13. Crumb tray.
14. Rotisserie spit.
15. Rotisserie holder.

Control Panel

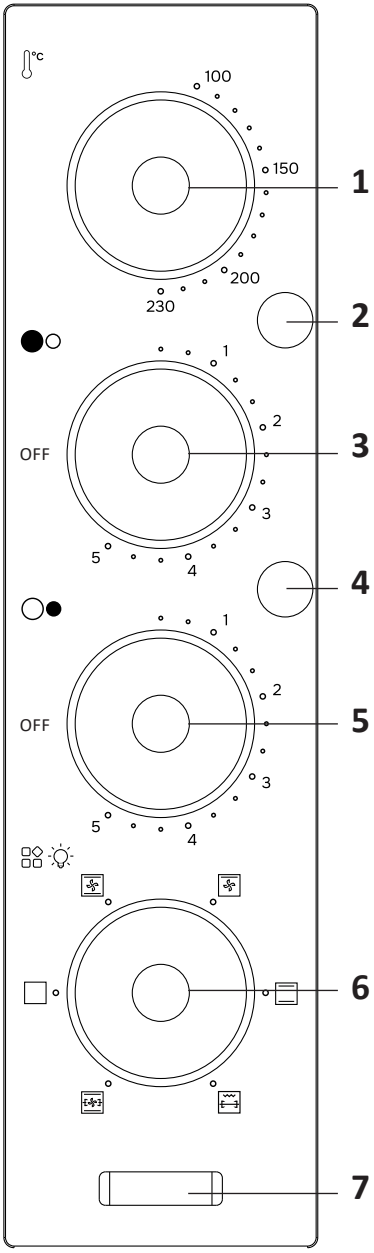


1. Oven temperature control knob.
2. Large hotplate indicator.
3. Large hotplate power control knob.
4. Small hotplate indicator.
5. Small hotplate power control knob.
6. Oven cooking mode selector.
7. Oven indicator.

Electric Oven Controls

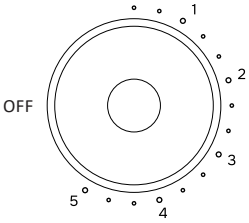

Hotplate Power Controls


- Using the hotplate control knob, you can set the hotplate temperature from minimum (1) to maximum (5).
- After cooking, turn the hotplate control knob to the «OFF» position and unplug the electric oven.
- « » — large hotplate.
- « » — small hotplate.

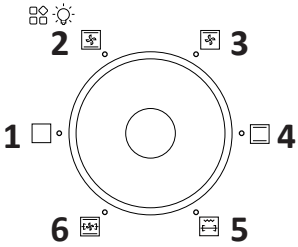

Oven Mode Selector

You can select the desired cooking mode in the oven using one of the following available options:

1. Off.
2. Upper and lower heating with convection mode.
3. Upper heating with convection mode.
4. Upper and lower heating.
5. Upper heating with rotisserie operation.
6. Upper heating with convection and rotisserie operation.

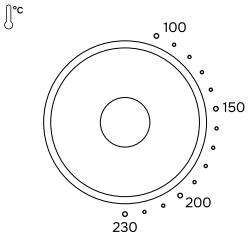

Oven Temperature Controls

- You can adjust the oven temperature by turning the knob to select the desired operating temperature.
- The available oven temperature range is from 100 °C to 230 °C.

Installation

- Remove the device from the packaging.
- After unpacking, inspect the electric oven for visual damage. If there is damage, do not install the oven and contact the place of purchase.
- Before connecting the device to the power supply, ensure that your home power supply voltage matches the technical specifications of the device.
- Place the device on a flat surface so that it is at a safe distance from flammable objects.
- Leave a clearance of at least 10 cm around all sides of the oven to ensure sufficient ventilation during use.

Before First Use

1. Clean the device and the included accessories according to the instructions in the «Maintenance and Care» section.
2. Place the accessories inside the oven.
3. Connect the device to the power outlet.
4. Turn the oven cooking mode selector clockwise to select the «Upper and lower heating» mode.
5. Turn the oven temperature knob to set the maximum temperature of 230 °C.
6. Let the device run for 10–15 minutes.
7. Turn the oven temperature knob counterclockwise to turn off the oven.
8. Turn the oven cooking mode selector counterclockwise to the «OFF» position.
9. Disconnect the device from the power outlet.

Note: During the first use of the device, a slight odor may appear. This is a normal phenomenon and will disappear after some time. Before the first cooking, use the oven without food inside.

Operating Instructions

Cooking on Infrared Hotplates

1. Select one of the hotplates. Turn the knob to select the desired operating power. The power indicator will light up.
2. Place the cookware on the hotplate.
   CAUTION! Do not allow the device to operate without cookware on the hotplate. Excessive heating may lead to overheating of the elements or fire.
3. After cooking is complete, turn the knob counterclockwise to the «OFF» position; the power indicator will turn off.
4. Remove the cookware from the hotplate.
5. Disconnect the device from the power supply.

CAUTION! Always wear protective gloves when working with this device. It heats up to high temperatures, which can cause burns.
Note: You can use both the small and large hotplates and the oven simultaneously. However, it is recommended to use only one hotplate at a time with the oven to avoid overloading the electrical network.

Cooking in the Oven

1. Turn the oven cooking mode selector clockwise to select the appropriate mode as indicated in the «Control Panel» section. The power indicator will light up.
2. Turn the electric oven temperature knob clockwise and select the desired operating temperature (from 100 °C to 230 °C).
3. Place the baking tray with food at the desired height in the oven.
   CAUTION!
   - To avoid the risk of burns, do not touch the heating elements during oven operation.
   - Do not place food that touches or is too close to the heating elements.
   - Place the wire rack at the desired height in the oven before turning it on, as there is a risk of burns.
4. After cooking is complete, turn the oven cooking mode selector and the temperature knob counterclockwise to the «OFF» position; the power indicator will turn off.

CAUTION! Always wear protective gloves when working with this device. It heats up to high temperatures, which can cause burns.
Notes

- Place the crumb tray at the bottom of the oven to keep it clean during cooking.
- It is recommended to always preheat the oven for better cooking results.

Rotisserie Cooking

1. Insert the rotisserie spit into the product and secure it with the clamps at the ends.
2. Ensure that the product is positioned in the middle of the rotisserie spit.
3. Secure the clamp positions with screws and insert the rotisserie spit into the corresponding holes in the oven.
4. Check that the product to be cooked is centered on the rotisserie spit.
5. Plug the electric oven into the power outlet.
6. Set the temperature knob to 230 °C.
7. Set the timer to the required time; the power indicator will light up.
8. Set the oven cooking mode selector to the rotisserie operation mode or the rotisserie and convection mode; the rotisserie will start rotating.
9. After roasting is complete, turn off the electric oven; the indicator will turn off.
10. After the device has cooled down, place the rotisserie holder hooks under the slots on both sides of the rotisserie spit. Lift the right side of the rotisserie spit first, moving it slightly to the right so that the left side of the rotisserie spit comes out of the corresponding hole in the oven. Then carefully remove the rotisserie spit together with the food from the oven.
11. Remove the food from the rotisserie spit.

Maintenance and Care

- Always disconnect the device from the power supply before cleaning.
- Allow the device to cool down completely before cleaning (wait 1–2 hours) to avoid burns.
- The device should not be immersed in water.
- Clean the device housing with a damp cloth soaked in warm water with detergent, if necessary.
  CAUTION! Do not pour water into the ventilation openings.
- Remove all accessories from the oven and clean them with warm water and detergent. The accessories included with the oven can be washed in a dishwasher.
- Clean the inside of the oven with a damp cloth.
- Clean the glass door with a damp cloth and wipe it dry with a paper towel.
- Do not use abrasive materials that can scratch or damage the device.
- Do not use a metal brush or other abrasive tools for cleaning.

Note: The oven should be cleaned regularly, and food residues must be removed.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months
Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:
https://www.dns-shop.ru/service-center/

Additional Information

Manufacturer: Foshan O-Max Electric Appliance Co., Ltd.
No.3 building, no.1 road, Beishui Industrial Area 2, Xingtan Town, Shunde District, Foshan City, Guangdong Province, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy):_____v.1

