# User Manual

TV Mount
DTV-400LF

DEXP

# Contents

**Intended Use** ..... **3**

**Safety Precautions** ..... **3**

**Dimensions** ..... **4**

**Installation Instructions** ..... **5**

Mounting Hardware ..... 5

Required Tools ..... 5

Installation ..... 6

**Specifications** ..... **8**

**Package Contents** ..... **8**

**Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal** ..... **9**

**Warranty Information** ..... **9**

**Additional Information** ..... **9**

# Dear Customer,

Thank you for choosing our products.
We are pleased to offer you products and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the product, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


# Intended Use

This product is designed to mount a TV on various installation surfaces, depending on the model's design.

# Safety Precautions

- This mount is intended for indoor use only.
- The installation kit contains small parts that pose a choking hazard if swallowed. Keep these parts out of the reach of children.
- Use the screws included in the kit for installation. Tighten them securely, but do not overtighten. Excessive tightening may damage the components.
- Before assembling the mount and installing a television on it, verify the VESA standards, screen diagonal, and the maximum load capacity of the product. Using the mount with televisions that exceed the specified rated weight may result in instability and falling.
- Assembly and installation of the product must be carried out in accordance with the «Installation Instructions» section. Incorrect assembly may cause damage and injury.
- Installation of the mount may require specialized equipment, such as a screwdriver or a hammer drill (not included). The use of personal protective equipment is recommended (not included). Installation must be performed by professionals.
- The mount is designed for installation on wooden stud walls, solid concrete walls, or brick walls.
- This product is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety. Do not allow children to play with the product.
- This product is not intended for commercial use.


## Dimensions

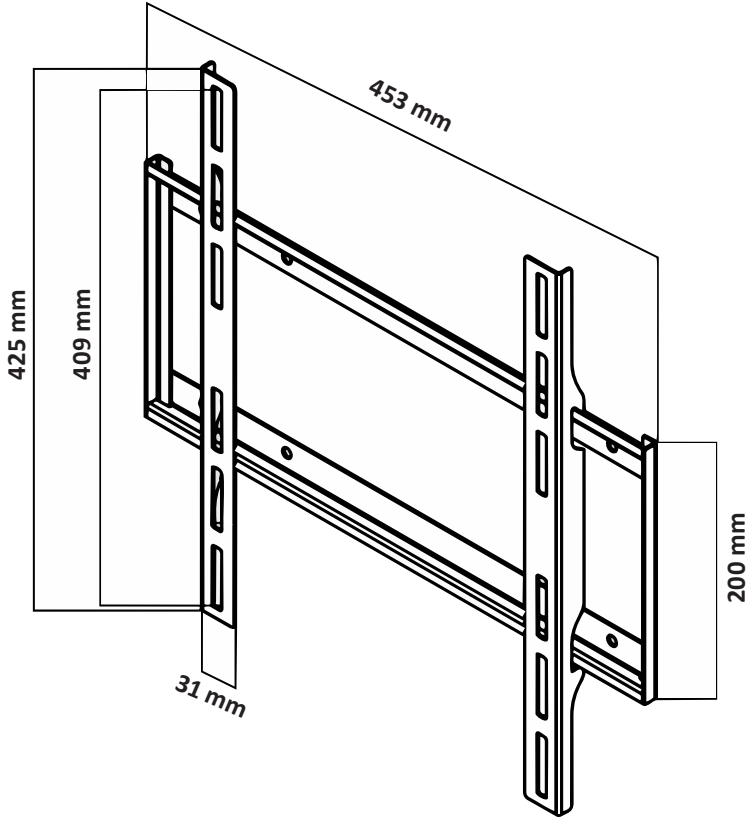


# Installation Instructions

## Mounting Hardware

Wall anchor
8 × 50 mm
(4 pcs)

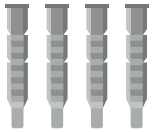

Screw
M5 × 60 mm
(4 pcs)

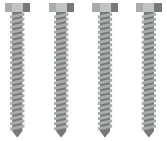


Bolt
M8 × 25 mm
(4 pcs)



Bolt
M6 × 16 mm
(4 pcs)




## Required Tools

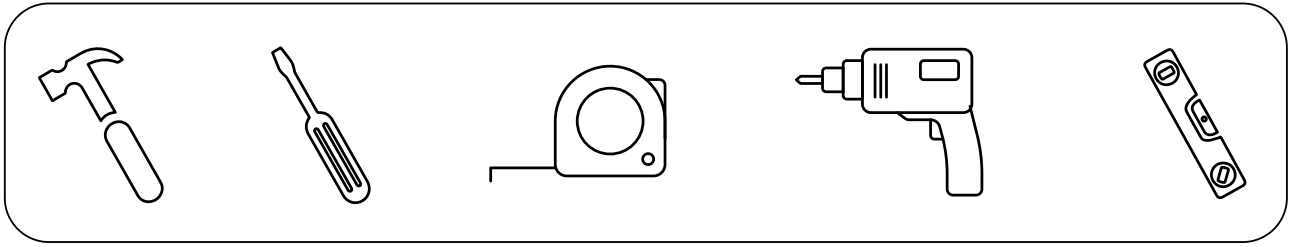

**Note:** Tools are not included in the package.


# Installation

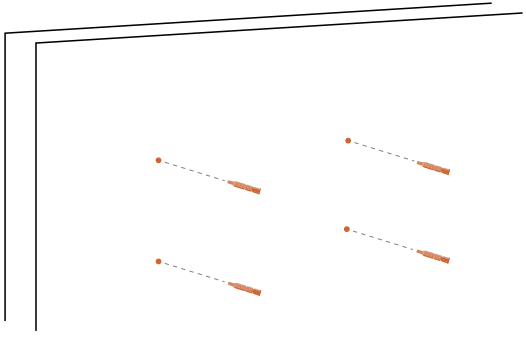

## Preparing the Holes

1. Place the mount base against the wall and level it using a spirit level or a laser level.
2. Mark the future holes with a marker.
3. Using a hammer drill, drill holes in the wall corresponding to the length of the wall anchors.
4. Hammer the wall anchors into the holes.

**CAUTION!** Wall anchors are used only when mounting on concrete and brick walls. They are not required for wooden walls.

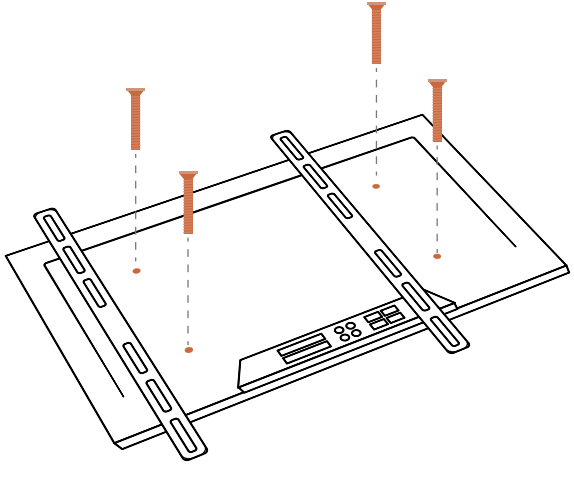

## Attaching the Adapters to the TV

1. Place the adapter plates on the back panel of the TV, aligning them with the VESA holes.
2. Secure the adapters with the appropriate bolts (M8 × 25 or M6 × 16, depending on the TV's mounting holes).


**CAUTION!** All images in this manual are for reference only and may differ from the actual product.

## Attaching the Mount to the Wall

1. Attach the base to the wall using M5 × 60 screws.

   **Note:** By default, the mount is attached at four points. The design also provides four additional holes that you can use for extra security.

2. Hang the TV on the mount using the adapters previously installed on its back panel. To secure it, tighten the two safety screws (M4 × 60) using a long Phillips screwdriver (the screws are pre-installed by the manufacturer). Tighten them until they stop, but do not apply excessive force.

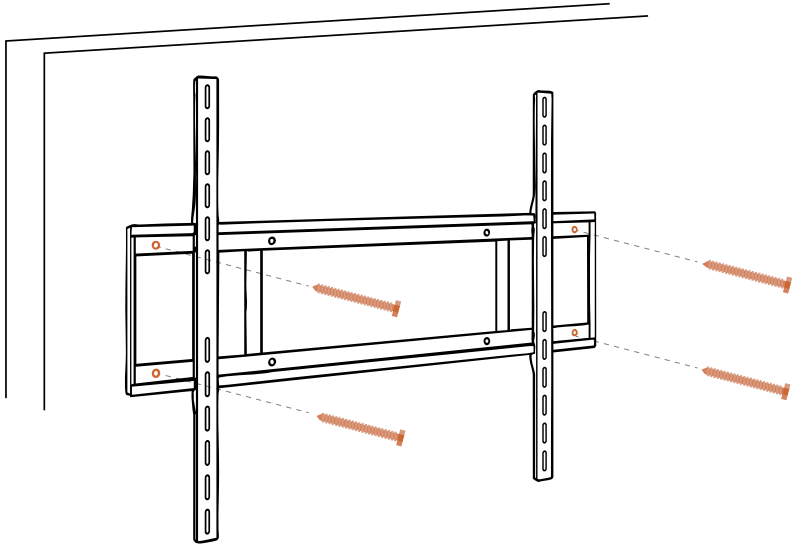

## Specifications

- Model: DTV-400LF.
- Trademark: DEXP.
- Maximum load: 45 kg.
- TV screen size: 10–75”.
- Distance from wall: 25 mm.
- Tilt angle: None.
- Swivel angle: None.
- VESA standards: 75 × 50; 75 × 75; 75 × 100; 75 × 200; 75 × 300; 75 × 400; 100 × 50; 100 × 75; 100 × 100; 100 × 200; 100 × 300; 100 × 400; 200 × 50; 200 × 75; 200 × 100; 200 × 200; 200 × 300; 200 × 400; 300 × 50; 300 × 75; 300 × 100; 300 × 200; 300 × 300; 300 × 400; 400 × 50; 400 × 75; 400 × 100; 400 × 200; 400 × 300; 400 × 400.
- Scope of application: Domestic.

## Package Contents

- Mount.
- Mounting hardware.
- User manual.

## Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- The installation and mounting conditions for the product are described in the «Installation Instructions» section of this user manual.
- The product must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The product must be transported under dry conditions.
- The product requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the product must be carried out in accordance with local legislation.
- Disposal of this product must be carried out in accordance with local waste recycling regulations. By ensuring proper disposal of this product, you help prevent potential harm to the environment and human health resulting from uncontrolled waste disposal and promote the sustainable reuse of material resources. For more detailed information on collection and disposal points for this product, please contact your local municipal authorities or household waste collection service.
- If a product malfunction is detected, immediately contact an authorized service center or dispose of the product.

## Warranty Information

The manufacturer warrants that the product is free from defects in materials and assembly. The warranty period commences on the date of purchase and applies only to new products. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers. Failure to follow the described safety precautions will void your warranty.

**Warranty Period:** 84 months
**Service Life:** 84 months

**For the up-to-date list of authorized service centers, please visit:**
https://www.dns-shop.ru/service-center/

## Additional Information

**Manufacturer:** LLC «KS-GRUPP».
426008, Russia, Izhevsk, Pushkinskaya St., 268.

Made in Russia.

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____v.1

