User Manual

Electric Grater
EG-200

DEXP

Contents

Intended Use **3**

Safety Precautions **3**

Device Diagram **4**

Before First Use **5**

Operating Instructions **5**

Attachment Replacement 5

Maintenance and Care **5**

Attachment Compatibility Table **6**

Specifications **6**

Package Contents **6**

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal **7**

Warranty Information **8**

Additional Information **8**

Dear Customer,

Thank you for choosing our products.
We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.


Intended Use

The device is designed for automatic grating, slicing, and shredding of food products.

Safety Precautions

- Before connecting the device, ensure that the voltage specified on it matches the voltage of your local grounded power supply.
- Keep the device away from water, do not use it near sources of high humidity, and do not submerge it in liquid.
- Unplug the device's power cord from the electrical outlet after use.
- This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, unless they are supervised by a person responsible for their safety.
- This device is not intended for commercial use.
- Use the device only for its intended purpose specified in this manual.
- To avoid voiding the free warranty service, use only original accessories with the device.
- Always place the device on a heat-resistant, stable, flat surface.
- Keep the turned-on device away from open flames and flammable objects and materials.
- Do not use the device if a malfunction occurs or the cord is damaged.
- Do not grate raw or cooked meat on the electric grater.
- Do not remove the attachment until the device has completely stopped working.
- Do not turn on the device after a drop, even if there is no external damage, until it has been inspected by a specialist.
- Always use the provided food pusher to push products into the feeding chute. Under no circumstances should you do this with your hands.
- Do not allow the power cord to hang over the edge of the table or touch heated surfaces.
- Do not use the device outdoors.

Device Diagram

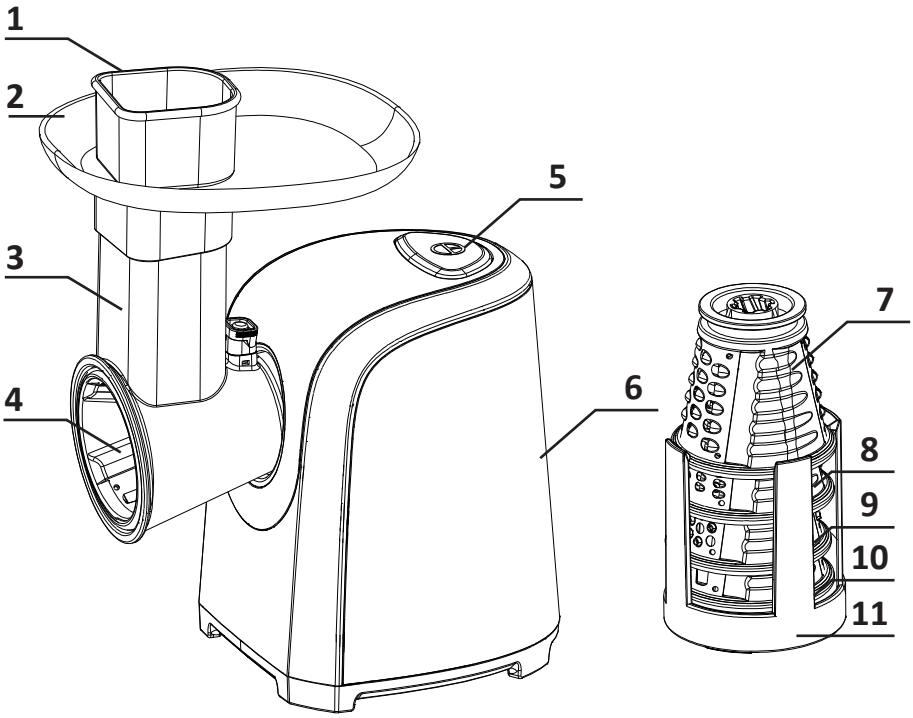

1. Food pusher.
2. Feeding tray.
3. Blade assembly.
4. Coarse slicing attachment.
5. Power button.
6. Motor unit.
7. Coarse grating attachment.
8. Fine grating attachment.
9. Shredding attachment.
10. Thin slicing attachment.
11. Attachment storage stand.

Before First Use

- Read all instructions described in this manual.
- Wash all accessories (attachments, blade assembly, and food pusher) in soapy water.
- Dry them thoroughly and install them in the device.
- Connect the device to the power supply.

Operating Instructions

1. Insert the blade assembly into the opening on the motor unit and turn it 90° to the left.
2. Select the appropriate attachment and install it into the blade assembly at the front. The attachment should be pushed into the drive until it stops.
   CAUTION! The blades on the attachment are very sharp. Handle the attachment with care, always holding it by the plastic part.
3. Connect the device to the power supply.
4. To turn on the grater, press the power button on the housing.
   CAUTION! Do not turn on the device until you have loaded the food into the blade assembly.
5. After loading the food, push it down using the food pusher.

Attachment Replacement

1. Disconnect the device and unplug the power cord from the outlet.
2. Turn the blade assembly 90° to the right. Then return it to the vertical position.
3. Remove the attachment and/or insert another one.

CAUTION! Before turning on the device, always check that the attachment is correctly installed on the drive.

Maintenance and Care

- Before cleaning the device, ensure that it is disconnected from the power supply.
- Do not immerse or lower the device housing in water. Wipe the base of the housing with a damp cloth and dry thoroughly.
- Accessories (attachments, blade assembly, and food pusher) can be washed in warm soapy water.
- If the plastic parts of the device are stained with food, wipe them with a cloth dampened with a small amount of vegetable oil, then wash them as usual.
- Before connecting the device to the power supply, ensure that all parts and surfaces of the device are dry.

Attachment Compatibility Table

Products	Coarse grating attachment	Fine grating attachment	Coarse slicing attachment	Thin slicing attachment	Shredding attachment
Carrots	X	X	X	X	
Zucchini	X	X	X	X	
Potatoes	X		X	X	
Cucumbers			X	X	
Bell peppers			X	X	
Onions			X	X	
Beets			X	X	
Cabbage			X	X	
Apples			X	X	
Gruyère cheese	X	X			
Parmesan cheese					X
Chocolate	X	X			
Breadcrumbs / cookies					X
Hazelnuts / walnuts / almonds					X

Specifications

- Model: EG-200.
- Trademark: DEXP.
- Rated power: 150 W.
- Maximum power: Up to 200 W.
- Power supply: 220–240 V, 50 Hz.
- Number of attachments: 5 pcs.
- Cord type: Y.
- Protection class: II.
- IP code: IPX0.
- Scope of application: Domestic.

Package Contents

- Electric grater.
- 5 attachments.
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 18 months
Service Life: 36 months

For the up-to-date list of authorized service centers, please visit:
https://www.dns-shop.ru/service-center/

Additional Information

Manufacturer: YUYAO NEWFAST IMP&EXP CO.,LTD.
No.55 Yuli Road, Flat A, Sunshine International Mansion, Yuyao, Zhejiang, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

Production date (mm.yyyy): _____ v.1

