



MR.CHEF QUADRO



Kullanım Kılavuzu
Blender seti



Instructions manuel
Blender set

Genel	4
Kullanım talimatları hakkında bilgi	4
Sorumluluk	4
Kullanım talimatları hakkında uyarılar	4
Güvenlik	5
CE Uygunluk deklarasyonu	5
Kullanım alanı	5
Yetkisiz kullanım	6
Güvenlik Önemlidir	7
Güvenlik Uyarıları	7
Arıza ve Hasar Durumunda	8
Genel Bakış	9
Teknik bilgiler	9
Cihaz açıklamaları	9
Cihazın Kullanımı	10
Cihazın Temizlenmesi	13
Cihazın geri dönüşüm noktalarına bırakılması ...	14
Sorun Muhtemel Neden Çözüm Hata.....	15
Sevk	15

Tercihinizi Fakir Mr Chef Quadro blender setinden yana kullandığınız için teşekkür ederiz. Ürünümüz size uzun süre sorunsuz hizmet vermek için tasarlanıp üretilmiştir.

Kullanım talimatları hakkında bilgi

Bu kullanım talimatları cihazın düzgün ve güvenli bir şekilde kullanılabilmesi için düzenlenmiştir. Kendi güvenliğiniz ve diğerlerinin güvenliği için ürünü çalıştırmadan önce kullanım kılavuzunu okuyunuz. Bu kılavuzu ilerideki kullanımlar için güvenli bir yerde saklayınız.

Sorumluluk

Bu kullanım kılavuzundaki talimatlara uygun olmayacak şekilde kullanım sonucunda ortaya çıkabilecek bir hasar oluşması durumunda Fakir, sorumluluk kabul etmez. Cihazın, kendi alanı dışında bir yerde kullanılması, Fakir yetkili servislerinden başka bir yerde tamir ettirilmesi durumunda Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. sorumluluk kabul etmez.

Kullanım talimatları hakkında uyarılar



UYARI!

Bu işaret yaralanma ya da ölümle sonuçlanabilecek tehlikeleri belirtir.



DİKKAT!

Bu işaret ürününüzün zarar görmesi ya da bozulmasına yol açabilecek tehlikeleri belirtir.



NOT!

Kullanım kılavuzunda önemli ve faydalı bilgileri belirtir.

CE Uygunluk deklarasyonu**CE Uygunluk deklarasyonu**

Bu cihaz Avrupa Birliğinin 2004/108/EC Elektromanyetik Uyumluluk ve 2006/95/EC Gerilim Direktifleri'nin talimatlarına tamamen uygundur. Bu ürün cihaz tip etiketinde CE işaretiyle sahiptir.

Kullanım talimatı

- Bu cihaz yalnızca ev kullanımı için uygundur.
- Cihazı 1 dakikadan daha uzun bir süre boyunca çalıştırmayınız. Çok sert yiyecekler için 10 saniyeden daha uzun bir süre boyunca çalıştırmayınız.
- Cihazı gözetimsiz bıraktığınız zamanlarda ve temizlemeden, parçalarını söküp takmadan önce mutlaka fişini prizden çekiniz.
- Cihazın dilimleme/rendeleme/ paslanmaz çelik bıçaklarını tutarken; ölçü kabını boşaltırken ve temizlerken dikkatli olunmalıdır.
- Cihaz parçalarını sökerken ve kullanım esnasında hareket ederken parçaları tutarken, kesinlikle cihaz fişini prizden çekiniz.
- Bu cihaz küçük çocukların veya fiziksel, ruhsal, beyinsel yetenekleri düşük veya deneyimi ve bilgi düzeyi eksik kişilerin kendi güvenliklerinden sorumlu olan bir kişi tarafından gözetilmedikçe kullanması için yapılmadı. Küçük çocukların cihaza ulaşmalarına engel olunuz.
- Küçük çocukların cihazla oynamadıklarından emin olunmalıdır.
- Cihazınızı kesinlikle içi suyla dolu olan küvet, lavabo, v.b. yakınında kullanmayınız.
- Cihazınızı temizlemek için kesinlikle sert, aşındırıcı temizlik malzemeleri kullanmayınız.
- Cihaz dış yüzeyini hafif nemli bir bez ile temizleyebilirsiniz.
- Cihazın fişini prizden çekerken kesinlikle kablosundan tutarak çekmeye çalışmayınız. Cihazın fişini prizden çekmek için her zaman cihazın fişinden tutarak çekiniz.
- Cihazın güç kablosunu kıvrımayınız, kıvrarak muhafaza etmeyiniz.
- Her kullanımdan sonra cihazınızı kapatıp, fişini prizden çekiniz.

**DİKKAT!**

Kullanım kılavuzunuzda yazılı olan güvenlik kurallarını ve kullanım talimatlarını dikkatlice okuyunuz. Bu kullanım kılavuzunu ilerideki kullanımlar için saklayınız.

Yetkisiz kullanım

Aşağıda belirtilen yetkisiz kullanım durumlarında, cihaz zarar görebilir ya da yaralanmaya yol açabilir;

- Bu cihaz akli dengesi yerinde olmayan kişilerin ya da bu tip cihazları kullanmak için yeterli bilgisi olmayan kişilerin kullanması için uygun değildir. Bu tip kişilerin cihazı kullanmasına kesinlikle izin vermeyiniz.
- Cihaz bir oyuncak değildir. Bundan dolayı çocukların bu cihazı kullanmalarına izin vermeyiniz ve cihazı çocukların yanında kullanırken daha dikkatli olunuz.
- Paketin içinden çıkan, poşet ve karton gibi maddeleri çocuklardan uzak tutunuz. Aksi takdirde çocuklar bu maddeleri yutmak suretiyle kendilerine zarar verebilirler!

Güvenlik Önemlidir!!!

Cihazı kullanmadan önce, kullanım kılavuzunu okuyunuz.

Güvenlik Uyarıları

- Cihazı monte etmeden, sökmeden ve ya temizlemeden önce mutlaka fişini prizden çekiniz.
- Cihazı çalıştırmadan önce şebeke voltajının cihazınızın tip etiketinde gösterilenle aynı olduğunu kontrol ediniz.
- Cihazın fişini kesinlikle parçaları tam olarak monte edilmeden prize takıp çalıştırmayınız. Parçaları sökmeden ve ya bıçakları tutmadan önce mutlaka cihazın fişinin prizden çıkartılmış olduğuna dikkat ediniz.
- Çocukların gözetiminiz olmaksızın cihazı kullanmalarına ve ya oynamalarına müsaade etmeyiniz.
- Cihazın motor kısmının, kablusunun veya fişinin ıslanmasını engelleyiniz.
- Cihazınızı eğer kablosu, fişi veya herhangi bir parçası arızalı ise kesinlikle kullanmayınız. Cihazınızın kablosu, fişi veya parçaları hasarlı ise, herhangi bir zararın önlenmesi için yetkili bir Fakir servisi tarafından yenisi ile değiştirilmelidir.
- Cihaz güç kablusunun masa köşesinden, mutfak tezgâhından veya herhangi sıcak bir yüzeye temas edebilecek yerlerden sarkmasına engel olunuz.

**DİKKAT!**

- Cihazı kullanmadan önce, şebeke voltajınız ile cihazın voltajının uyumlu olduğundan emin olunuz.
- Prizler 16A'lık ev sigortalarıyla garantiye alınmalıdır.
- Sadece cihaza uygun uzatma kablosu kullanınız.

**UYARI! ELEKTRİK ÇARPMA RİSKİ**

- Cihaza kesinlikle ıslak ellerle dokunmayınız.
- Her zaman cihazın fişinden çekerek prizden çıkartınız, kesinlikle elektrik kablosundan çekmeyiniz.
- Bağlantı kablosunu asla keskin kenarlara sürtmeyiniz veya bağlamayınız, sıcaklık veren kısımlara değmemesine özen gösteriniz.
- İlk kullanımdan önce cihazı hasar ve arızalara karşı kontrol ediniz. Cihazda herhangi bir arıza ya da hasar var ise, cihazı kullanmayınız ve Fakir Yetkili Servisi'ne başvurunuz.
- Hasar görmüş uzatma kablolarını kullanmayınız.

**DİKKAT!**

Herhangi bir tehlike anında, cihazın fişini hemen prizden çekiniz.

**UYARI! ARIZA VEYA HASAR DURUMUNDA**

Cihazın elektrik kablosu hasar görmüşse kesinlikle cihazı çalıştırmayınız, böyle bir durumda elektrik çarpması riski vardır.

Müşteri Hizmetlerini aramadan önce, kendiniz sorunu/ hatayı gidermeyi araştırın. Bunun için **“SORUN GİDERME”** bölümüne bir göz atın.


Eğer sorunu/hatayı giderebiliyorsanız, lütfen Müşteri Hizmetlerini arayın: Aramada önce lütfen Ürün kodunu (Artikel-Nr.) ve Modelini hazır tutun. Bu bilgileri ürününüzdeki **TİP ETİKETİNDE** bulabilirsiniz.

**UYARI!**

Cihazın tamiri ancak yetkili Fakir servislerince yapılmalıdır (yetkili servis listesine bakınız). Yanlış tamir işlemleri kullanıcısı için tehlike oluşturabilir.

Teknik Bilgiler:

Güç	:1000Watt motor
Voltaj	: 220-240V~50/60 Hz
Koruma sınıfı	: II
Kullanım ömrü	: 7 yıl

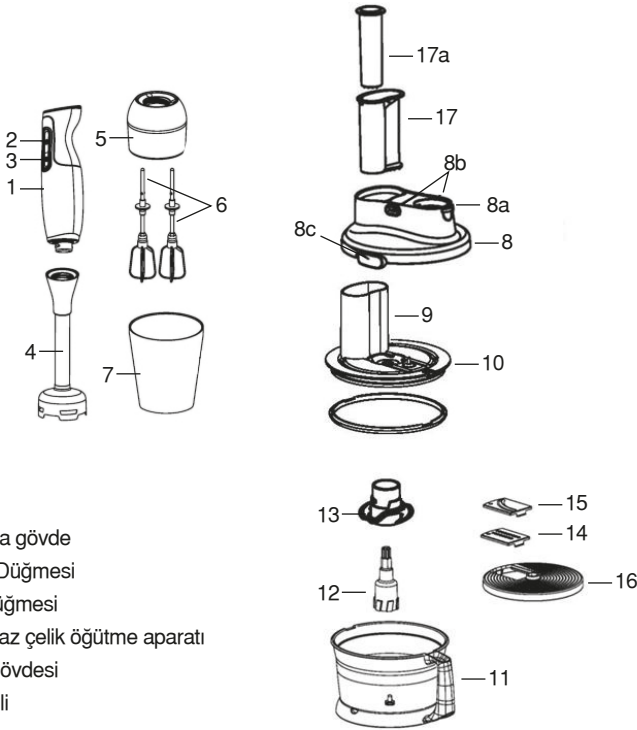


- 1-Motor ana gövde
- 2-On / Off Düğmesi
- 3-Turbo Düğmesi
- 4-Paslanmaz çelik öğütme aparatı
- 5- Çırpıcı gövdesi
- 6-Çırpıcı teli
- 7- Ölçü Kabı
- 8- Robot üst kapak
- 8a-Motor kilit açma düğmesi
- 8b-Kapak açma/ kilitleme düğmeleri
- 8c-Kapak kilitleme mandalı
- 9-Koruyucu kapak
- 10-Taşmayı önleyici lastik
- 11-Robot kabı
- 12-Aksesuar Mili

- 13-Parçalama bıçağı
- 14-Rende taşıyıcı disk
- 15-Dilimleme bıçağı
- 16-Rende bıçağı
- 17 & 17a-iticiler

Kullanım

El blenderinin kullanımı: El blenderı sos, çorba, mayonez veya bebek maması gibi yiyeceklerin hazırlanması için kullanılmaktadır. Paslanmaz çelik blender ayağını cihaza kilitlenecek şekilde yerleştiriniz. Blenderı yiyecek dolu kap içine yerleştiriniz. Güvenlik düğmesine ve açma /kapama tuşuna basarak cihazı çalıştırınız.El blenderını kesinlikle 1 dakikadan daha uzun bir süre boyunca çalıştırmayınız.

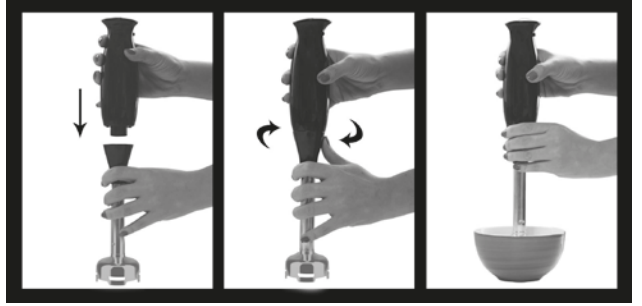**DİKKAT!**

Blender quadro bıçağı oldukça keskindir. Kullanırken dikkatli olunuz.Yiyeceğin içinde su olmaksınız cihazı kullanmayınız. Karıştırmanız gereken yiyeceği mutlaka su ile beraber karıştırınız.

Kullanım


Çırpıcının kullanımı: Çırpıcı aparat krema, kremşanti, yumurta beyazını çırpma, köpük çırpma ve hazır tatlı gibi yiyeceklerin hazırlanması için kullanılmaktadır.

Çırpıcıyı çırpıcı kapağına yerleştiriniz, ardından Çırpıcı aparatını cihaza kilitlenecek şekilde yerleştiriniz.

Çırpıcı aparatını yiyecek dolu kap içerisine veya ölçme kabı içerisine yerleştiriniz. Güvenlik düğmesine ve açma /kapama tuşuna basarak cihazı çalıştırınız.

Çırpıcı aparatı ile cihazı kesinlikle 2 dakikadan daha uzun bir süre boyunca kullanmayınız.

Aparatı kullandıktan sonra, cihazdan çıkarınız ve çırpıcıyı da çırpıcı kapağından sökünüz.

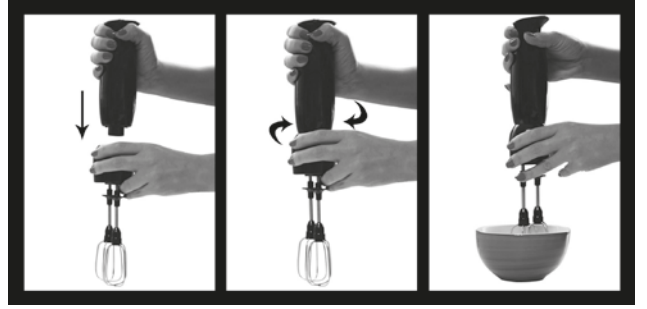

Kullanım

Robotun dilimleme / rendeleme bıçağı ile kullanımı:

Robot, bir defada max. 800 gr kadar olan yiyeceklerin (et dışında) hazırlanması için kullanılmaktadır.

Dilimleme bıçağı: Havuç, salatalık veya patates gibi sebzelerin hazırlanması için kullanılmaktadır.

Rendeleme bıçağı: Havuç, kaşar peyniri, kereviz / kereviz sapı gibi yiyeceklerin hazırlanması için kullanılmaktadır. Dilimleme veya rendeleme bıçağını plastik bıçak tutma aparatına yerleştiriniz, ardından diski kabın ortasında bulunan milin üzerine yerleştiriniz. Robot kapağını yerleştiriniz ve motor ana gövdesini mini robot kapağı üzerine yerleştiriniz. Motor ana gövdesinin mini robot üzerine iyice oturup, kilitlenmiş olduğundan emin olunuz. Cihaz fişini prize takınız güvenlik düğmesine ve açma /kapama tuşuna basarak cihazı çalıştırınız. Yiyecekleri mini robot tüpünden kabın içine itme sapı yardımıyla bırakınız.

**UYARI!**

Yiyecekleri kabın içine koymak için kesinlikle elinizi ve parmaklarınızı kullanmayınız.



Rondo'nun kullanımı: Rondo bir defada 800gr a kadar olan yiyeceklerin(et dışında) parçalanması için kullanılmaktadır. Robot kabına parçalanacak malzemeyi koyup kapağını yerleştiriniz ve motor ana gövdesinin robot üzerine iyice oturduğundan emin olunuz. Cihaz fişini prize takınız. güvenlik düğmesine ve açma/Kapama tuşuna basarak cihazı çalıştırınız.

Temizlenmesi ve bakımı

Cihazın motor kısmının bulunduğu motor ana gövdesini, çırpıcı gövdesini ve robot kapağını kesinlikle su altında yıkamayınız. Bu 3 parçanın temizliğini yumuşak hafif nemli bir bez yardımıyla yapabilirsiniz.

Motor kısmını kesinlikle suya değdirmeyiniz.

Cihazın geri kalan aparatlarını bulaşık makinesi içinde yıkayabilirsiniz. Blenderı çok tuzlu yiyeceklerde kullanmanız durumunda, bıçakları elinizle yıkamak durumunda kalabilirsiniz.

Bulaşık makineniz için çok yüksek dozlu kireç önleyici ve ya temizleyici kullanmamaya dikkat ediniz.

Bazı yiyecekler renklerinden ötürü kabın rengini boyayabilmektedirler. Bu durumda kabı bulaşık makinesine yerleştirmeden önce zeytinyağı ile silmeniz ve ardından bulaşık makinesine koymanız tavsiye edilmektedir.

**DİKKAT!**

Cihaz bıçakları oldukça keskindir. Temizlerken lütfen dikkat ediniz. Cihazı temizlemeden önce mutlaka fişini prizden çekiniz.

Gıda/ Aparat/ Zaman Çizelgesi

Parçalayıcı

Malzeme	Maximum Miktar	Hız	Gerekli Aparat	Zaman(Ortalama)
Katı yağ ve Bal karışımı	450 g katı yağ - 600 g bal	on-turbo	parçalayıcı ayak	3 sn
Soğan/sarımsak	500 g	on-turbo	parçalayıcı ayak	3-6 sn
Maydanoz	100 g	on-turbo	parçalayıcı ayak	5-10 sn
çiğ et (yağsız)	400 g	turbo	parçalayıcı ayak	10 sn
Fındık	300 g	on-turbo	parçalayıcı ayak	5-10 sn
Meyve	700 g	turbo	parçalayıcı ayak	10 sn
Bisküvi	300 g	on-turbo	parçalayıcı ayak	5-10 sn
Havuç	400 g	on-turbo	parçalayıcı ayak	5-10 sn

Rende ve Dilimleme

Malzeme	Maximum Miktar	Hız	Gerekli Aparat	Zaman(Ortalama)
Havuç	400 g	on-turbo	Rende aparatı	5-10 sn
Turp	400 g	turbo	Rende aparatı	5-10 sn
Patates	400 g	on-turbo	Dilimleme aparatı	5-10 sn
Balkabağı	800 g	on-turbo	Dilimleme aparatı	5-10 sn
Salatalık	800 g	on	Dilimleme aparatı	5-10 sn



Cihazın kullanım ömrünün bitmesi halinde, elektrik kablosunu keserek kullanılamayacak hale getiriniz.

Ülkenizde mevcut bulunan yasalara göre, bu tür cihazlar için özel olarak belirlenmiş çöp kutularına cihazı bırakınız.

Elektriksel atıklar, normal çöplerle birlikte atılmamalıdır.

Cihazın paketlenme elemanları geri dönüşüme uygun maddelerden üretilmiştir. Bunları geri dönüşüm çöp kutularına atınız.

Sorun Muhtemel Neden Çözüm

Cihazınız herhangi bir arızaya karşı kalite kontrolden geçirilmiştir.

Ancak yine de, herhangi bir nedenden dolayı çalışmaz ise, Fakir Yetkili Servisi'ne başvurmadan önce aşağıdaki tablo- da yer alan çözüm yollarını deneyiniz.

Hata	Muhtemel Sebebi	Çözüm
Cihaz Çalışmıyor	Fiş prize takılı değil Cihaz açık değil Prizden elektrik gelmiyor Elektrik kablosu zarar görmüş	Fişi prize takınız Cihaz açınız Farklı bir priz deneyiniz Cihazı tamire götürünüz

Sevk

Cihazın, orijinal ambalajında veya zarar görmesini önlemek için, iyi ve yumuşak pakette taşınması gerekmektedir.

Ürünümüz Fakir Elektrikli Ev Aletleri Dış Ticaret A.Ş adına Erna Maş A.Ş. Atatürk Sanayi Bölgesi İstasyon Mahallesi Prof. Mehmet Bozkurt Caddesi No:27 34555 Hadımköy İstanbul Tel No:+ 90 212 866 22 00 - Fax No: +90 212 771 45 00 tarafından üretilmiştir.

NOT / NOTES

General	18
Information about the operating instructions	18
Liability	18
Notices in the operating instructions	18
Safety	19
CE Declaration of Conformity	19
Intended use	19
Unauthorized use	20
Safety is important	20
Important Safeguards	21
In case of danger	22
In case of defects	23
Overview	24
Technical Data	24
Device description	24
Usage	25
Cleaning og the appliance	28
Waste disposal	30
Fault	30
Dispatch	30

Thank you for purchasing a floor vacuum cleaner of the Fakir Mr Chef Quadro Blender Set . It was developed and manufactured to work reliably for many years.

Information about the operating instructions

These operating instructions are intended to enable the safe and proper handling and operation of the appliance. Read these operating instructions carefully before using the appliance for the first time.

Keep the operating instructions in a safe place. Include these operating instructions when passing the appliance on to another user.

Liability

Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. will accept no liability for damages resulting from failure to comply with the operating instructions.

Fakir Elektrikli Ev Aletleri Dış Tic. A.Ş. cannot assume any liability in case the appliance is used for other purposes than its intended use or handled, repaired or serviced improperly.

Notices in the operating instructions



WARNING!

Indicates notices which, if ignored, can result in risk of injury or death.



ATTENTION!

Indicates notices of risks that can result in damage to the appliance.



NOTICE!

Emphasizes tips and other useful information in the operating instructions.

CE Declaration of Conformity

This appliance fulfills the requirements of the Appliance and Product Safety Law (GPSG) and the EU Directives 2004/108/EC "Electromagnetic Compatibility" and 2006/95/EC "Low-Voltage Directive."

The appliance bears the CE mark on the rating plate.

Intended use

- The appliance is constructed to process normal household quantities.
- Short-time operating. Use the appliance for no longer than 1 minute, and don't operate hard food for no longer than 10 seconds.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- They shall state that care shall be take when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off the appliance and disconnected from supply before changing accessories or approaching parts which move in use.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Prevent children to reach the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance near water contained in basins like bathtubs, washbasins, etc.
- Do not use any abrasive substance for cleaning the appliance.
- You could clean the surface with a damp cloth.
- Do not abuse the electrical cord. Never disconnect from outlet by pulling the power cord. Always use the body of the plug for disconnecting the appliance.
- Do not bend the power cord. Do not keep the folded power cord.
- Always unplug the appliance after use.

**NOTICE!**

Please read all instructions and safety guards carefully.

Unauthorized use

- The examples of unauthorized use listed here can result in malfunctions, damage to the appliance or personal injury:
- This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance. Children should be supervised to ensure that they do not play with the appliance.
- Children should be supervised to ensure that they do not play with the appliance. Electric appliances are not toys for children! Therefore, use and store the appliance away from the reach of children. Children do not recognize the danger involved with handling an electric appliance. Do not let the power cord dangle from the appliance.
- Keep packaging films away from children - danger of suffocation!

Safety is important!!!

For yours and others safety please read the instructions before using the appliance. Please keep this instruction in a safe place for the further use. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied that the appliance is working.

Important Safeguards

- When use electrical appliances, basic safety precautions should always be followed, including the following:
- Always unplug the appliance before assembling, disassembling, cleaning.
- Before plugging into a socket, check whether your voltage corresponds to the rating label of the appliance.
- Don't plug the appliance into the power supply until it is fully assembled and always unplug before disassembling the appliance or handle the blade.
- Don't allow children to use the blender without supervision.
- Don't let the motor unit, cord, or plug get wet
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized Fakir Service facility for examination, repair or adjustment.
- Don't let excess cord hang over the edge of the table or worktop or touch hot surface.
- Please keep this instruction manual for further usage.

Danger of fire and explosion!

- Never vacuum hot ashes or burning objects, such as cigarettes or matches.
- Never use the appliance in the vicinity of explosive or flammable materials.
- Never vacuum any solvents, explosive gases or liquids.



ATTENTION!

- Risk of short circuits! Never vacuum water and other liquids, such as damp carpet cleaning solutions..
- Destruction of filters! Never vacuum sharp or pointed objects, such as glass splinters, nails, etc. Materials that harden when dry, such as plaster or cement, can also destroy the filter.
- Damage to appliance from rain and dirt! Never use or store the appliance outdoors.
- Danger from overheating! Always keep the openings in the appliance free.

**ATTENTION! ELECTRIC CURRENT!**

- Incorrect voltage can destroy the appliance. Operate the appliance only if the voltage specified on the rating plate corresponds to the voltage in your household.
- The socket must be protected with a 16 A automatic circuit breaker.
- Use only extension cords designed for the power input of the appliance.

**WARNING: DANGER OF ELECTRIC SHOCK!**

- Never touch the plug with wet hands.
- When unplugging the appliance, always pull directly on the plug and never on the power cord.
- Do not kink, pinch or run over the power cord and do not expose it to heat sources.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer or the manufacturer's customer service department or a person with similar qualifications to prevent any hazards.
- Do not put the appliance in operation if you detect any visible damage on the housing, if the power cord is defective or if you suspect a defect (e.g. after a fall).
- Do not use any damaged extension cords.

**WARNING!**

In case of danger : In case of danger or accident, unplug the appliance immediately.

Safety In case of defects**WARNING!**

Never operate a defective appliance or an appliance with a defective power cord. There is a danger of electric shock.

Before contacting our service department, check to see if you can eliminate the problem yourself. Refer to the chapter "If at once you don't succeed".

If you were not able to eliminate the problem yourself, please contact our customer service.


Before calling, have the article no. and appliance/model name at hand. This information can be found on the rating plate of the appliance.

**WARNING!**

Repairs and maintenance may be performed only by trained technicians (e.g. Fakir customer service). Only original Fakir replacement parts may be used. Improperly repaired or serviced appliances may pose a danger to the user.

Technical data

Power consumption	: 1000 Watt motor
Voltage	: 220-240V~50/60 Hz
Protection class	: II
Usage life	: 7 years

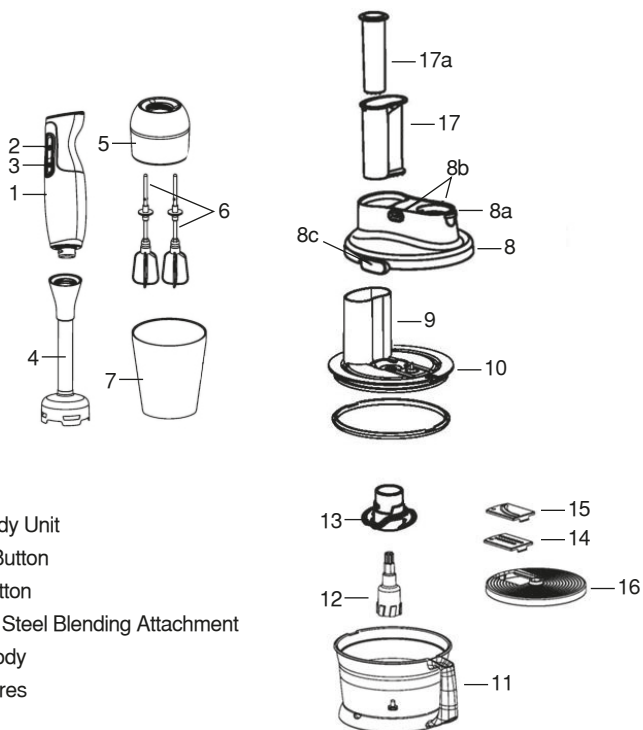

- 1-Motor Body Unit
- 2-On / Off Button
- 3-Turbo Button
- 4-Stainless Steel Blending Attachment
- 5-Beater Body
- 6-Beater wires
- 7-Beaker
- 8-Upper cover
- 8a-Motor unit unlocking button
- 8b-Locking buttons
- 8c-Locking ears
- 9-Security lid
- 10-Anti spill ring
- 11-Processor bowl
- 12-Spindle

- 13-Chopping blade
- 14-Blade holder
- 15-Slicing blade
- 16-Shredding blade
- 17&17a-Pushers

Usage

Usage of the hand blender: The hand blender is perfectly suited for preparing dips, sauces, soups, mayonnaise and baby food as well as for mixing and milkshakes.


Turn the stainless steel blender stick on the motor unit until it locks. Introduce the hand blender in the vessel. Push the safety operating button and on/off button to operate it. Use the hand blender for no longer than 1 minute.



ATTENTION!

Caution: The quadro blade is very sharp!

Caution: Don't operate food without water!

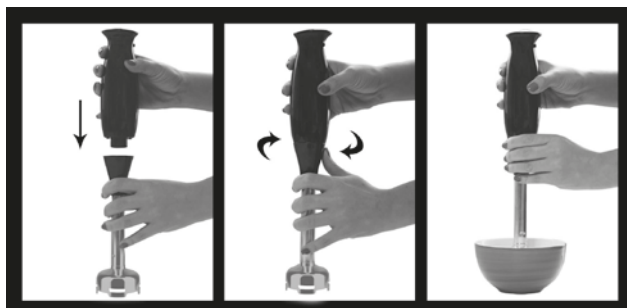


Usage

Usage of the whisk attachment: Use the whisk only for whipping cream, beating egg whites and mixing sponges and Ready-mix desserts.

Inset the whisk into the whisk holder, and then turn the gear box on the motor unit until it locks.

Place the whisk in a vessel or measurement cup and only then. Push the safety operating button and on/off button to operate it. Use the whisk for no longer than 2 minute. Turn the gear box off the motor unit after use. Then pull the whisk out of the gear box.

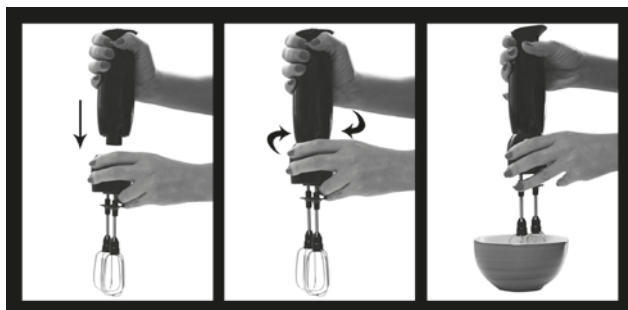

Usage

Usage the chopper with shredder disc / gratin blade: It is suitable for preparing a maximum of 800g of foodstuffs at once (no meat).

Shredder / slicing blade: suitable to use for potatoes, gratins dauphinois, carrots, cucumbers, etc

Grating blade: suitable for grating carrots, gruercheese, celery, etc. Slide the blade "S" into the blade –holder disc. Place the spindle drive onto the spindle in the middle of the bowl, then the blade –holder disc onto the spindle drive, and then the blender lid adaptor on the lid. Position and lock the lid. Put the motor body unit in place on the adaptor then start the appliance. Put the foodstuffs into the feeder tube and guide them using the pusher, never your fingers, or a utensil.



Chopper: Suitable for preparing a max of 800gr foodstuff at once (no meat). place the food in the middle of the bowl, then position the lid and lock.

Put the motor body unit in place on the adaptor then start the appliance.

Cleaning of the appliance

Cleaning the motor unit beater body and chopping bowl lid only with a damp cloth only. Do not immerse the motor unit in water! All other parts can be cleaned in the dish washer. However, after processing very salty food, you should raise the blades under water.

Also, be careful not to use an overdose of cleaner or decalcify in your dishwasher. When processing food with color, the plastic parts of the appliance may become discolored wipe these parts with vegetable oil before placing them in the dishwasher.

**ATTENTION!**

The blades are very sharp, please attention. Unplug the appliance before cleaning.

Food / Tool/ Appr Time Chart

Chopper

Ingredients	Maximum Quantities	Speed	Necessary Tool	Appr.Time
Butter and honey mixture	450 g butter - 600 g honey	on-turbo	chopping blade	3 secs
Onions / Garlic (cut in 8)	500 g	on-turbo	chopping blade	3-6 secs
Parsley	100 g	on-turbo	chopping blade	5-10 secs
Raw meat (fat free)	400 g	turbo	chopping blade	10 secs
Nuts	300 g	on-turbo	chopping blade	5-10 secs
Fruits	700 g	turbo	chopping blade	10 secs
Biscuit	300 g	on-turbo	chopping blade	5-10 secs
Carrots	400 g	on-turbo	chopping blade	5-10 secs

Shredding and slicing

Ingredients	Maximum Quantities	Speed	Necessary Tool	Appr.Time
Carrots	400 g	on-turbo	shredding disc.	5-10 secs
Radish	400 g	turbo	shredding disc	5-10 secs
Potato	400 g	on-turbo	slicing disc.	5-10 secs
Squash	800 g	on-turbo	slicing disc.	5-10 secs
Cucumber	800 g	on	slicing disc.	5-10 secs



If the service life of the device has ended, in particular if functional disturbances occur, make the worn-out device unusable by cutting through the power cable.

Dispose of the device according to the environmental regulations applicable in your country.

Electrical waste must not be disposed of together with household waste. Bring the worn-out device to a collection center.

The packaging of the device consists of recycling-capable materials. Place these, sorted out according to material, in the collectors provided, so that recycling can be carried out on them.

For advice on recycling, refer to your local authority or your dealer

If at once you don't succeed

Dear customer,

Our products are subject to strict quality control.

If this device should not function trouble-free in spite of that, we regret this very much.

Before you contact our Fakir Customer Service, check whether you can correct the fault yourself.

Malfunction	Possible cause	Solution
Appliance does not work	Plug is not plugged in or the appliance is not switched on. Socket does not carry any current. Power cable is damaged.	Plug in the plug or switch the appliance on Test the cylinder vacuum cleaner at another socket which you are sure carries current Have the cable replaced by authorized Fakir services

Dispatch

Carry the appliance in the original package or a similar, well-padded package to prevent damage to the appliance.

This product is produced on behalf of Fakir Elektrikli Ev Aletleri Dış Ticaret A.Ş. by Erna Maş A.Ş. Atatürk Sanayi Bölgesi İstasyon Mahallesi Prof. Mehmet Bozkurt Caddesi No:27 34555 Hadımköy - İstanbul
Tel No: + 90 212 866 22 00 Fax No: +90 212 771 45 00

NOT / NOTES



İmalatçı / İthalatçı Firma:

Fakir Elektrikli Ev Aletleri Dış. Tic. A.Ş.

Meşrutiyet Cad. No:43 Tepebaşı-İstanbul TÜRKİYE

Tel:(212) 249 70 69 (pbx) Fax:(212) 251 51 42