
EN User Guide

Earphone Function

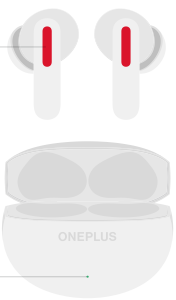

Earphone Function Settings and Upgrades

OnePlus phone users
For OnePlus 6 and later models, please update the "Wireless Earphones" App (ColorOS 11 or later) or "OnePlus Buds" App (HydrogenOS 11) to the latest version in the app store. Then you can customize the earphone function in [Settings - Bluetooth], use the earphone features, and upgrade the earphone software version.

Other Android (and iOS) phone users
Please download and install the [HeyMelody] App. Customize the earphone function in the App, use the earphone features, and upgrade the earphone software version to have a better experience.

HeyMelody


※ Please download HeyMelody from Google Play Store or App Store.

Pairing and Connecting

Connection to OnePlus phone
For OnePlus 6 and later models, please enable Bluetooth on your phone, open the earphone charging box and get it close to the phone, and then follow the on-screen instructions.

Connection to other devices
Please put the earphones into the box and open the lid. Press and hold the function button for 2 seconds until the white indicator flashes, then enter the Bluetooth settings and select "OnePlus Buds 4".

Restoring factory settings
Put the earphones into the box and open the lid. Press and hold the function button for 15 seconds until the red indicator flashes to restore the earphones to factory settings.

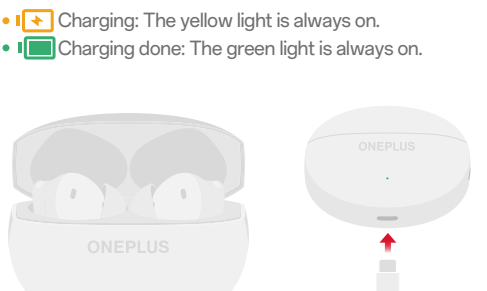

Replacing Ear Caps

The proper size of ear caps is crucial to the noise reduction experience, sound quality, and wearing comfort. Please try on ear caps of different sizes and make the right choices. Please note that your left and right ears may need different sizes of ear caps.

※Please use the ear caps with the earphone fit detection function. For details, see the instructions for the function. When replacing the ear caps, please keep the tuning hole unobstructed.
※M size ear caps have been pre-installed on the earphones.



Touch Function

Earphone function	Left earphone	Right earphone
*Play/Pause	●	●
Answer/Hang up calls	●●	●●
Next track	●●	●●
Previous track	●●●	●●●
Noise reduction/ transparent mode switching	1s	1s
Volume "+"	↑	↑
Volume "-"	↓	↓

● Tap
●● Double-tap
●●● Triple-tap
Press and hold for 1 second
Slide up and down



*Functions marked with an asterisk are disabled by default, and you will need to enable them in the App settings if necessary.

Charging

Put the earphones into the charging box and close the lid to charge them.
When the earphones are in the charging box, the indicator shows the battery level of the earphones.
When the earphones are not in the charging box, the indicator shows the battery level of the charging box.

Indicator color:
Green light indicates a high battery level, yellow light a medium battery level, and red light a low battery level.

Charging the charging box:
Charge the charging box with a USB-C charging cable.

- Charging: The yellow light is always on.
- Charging done: The green light is always on.