MCHOSE

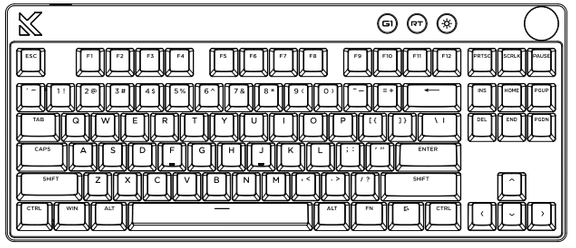

— Mix 87 Series User Manual —

Hall Effect Magnetic Switch Keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

· PRODUCT OVERVIEW

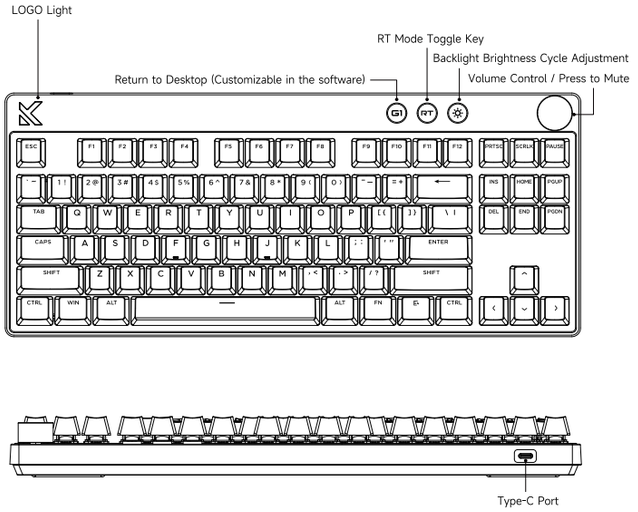

· DRIVER INTRODUCTION

Web Driver: https://www.mchose.store/pages/firmware-2
Open the URL in a browser, click on **[Open M HUB WEB]** > **[Initialize Device]** > **[Allow Browser Access]**, and then select the corresponding product model to connect.

Desktop App Driver: https://www.mchose.store/pages/firmware-2
Open the URL in a browser, click on **Download M HUB Driver** and then download and install it.

Note: The MHUB desktop app driver currently supports only Windows 10 and above; Windows 7 and macOS are not supported at this time.

· FN COMBINATION KEY

Fn +

O	Mac System	Z	LOGO Light Brightness +
P	Windows System	X	LOGO Light Brightness –
D	Backlight Mode Switch	C	LOGO Light Mode Switch
F	Backlight Color Switch	V	LOGO Light Color Switch
G	Backlight Speed Switch	B	LOGO Light Speed Switch
Win	Lock/Unlock Win Key		

· COMBINATION KEY FUNCTIONS

Fn +

WINDOWS SYSTEM		
Keys	Multimedia Combo Functions	Multimedia Functions (Single Press)
F1	Screen Brightness –	F1
F2	Screen Brightness +	F2
F3	/	F3
F4	/	F4
F5	/	F5
F6	/	F6
F7	Previous Track	F7
F8	Play/Pause	F8
F9	Next Track	F9
F10	Mute	F10
F11	Volume –	F11
F12	Volume +	F12

· COMBINATION KEY FUNCTIONS

Fn +

MAC SYSTEM		
Keys	Multimedia Combo Functions	Multimedia Functions (Single Press)
F1	F1	Screen Brightness –
F2	F2	Screen Brightness +
F3	F3	/
F4	F4	/
F5	F5	/
F6	F6	/
F7	F7	Previous Track
F8	F8	Play/Pause
F9	F9	Next Track
F10	F10	Mute
F11	F11	Volume –
F12	F12	Volume +