aceline

User manual

Milk Frother
MF1

Contents

Intended use 3

Safety Precautions 3

Safety Precautions for Handling the Rechargeable Battery (Li-pol/Li-ion) 4

Device Diagram 5

Operating Instructions 6

Charging the devise 6

Using the device 7

Cleaning and Maintenance 7

Specifications 8

Package contents 8

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal 8

Warranty Information 9

Additional information 10

Dear Customer,

Thank you for choosing our products.
We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended use

Milk frother is a device designed to froth milk and cream during beverage preparation.

Safety Precautions


- Do not use the device near sources of water or other liquids. Never place the device under running water or immerse it in water.
- Keep hands, hair, loose clothing, and any kitchen utensils away from the whisk while it is operating. Do not touch moving parts of the device.
- Do not run the device continuously for more than 3 minutes. Allow the device to cool down for 3 minutes.
- Do not use the device if visible damage is detected. Unplug it immediately and contact an authorized service center.
- Do not disassemble the device yourself to avoid electric shock. For repair, contact an authorized service center.
- Do not place the device or power cord near heating elements, gas burners, etc.
- The device is intended exclusively for frothing milk and cream during beverage preparation. Do not use it for any other purpose.
- When not in use, store the device in a clean, dry place.

- Do not attempt to detach the whisk.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
- This device is not intended for commercial use.

Safety Precautions for Handling the Rechargeable Battery (Li-pol/Li-ion)

- Use only the original charging cable with the device.
- Observe the temperature requirements. Batteries should be stored in a charged state at temperatures between +15 °C and +35 °C with normal humidity. Batteries do not perform well when operated for extended periods in extremely high (above +40 °C) or low (below -10 °C) ambient temperatures. Do not leave the battery in direct sunlight.
- Do not disassemble, incinerate, or use batteries that show signs of damage.

Device Diagram

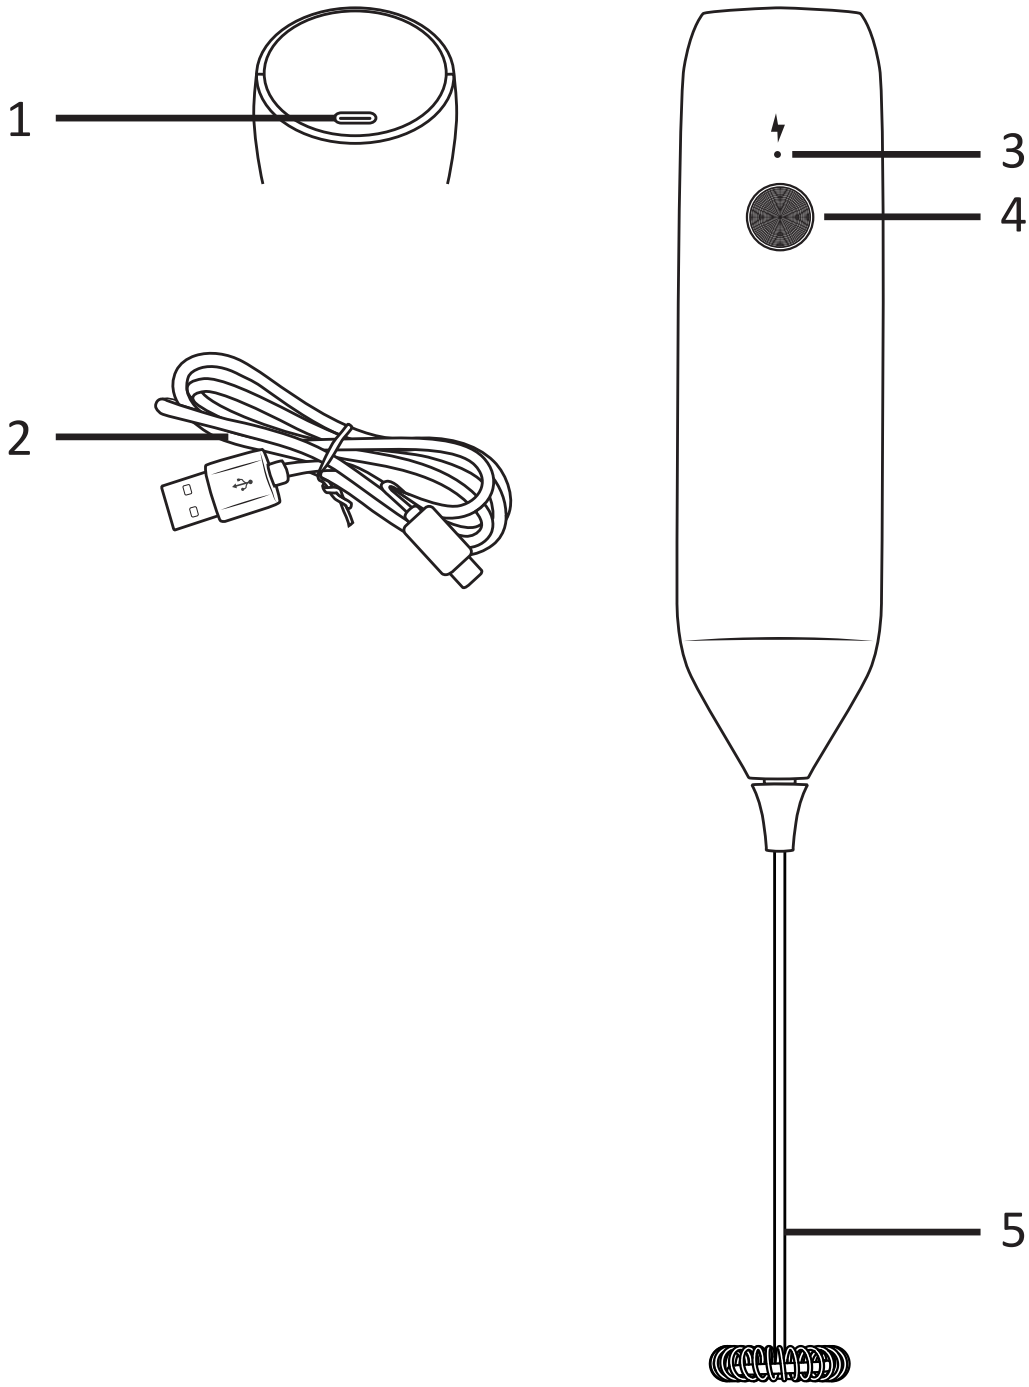


1. USB Type-C charging port.
2. Charging cable.
3. Charge indicator.
4. ON/OFF button.
5. Whisk.

Operating Instructions

Charging the devise

1. Insert one end of the charging cable into the USB Type-C port on the top of the device, and connect the other end to a 5V USB power adapter.
   Note: The power adapter is not included.
2. Plug the adapter into a power outlet. If the charge indicator on the device lights up, the device is charging.
3. When the battery is fully charged, the indicator will turn off. Charging typically takes about 2.5 hours.

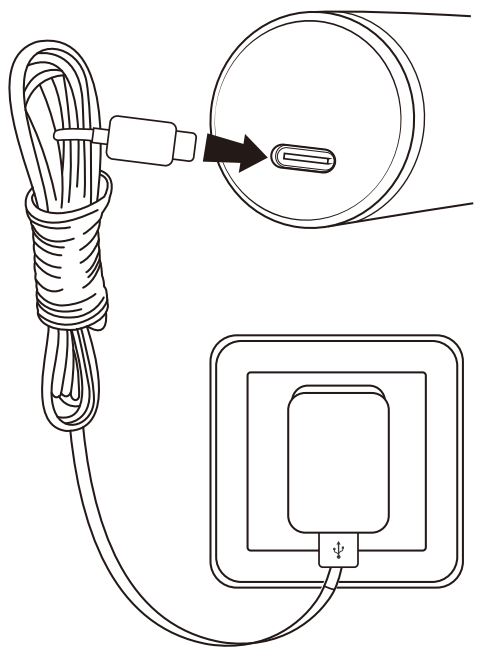


CAUTION:

- If the device is not used for an extended period, it is recommended to charge the battery every three months to prevent deep discharge.
- Before connecting to a power source, ensure that the adapter, the charging port, and the cable plug are dry.
- Do not use a damaged charging cable.

Using the device

- Prepare a container with the milk you wish to froth.
- Immerse the whisk in the milk and press the button to start frothing.
- Press the button again when the foam has reached the desired consistency; frothing will stop.

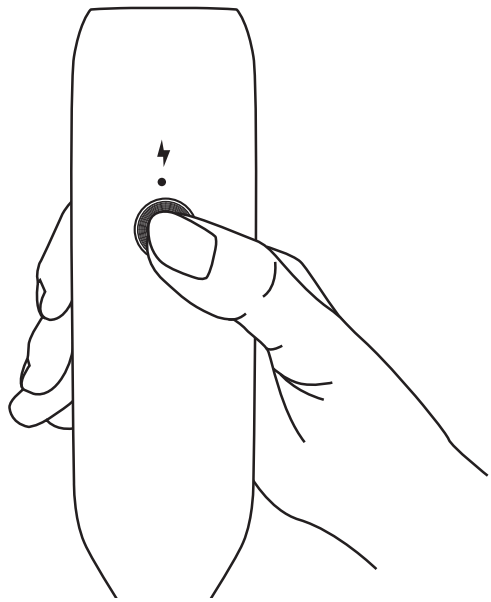

Cleaning and Maintenance

- Clean the device's body with a soft, slightly damp cloth or tissue. Never hold the motor unit under running water for cleaning.
- To clean the whisk, you may place it in a cup filled with water and press the ON/OFF button.
- Do not place the frother upside down (the whisk pointing upward) to dry, as liquid may drip down into the motor unit.
- Do not use chemical or abrasive cleaning agents, or hard sponges, to avoid damaging the surface of the device.

Specifications

- Model: MF1.
- Trademark: Aceline.
- Power supply: 5 V ⎓ 2 A.
- Power: 5 W.
- Battery type: Li-ion.
- Battery voltage: 3,7 V.
- Battery capacity: 500 mA·h.
- Body material: plastic.
- Whisk material: stainless steel.
- IP Code: IPX0.
- Scope of application: domestic.

Package contents

- Milk frother.
- USB Type-C charging cable.
- User manual.

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer’s and at the consumer’s sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.

- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 12 months.
Service Life: 24 months.

For the up-to-date list of authorized service centers, please visit:
https://www.dns-shop.ru/service-center/


Additional information

Manufacturer: HUIZHOU REELANX TECHNOLOGY CO., LTD.
Area B, Room 01, 2F, Building 3, East Zone, Taidong Science and Technology Park, Dayawan West Zone, Huiyang District, Huizhou, Guangdong, China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.

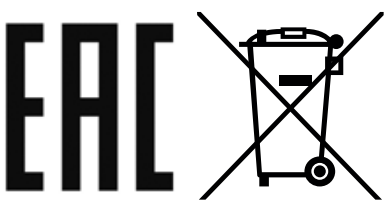

Production date (mm.yyyy): _____ v.1

aceline