MCHOSE



— V9 *Turbo* —
Gaming Headset

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT OVERVIEW



Volume knob
Volume +: Scroll Upward
Volume −: Scroll Downward

Mode/Status Indicator Light
BT Wireless Pairing: Red and blue lights flash alternately
BT Wireless Connected: Blue light slow flashing
2.4G Pairing: Red and green lights flash alternately
2.4G Connected: Green light slow flashing
Charging: Red light stays on;
Fully Charged: Green light stays on
Low Battery: Red light slow flashing

Power Button
Power On/Off: Long press for about 3s


Multi-Function Button
Pause/Play: Single click
Mode Switch: Double click
Sound Effect Switch: Long press for about 1.5s

Microphone Button
Mic On/Off: Single click
Answer/End Call: Double click
Reject Call: Long press for about 1.5s

Type-C Port

Microphone Indicator Light
Mic On: Blue light stays on
Mic Off: Blue light off

PRODUCT OVERVIEW

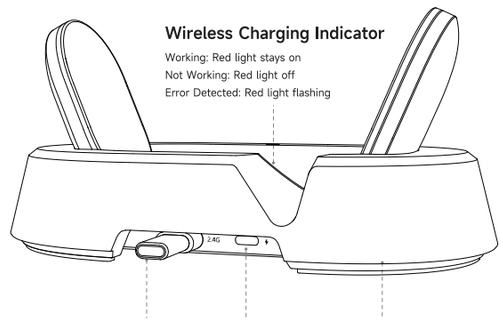

Error conditions include: the headphones not properly seated, metal objects on the contact surface, or insufficient power from the base's Type-C port

Please remove the headphones from the wireless charging base, clear the issue, wait about 3 seconds, and then place it back on the base.


2.4G CONNECTION

Method 1 (Recommended)




① Insert the receiver into the wireless charging base port, and plug the Type-C end of the data cable into the base port, plug the USB end into the computer port.

Method 2

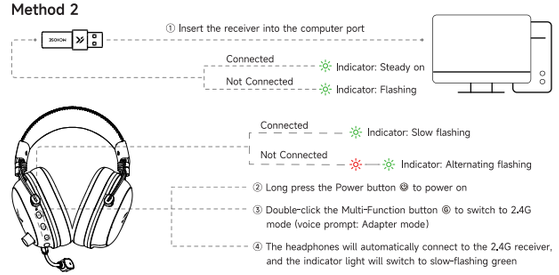

- Receiver Pairing (Paired by default at the factory): In 2.4G mode, long press the [Power Button] and [Microphone Button] until the indicator flashes white 3 times, then insert the USB receiver into the computer. The receiver's green indicator stays on, indicating 2.4G re-pairing is successful.
- For manual pairing, keep the headphones as close to the receiver as possible.

BT WIRELESS CONNECTION

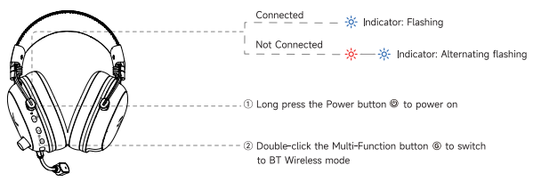

Pairing Name: MCHOSE V9 Turbo


SOUND CARD MODE



1. With the headphones powered on, plug in the data cable and connect to the computer. The headphones will automatically switch to Sound Card Mode
2. Double-click the Multi-Function button Ⓜ to cycle through [Adapter Mode] / [BT Wireless Mode] / [Sound Card Mode]

HEADPHONE CHARGING

Wireless Charging (Recommended)

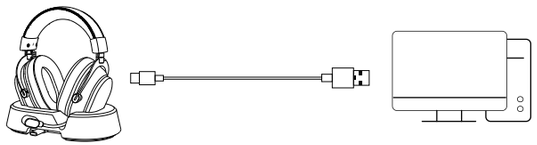

1. Plug the Type-C end of the data cable into the corresponding port on the wireless charging base, and the USB end into the computer. Place the headphones on the wireless charging base to start charging
2. Charging: Headphone indicator red steady on; Fully Charged: Headphone indicator green steady on.

Wired Charging



1. Plug the Type-C end of the data cable into the headphone port, and the USB end into the computer to charge the headphones
2. Low Battery: Indicator red slow flashing; Charging: Indicator red steady on; Fully Charged: Indicator green steady on.

DRIVER INTRODUCTION

Desktop App Driver:

https://www.mchose.store/pages/firmware-2

Open the URL in a browser, click on **Download M HUB** Driver and then download and install it.

Note: The MHUB desktop app driver currently supports only Windows 10 and above; Windows 7 and macOS are not supported at this time.

NOTICE

This device has been tested and found to comply with the limits for a Class B digital device under FCC Part 15. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy; if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with FCC Part 15 regulations. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ CHARGING INSTRUCTION

1. It is recommended to charge the headphones using a computer USB port only.
2. For optimal wireless charging performance, connect the charging base to a stable, well-powered computer USB port.
3. Do not use power adapters with unstable voltage or current to charge the headphones.
4. Keep the device away from high-temperature equipment while charging.
5. Turn off the headphones when not in use for an extended period.
6. Avoid using low-quality or non-compliant power adapters for charging.

These charging guidelines also apply to other chargeable devices such as keyboards, mice, headsets, and speakers.