
Vader 3/3 Pro Game Controller

User Manual

掃碼查看用戶手冊
Scan QR code to read the user manual

Innovative Force-switchable Trigger

Toggle the back gear switch to switch the trigger gear

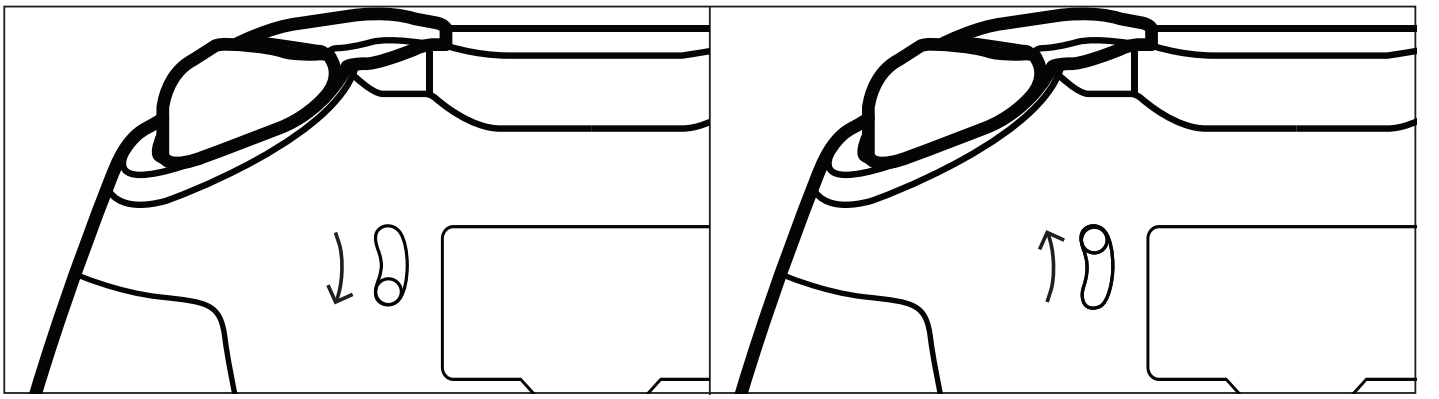

1 Linear gear: precise control, 9mm long key travel, Hall stepless magnetic induction, precision throttle

2 Microswitch gear: fast trigger, 0.3mm ultra-short key travel, mouse-level micro motion response, easy continuous shooting

Flydigi Space Station For More Customize Setting

Visit Our official website www.flydigi.com download "Flydigi Space Station", you can customize buttons, macros, body feeling, trigger and other functions.

The trigger vibrates
Switch trigger vibration, set vibration mode

Joystick adjustment
Set the center dead band and sensitivity curve


Somatosensory mapping
The motion can be mapped to a joystick/mouse, making shooting games more accurate

Light conditioning
Set up a variety of light effects, adjust color and brightness


*Trigger vibration function is only supported on Pro models

Connect With Computer


Wireless dongle connection

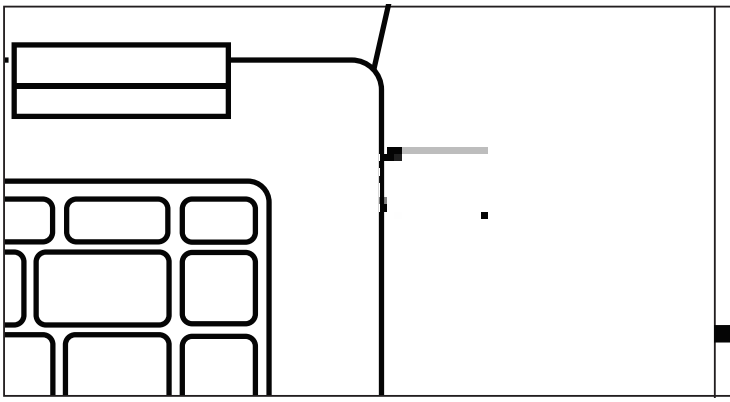


1 Plug the dongle into the computer's USB port

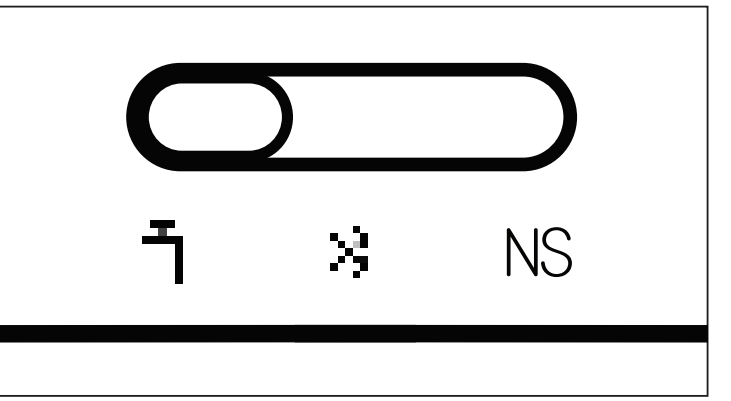

2 Dial the back gear to , press the button, the controller will be connected automatically, and the first indicator light is solid white

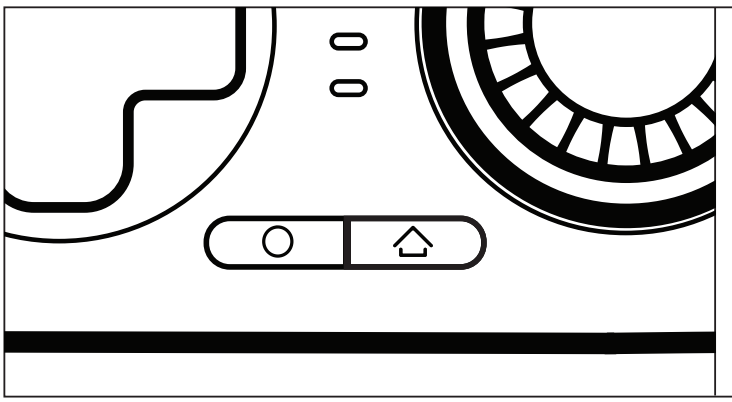

3 If the indicator is blue, press and hold the ○+X key at the same time until the indicator turns white

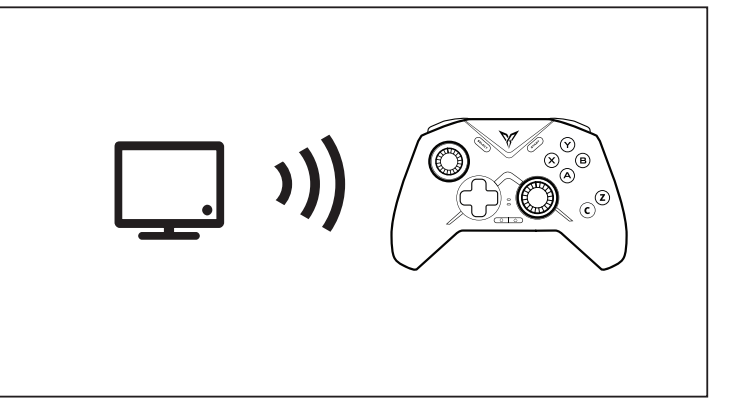

4 The next time you use it, press the button once, and the controller will be connected automatically

Wired connection

Connect the computer and the controller through the USB cable, and the indicator light is solid white to indicate that the connection is successful


BT connection

Turn the back mode gear to and connect the Xbox Wireless Controller to your computer's BT Setting

Connect to Switch


NS




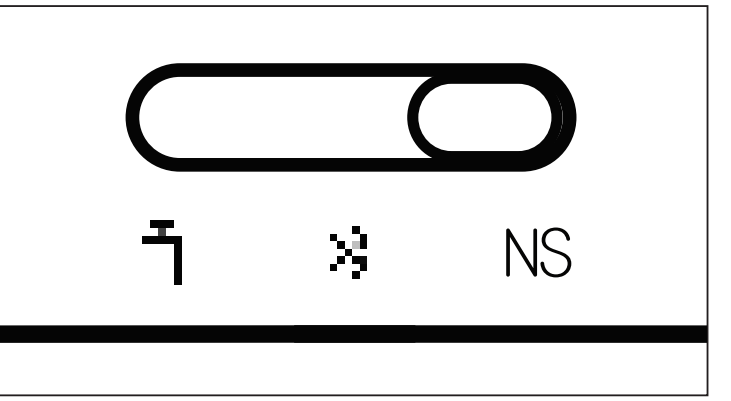

1 Click the controller icon on the Switch homepage to enter [Change grip/order]

2 Shift the back gear to NS

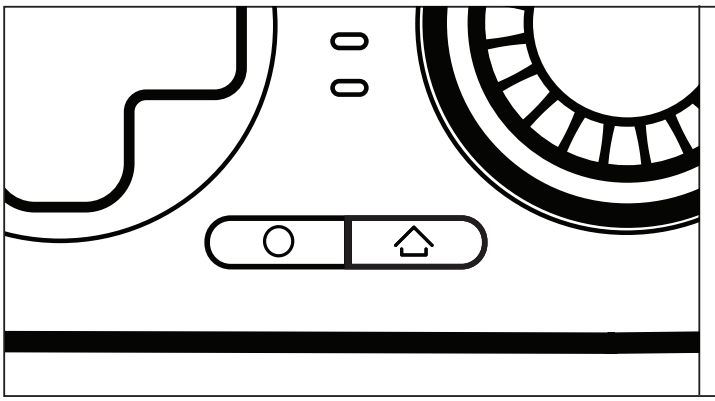

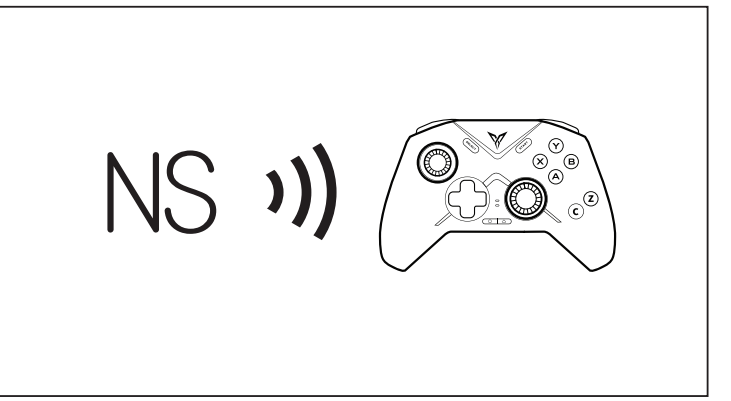


3 Press the ⌂ button, the controller will be connected automatically, and the first indicator light is solid blue


4 The next time you use it, press the ⌂ button once and the controller will automatically connect

In Switch mode, the key and key-value mapping relationship is as follows

A	B	X	Y	SELECT	START	⌂	○	
B	A	Y	X	-	+	home page	Screenshot	**Switch**


Connect an Android/iOS device

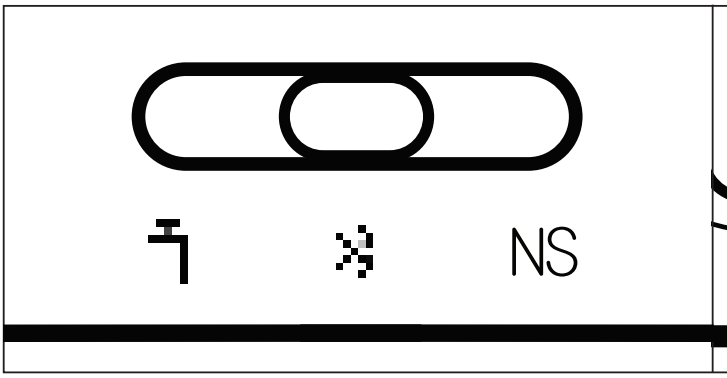


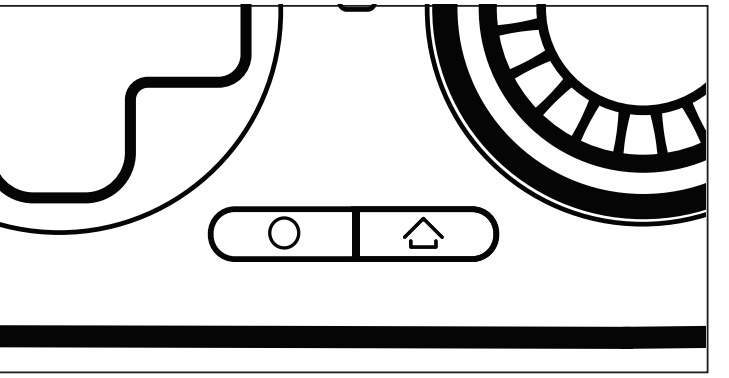

1 Shift the back mode gear to

2 Press the button once to wake up the controller

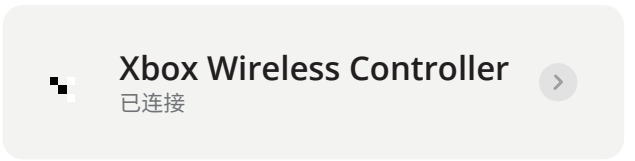

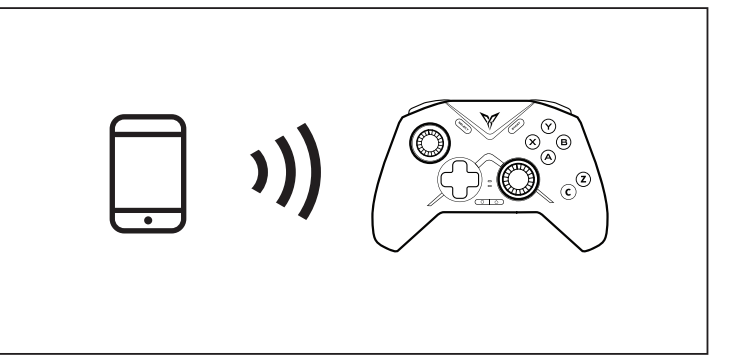

3 Turn on the device's Bluetooth, connect to the Xbox Wireless Controller, and the controller indicator

4 The next time you use it, press the button once and the controller will automatically connect

Basic operations

Power on: Press the [Home] button once
Power off: switch back gear; After 5 minutes of no operation, the controller will automatically turn off
Low battery: The second LED flashes red
Charging: The second indicator is solid red
Fully charged: The second indicator is solid green


Specification


mode	Applicable Platforms	Light	Connection method	System requirements
▪	PC	Long press ○+X to switch to XInput mode, the indicator is white Long press ○+A to switch to DInput mode, the indicator is blue	Dongle/ Wired	Win 7 and Above
▪:▪	PC/Android /iOS		BT/Wired	Win 7 and Above Android 10 and Above iOS 14 and Above
NS	Switch	Blue	BT/Wired	Switch

XInput mode: suitable for the vast majority of games that natively support controllers
DInput mode: For emulator games that natively support controllers

DInput mode: For emulator games that natively support controllers
Wireless RF: Bluetooth 5.0
Service distance: less than 10 meters
Battery information: rechargeable lithium-ion battery, battery capacity 800mAh, charging time 2 hours, charging voltage 5V, charging current 800mA
Operating current: less than 45mA when in use, less than 45μA in standby
Temperature range: 5 °C ~ 45 °C use and storage

Appearance

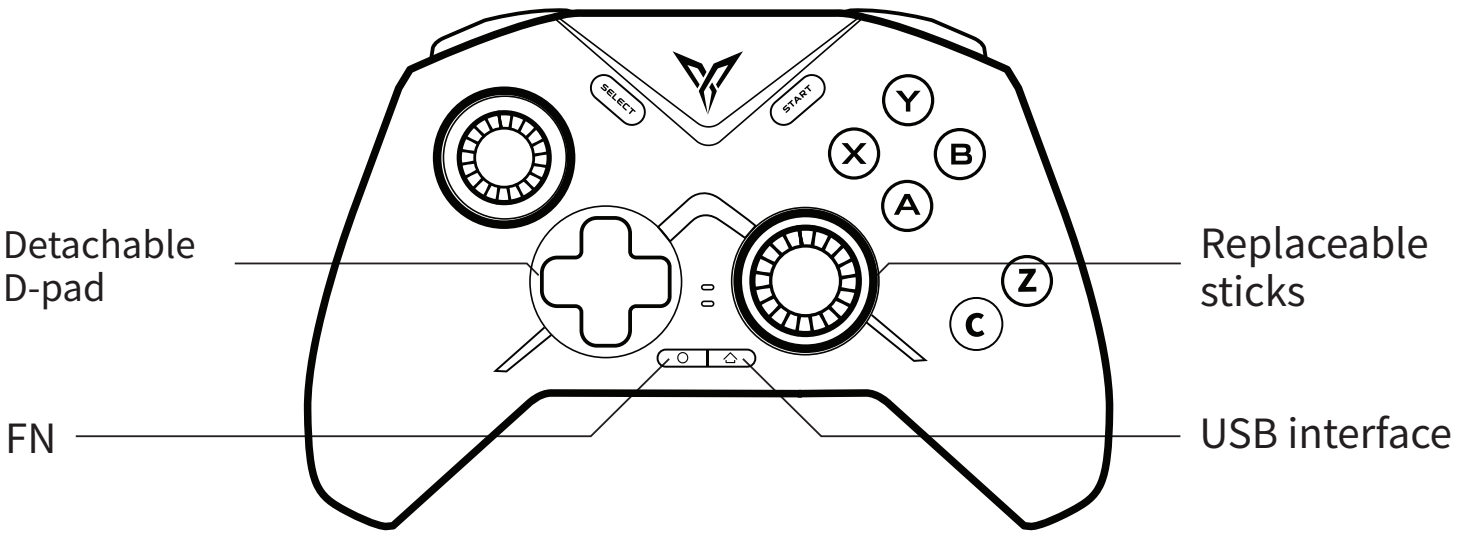
Detachable
D-pad
FN
SELECT
START
Y
X
B
A
Z
C
Replaceable
sticks
USB interface

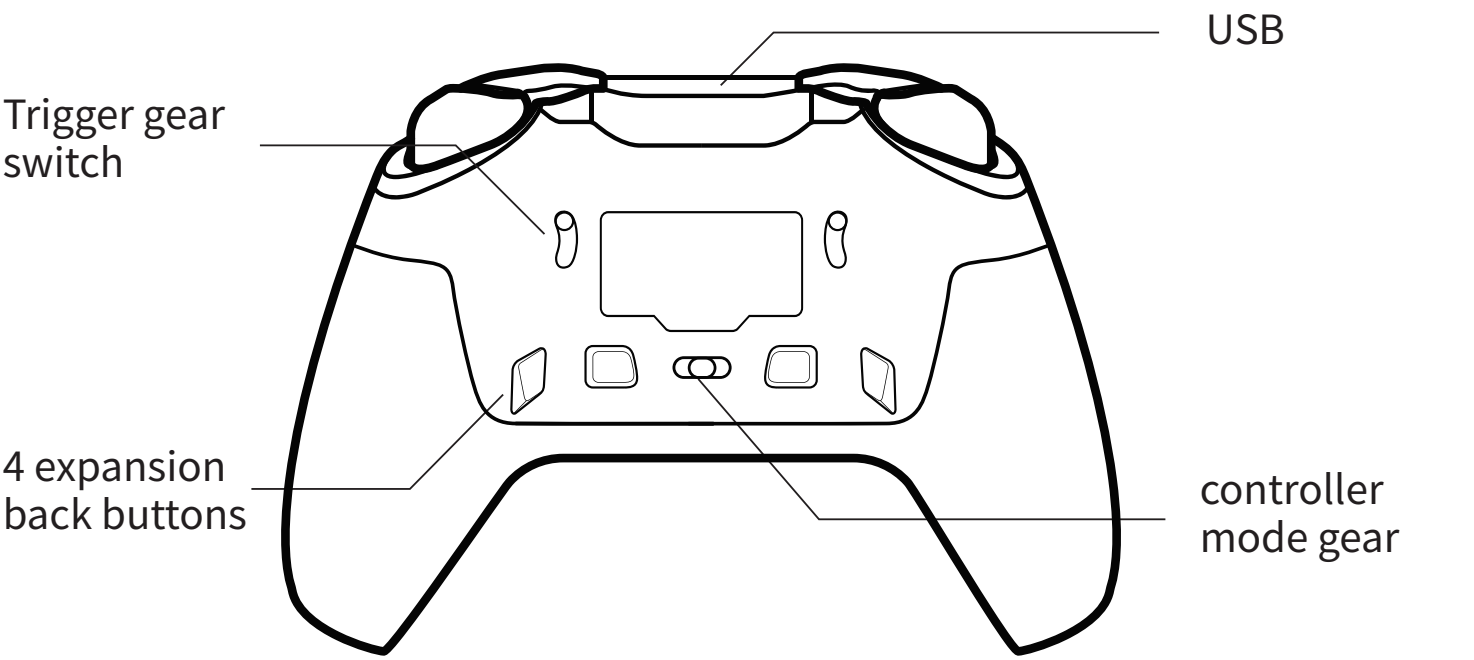
USB
Trigger gear
switch
4 expansion
back buttons
controller
mode gear

Q & A

Q: The controller cannot be connected?

A: Please make sure that the back gear of the controller is correct, and press and hold the ⌂ button for three seconds at the same time, the indicator flashes quickly, and the controller enters the pairing state
- Pair the receiver: Unplug the receiver and plug it back into the USB port
- Pair Bluetooth: Unpair the device on the Bluetooth settings page, turn Bluetooth on and off, and reconnect

Q: How to upgrade the controller firmware?

A: Install the Feizhi space station on the computer, or install the Feizhi game hall on the mobile phone, and upgrade the firmware according to the software boot

Q: Is there an abnormality in the joystick/trigger/body feeling?

A: Install the Feizhi space station on the computer, enter the test page, and press the guide calibration controller

The name and content of harmful substances in the product

Part Name	Toxic or Hazardous Substances and Elements					
	Pb	Hg	Cd	Cr	PBB	PBDE
PCB Borad	○	○	○	○	○	○
Shellt	○	○	○	○	○	○
Packaging	○	○	○	○	○	○
Wires	○	○	○	○	○	○
Polymer battery	○	○	○	○	○	○
Silicone	○	○	○	○	○	○
Small structural parts such as metal and tape	○	○	○	○	○	○

This form has been prepared in accordance with the provisions of SJ/T 11364

○ Indicates that the content of the hazardous substance in all homogeneous materials of this part is within the limit specified in GB/T 26572-2011 Require the following

× Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the provisions of GB/T 26572-2011 The limited requirements