G316

8K Customizable Mechanical Gaming Keyboard - 98% layout


8K客制化机械游戏键盘 - 98配列

SETUP GUIDE | 设置指南



logitech 罗技

ENGLISH 3
简体中文. 7

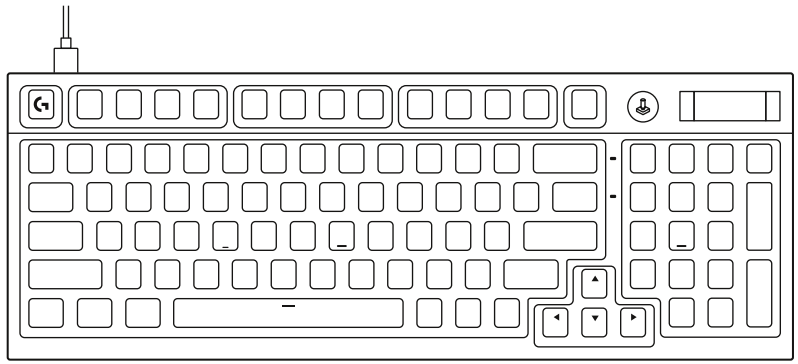



KEYBOARD BRIEF INTRODUCTION

1 Game mode switch

2 Volume roller


3 8K indicator

4 Caps lock indicator

5 Per-Key RGB
- Each key has RGB backlighting


6 Swappable feet

7 Type-C port

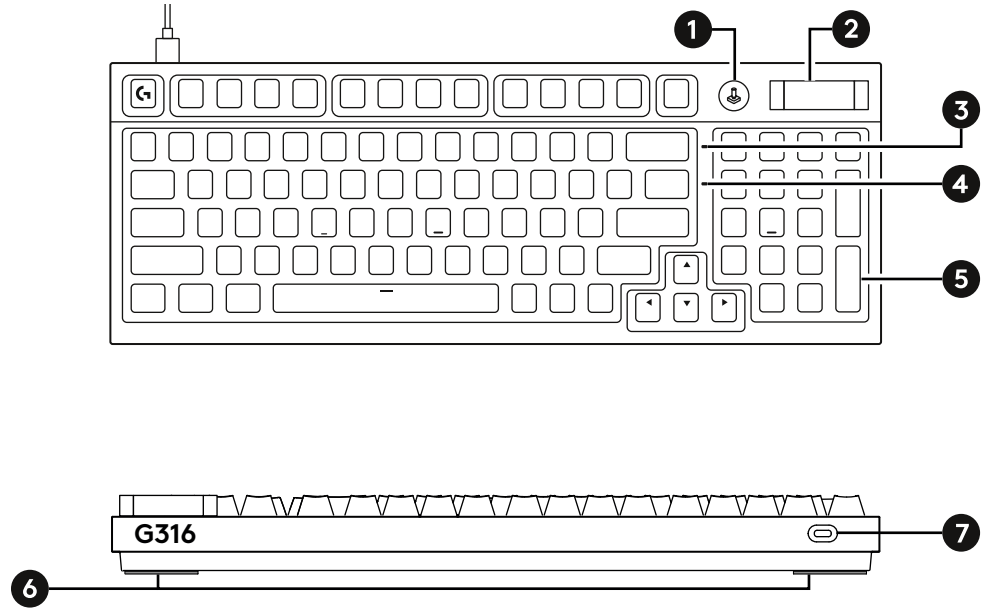


SWAPPABLE FEET

The feet can be installed in either orientation to achieve tilting angles of 4° or 8° respectively.

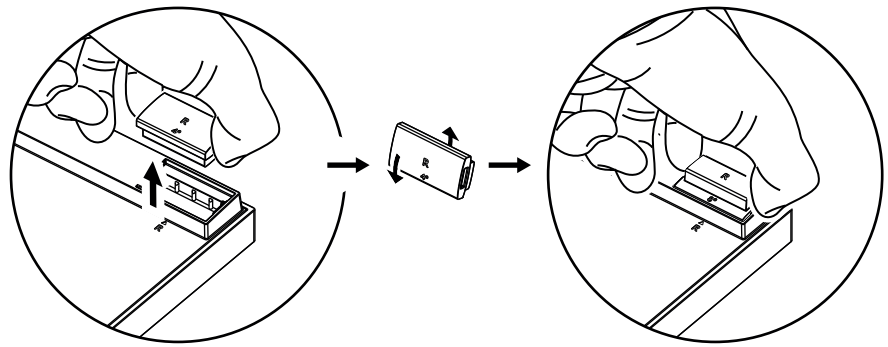

9 FN-BASED SHORTCUTS


Hold down Fn while pressing one of the F1-F3 or one of the F7-F12 keys to perform the following actions.

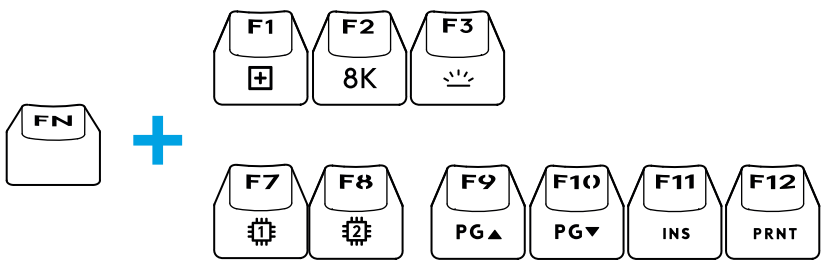

FN + F1	FKC hotkey
FN + F2	1k vs 8K report rate switch
FN + F3	Adjust the brightness in cycle to different levels
FN + F7	Select Profile 1
FN + F8	Select Profile 2
FN + F9	Page Up
FN + F10	Page Down
FN + F11	Insert
FN + F12	Screenshot


GAME MODE SWITCH

This button disables the standard *Windows* key and other keys to avoid mis-operation during gaming.

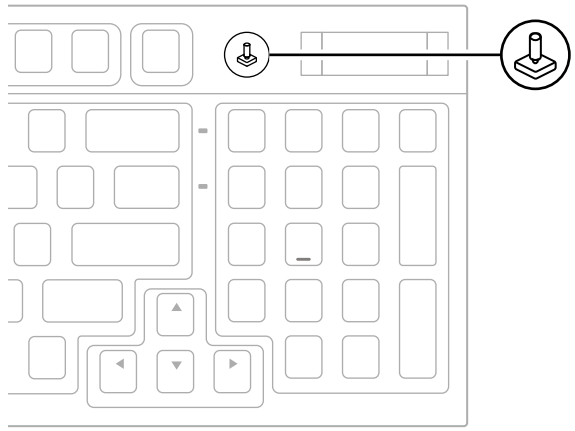


SETTING UP

Type-C connected with PC and Keyboard.

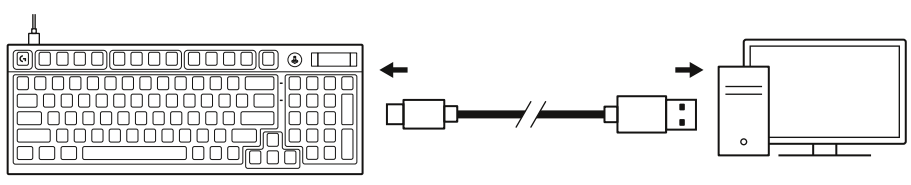

G HUB DOWNLOAD

Download and install G HUB software to your PC/*mac* for the best gaming experience (G HUB has onboarding story for features). Go to www.logitechG.com/ghub

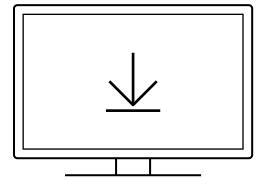

G HUB
logitechG.com/ghub

DISCLAIMER

The keycaps and switches of this keyboard support hot-swapping.

We recommend using a keycap or switch puller (not included). Please ensure installation in the correct direction to avoid damage.

To achieve an 8K Hz reporting rate, it is recommended to use the data cable included in the product packaging to directly connect the keyboard to your computer. If a USB adapter is required, please ensure it supports USB 2.0 High-Speed (480 Mbps) or USB 3.0 and above (5 Gbps or higher) transfer rates.

Failure to do so may result in insufficient support for 8K Hz data transmission, which could affect the user experience.

键盘简介

1 游戏模式开关

2 音量滚轮


3 8K 指示灯

4 大写锁定指示灯

5 全键 RGB 背光
- 每个按键都有 RGB 背光


6 可插拔脚垫

7 Type-C 端口

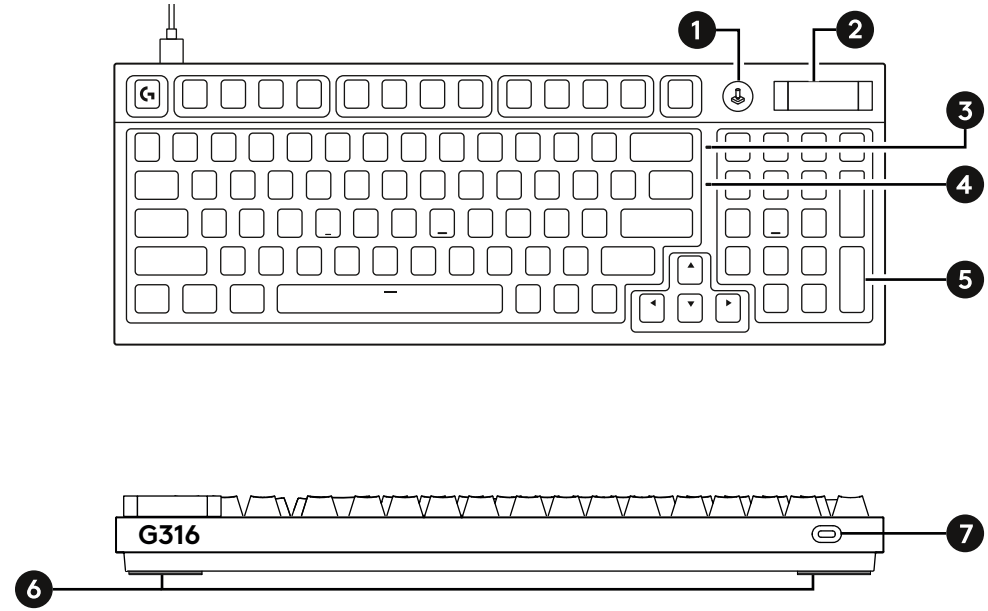


可插拔脚垫

脚撑可选两种不同的方式安装（前后面），
分别实现 4°或 8°的倾斜角度。

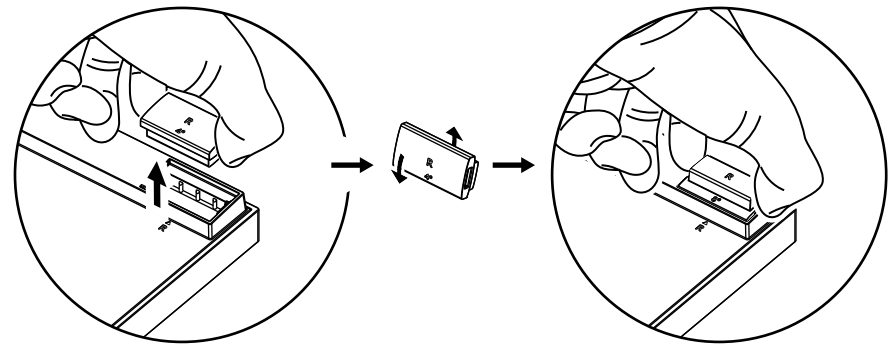

9 个 FN 快捷键


按住 Fn 的同时, 按下 F1 至 F3 或者 F7-F12 的任意一个键, 可以分别完成相关操作。

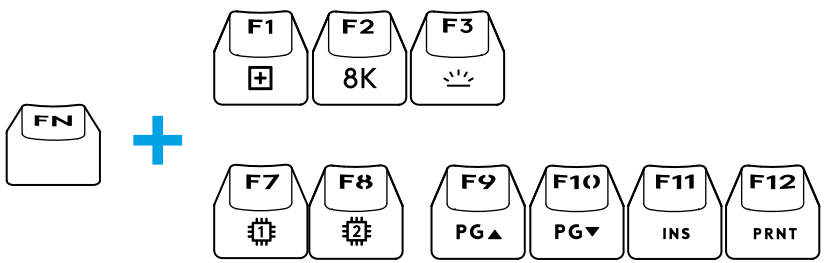

FN + F1	全键自定义快捷键
FN + F2	1k 及 8K 回报率切换
FN + F3	循环调节键盘背光亮度
FN + F7	选择配置文件 1
FN + F8	选择配置文件 2
FN + F9	向上翻页
FN + F10	向下翻页
FN + F11	插入
FN + F12	截屏


游戏模式开关

游戏模式开关打开后将禁用 *Windows* 按键和其他在 G HUB 里选中的按键，从而避免游戏中的误触。

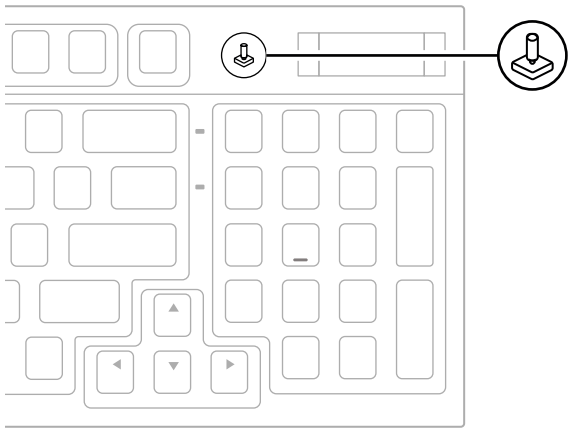


设置说明

用 Type-C 线连接电脑和键盘。

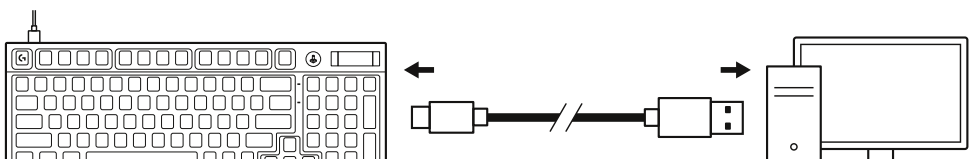

下载 G HUB

下载 G HUB，自定义您的设备并使用增强功能。

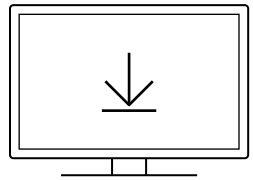

G HUB
logitechG.com/ghub

免责声明

本键盘的键帽及轴体支持热插拔。建议使用拔键/拔轴器(需自行购买)进行操作，并注意正确安装方向，以避免损坏。

为了实现 8K Hz 回报率，建议使用本产品包装内附带的数据线将键盘直接连接至电脑。如果需要使用 USB 转接器，请确保转接器支持 USB 2.0 High-Speed (480 Mbps) 或 USB 3.0 及以上传输速率 (5 Gbps 及以上)。否则可能无法满足 8K Hz 数据传输要求，从而影响使用体验。



© 2025 Logitech. Logitech, 罗技, Logitech G, 罗技G, Keep Playing, Lightspeed, and their logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. *macOS* is a trademark of Apple Inc. *USB*-C and the USB logo are trademarks of USB Implementers Forum. *Windows* is a trademark of the Microsoft Corporation. All other third-party trademarks are the property of their respective owners.

版权所有©2025罗技。Logitech、罗技、罗技G、Logitech G、Keep Playing、Lightspeed 及其标志为罗技欧洲公司和/或其美国及其他国家/地区附属公司的商标或注册商标。蓝牙™文字商标和标志为Bluetooth SIG, Inc. 所有的注册商标，罗技对此类商标和标志的所有使用均已获得授权。*mac*OS是Apple Inc. 的商标。*USB*-C和 USB 标志是 USB Implementers Forum的商标。*Windows*是Microsoft Corporation的商标。所有其他第三方商标均为其各自所有者的财产。 本说明书内所使用的数据如无特别说明均来自罗技有限公司和/或其关联公司和/或其指定的供应商。图片仅作说明之用，可能与实物有所差别。

WEB-621-002747 002