ATK GEAR


ATK RS6 Air User Manual

Models: ATK RS6 Air


简体中文

01 产品清单规格

型号： ATK RS6 Air
按键数量： 68键
键盘轴体： 磁轴
设备名称： ATK RS6 Air
额定功率： 5V ⎓ 1A
工作模式： Type-C有线接口

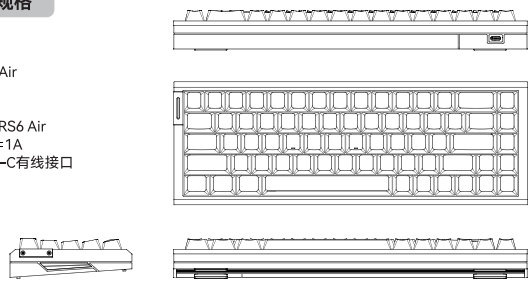

02 FN组合功能

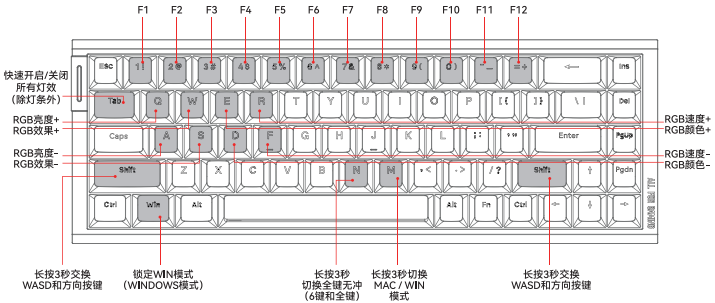

03 设备连接

有线模式

- 使用本产品USB线材连接至键盘Type-C接口以及设备端USB-A接口，键盘灯光亮起则连接成功

04 特殊FN键功能说明

恢复出厂模式

- Fn+Backspace+ESC: 依序组合长按5秒，键盘整体灯光红光闪烁3次后恢复出厂模式

交换WASD与方向键

- 依序组合Fn+Shift长按3秒，W、A、S、D键红灯闪烁3次切换到上下左右方向键，键盘恢复默认灯效

切换Windows/Mac系统模式

- 依序组合Fn+M长按3秒，M键灯光红光闪烁3次，切换至Mac系统，键盘恢复默认灯效

锁定Win键

- Fn+Win：短按一次开启Win键红光常亮，锁定时组合短按一次解除锁定
（此操作仅限键盘处于Windows模式下有效）

05 常见疑难

我想要自定义按键、使用宏功能、修改更多RGB灯光效果,应该怎么办?

- 通过 ATKGEAR.COM 下载最新驱动程序，可通过驱动软件来自定义按键、编辑宏和修改RGB灯光效果,体验完整键盘功能


驱动下载和固件升级

前往ATK官网: ATKGEAR.COM
可下载最新驱动程序和进行固件升级
体验键盘完整功能


English

01 Product List and Specifications

Model: ATK RS6 Air
Key: 68 keys
Keyboard Switch: Magnetic Switch
Device Name: ATK RS6 Air
Rated Power: 5V ⎓ 1A
Working Mode: Wired Type-C Interface

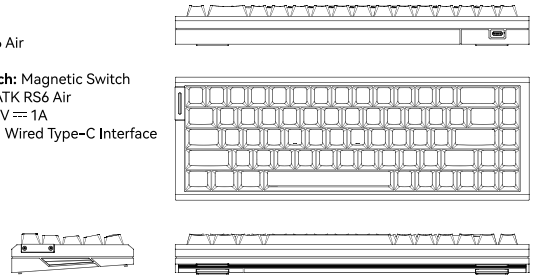

02 FN Combination Functions

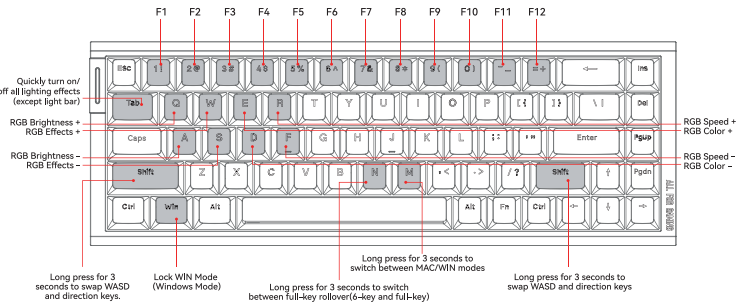

03 Device Connection

(Wired Mode)

- Connect the keyboard's Type-C interface to the device's USB-A interface using the product's USB cable. The keyboard is successfully connected when the lights turn on.

04 Instructions for Special FN Key Functions

Restore Factory Settings

- Fn+Backspace+ESC: Press and hold for 5 seconds in sequence, the keyboard's overall light will flash red three times before returning to factory settings.

Swap WASD with Direction Keys

- Press and hold Fn+Shift in sequence for 3 seconds. The W, A, S, D keys will flash red 3 times to switch to the up, down, left, right direction keys, and the keyboard restores the default lighting effect.

Switch Between Windows/Mac System Modes

- Press and hold Fn+M in sequence for 3 seconds. The M key's light will flash red 3 times to switch to Mac system mode, and the keyboard restores the default lighting effect.

Lock Win Key

- Fn+Win: Short press Fn+Win to turn on the Win key's red light for constant on. Short press the combination again to unlock.(valid only in Windows mode)

05 Common Issues

How can I customize keys, use keyboard macros, and modify more RGB lighting effects?

- You can download the latest driver for ATK HUB from the official website at ATKGEAR.COM. This driver allows you to customize keys, edit macros, and modify RGB lighting effects within ATK HUB, providing you with the full keyboard functionality experience.

Driver Download and Firmware Upgrade

Visit the ATK official website: **ATKGEAR.COM**

To download the latest driver and perform firmware upgrades, experiencing the full keyboard functionality.