
# Ace 60 Magnetic Switch Keyboard

Tips: The pictures in this manual are schematic diagrams and may differ from the actual product. Please refer to the actual product.

PART 1

## PRODUCT OVERVIEW

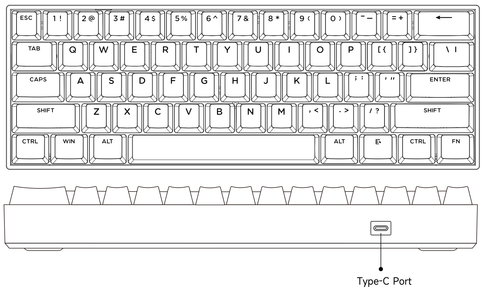


PART 2

## CONNECTION MODE

## FN Combination Key

FN +

| Lighting Functions | | | |
|---|---|---|---|
| .> | Switch Backlight Color | ;: | Backlight Speed - |
| [{ | Backlight Brightness - | '" | Backlight Speed + |
| ]} | Backlight Brightness + | \\| | Switch Light Mode |

PART 3

## CONNECTION MODE

## FN Combination Key

FN +

| Key Combination Function | | | |
|---|---|---|---|
| ESC | ~ | 7& | F7 |
| 1! | F1 | 8* | F8 |
| 2@ | F2 | 9( | F9 |
| 3# | F3 | 0) | F10 |
| 4$ | F4 | -_ | F11 |
| 5% | F5 | =+ | F12 |
| 6^ | F6 | | |

PART 4

## CONNECTION MODE

## FN Combination Key

FN +

| Key Combination Function | | | |
|---|---|---|---|
| Y | PRT SCR | C | Next Song |
| U | Scrlk | V | Volume + |
| I | PAUSE | B | Volume - |
| H | INS | N | Mute |
| J | HOME | /? | ↑ |
| K | PageUp | 🖱 | ↓ |
| Backspace | Delete | ALT | ← |
| ,< | PageDown | Right CTRL | → |
| M | End | Right Shift | Arrow Key Function Swap |
| Z | Previous Song | Left CTRL | Number or F1 Function Key Area Swap |
| X | Pause/Play | Space | Restore Defaults |