MCHOSE

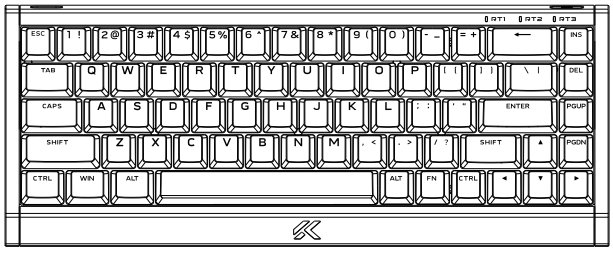

— Ace 68 *GT* Series User Manual —

Hall Effect Magnetic Switch Keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

· PRODUCT OVERVIEW

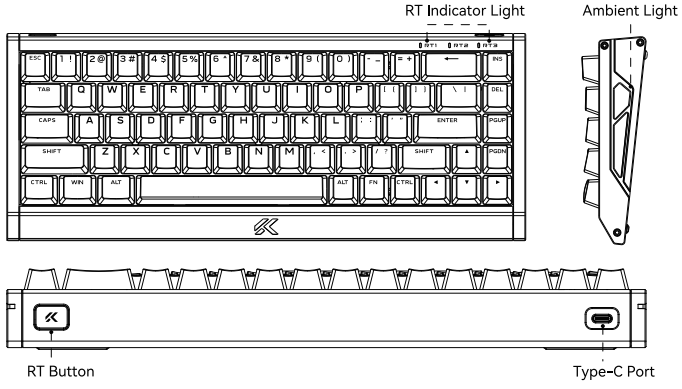

· DRIVER INTRODUCTION

Web Driver: https://www.mchose.store/pages/mchose-hub
Open the URL in a browser, click on **[Open M HUB WEB]** > **[Initialize Device]** > **[Allow Browser Access]**, and then select the corresponding product model to connect.

Desktop App Driver: https://www.mchose.store/pages/mchose-hub
Open the URL in a browser, click on **Download M HUB Driver** and then download and install it.

Note: The MHUB desktop app driver currently supports Windows 10 or later only; Windows 7 and macOS are not supported at this time.

· COMBINATION KEY FUNCTIONS

Fn +

O	Press and hold for 2s to switch to Windows mode (default)
P	Press and hold for 2s to switch to Mac mode
1!	F1
2@	F2
3#	F3
4$	F4
5%	F5
6^	F6
7&	F7
8*	F8
9(	F9
0)	F10
-_	F11
=+	F12

· COMBINATION KEY FUNCTIONS

Fn +

Esc	·	W	Switch Ambient Light Mode
]}	Pause	E	Ambient Light Brightness –
[{	Print	R	Ambient Light Brightness +
Ins	Home	A	Switch Ambient Light Color
Del	End	T	Lights Off/On
Z	Previous Track	Y	Switch Backlight Color
X	Next Track	U	Switch Backlight Effect
C	Play/Pause	F	Backlight Brightness –
V	Stop	G	Backlight Brightness +
B	Mute	H	Backlight Speed –
N	Volume Down	J	Backlight Speed +
M	Volume Up		
Win	Lock / Unlock Windows Key		
Space	Restore Default Settings (press and hold for about 2s)		