Make It Yours.

MOTION 1

Cooler Master Haptic Gaming Chair

Thank you for choosing the Motion 1.
To maximize your experience with the Motion 1,
Please read this instruction manual carefully
and familiarize yourself with the haptic engine chair
before your first ride.

感謝您購買Motion 1超體感電競椅,
提醒您組裝前請先仔細閱讀安裝說明書及注意事項。

COMPLIMENTARY
LIFETIME SUBSCRIPTION
D-BOX CONNECT

STEP 1 體感椅安裝影片

ASSEMBLY VIDEO

STEP 2 軟體安裝說明

SOFTWARE INSTALLATION

1 Download Software Manual
下載使用說明書

2 Download The Software
下載操作軟體


3 Check Connections
確保裝置正確連接

4 Follow The Software Guide Set Up
參照使用說明書進行設定

⚠ CAUTIONS

PLEASE check on the product label that this product is **suitable to use with the voltage supplied in your country.** This product contains electronics and high voltage power components. Do not disclose, place, or operate this product in an environment that contains flammable or explosive gas, smoke as well as wet or hot environments. We highly recommend to study the product safety information carefully.


請注意插座電壓是否符合Motion 1產品上的電壓標示。

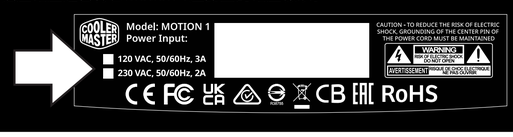




INSIDE THE BOX 1/2

Please check that these parts are inside the box and free from any damage

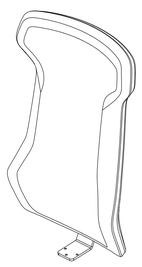
(D) Backrest x 1 (椅背)

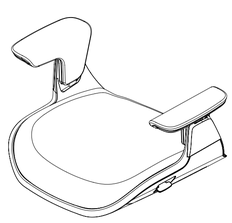
(E) Seat base x 1 (坐墊)




(F) Magnetic Head Pillow x 1 (磁吸式頭枕)


(G) Magnetic Lumbar Support x 1 (磁吸式腰靠)



(H) Double Thumb Knob x 1 (固定旋鈕)



(I) M8 Screws x 3 (M8螺絲)

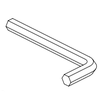
(J) 5mm Allen Key x 1 (5mm六角板手)


(K) 3mm Allen Key x 1 (3mm六角板手)

INSIDE THE BOX 2/2

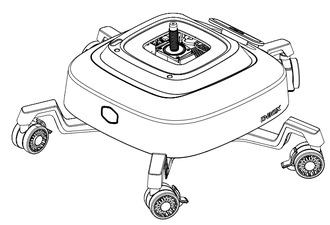
(A) Motion Engine x 1 (Motion 模組)

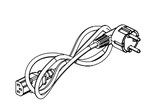
(B) AC Power Cord (電源線)


(C) USB TYPE B-A Cable x 1 (USB TYPE B-A 線材)

ATTENTIONS
注意事項


Help from another individual will make the installation process faster and easier.
建議兩人以上合作進行安裝，將使流程更為快速容易

Motion 1 is **Not Designed for Children**.
To avoid accidents and injury, children must be under constant supervision by adults when using Motion1

Motion 1並非設計給兒童使用，為了避免意外與任何傷害，兒童使用Motion 1時請務必由成年家長全程陪同。


Study this whole instruction manual before you get started.
使用前請完整詳閱使用說明書。

Max. Weight Load: 120kg (265lbs)
最大載重量: 120公斤 (265磅)

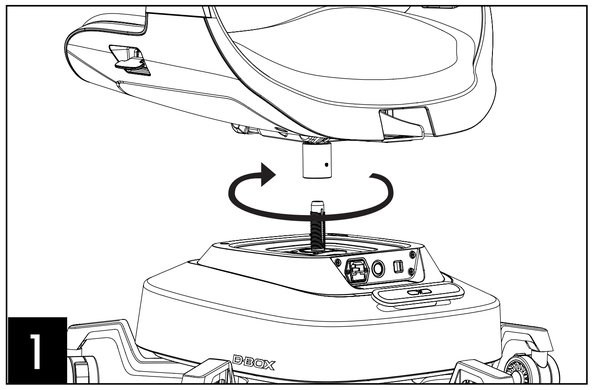


Put (A) on a flat surface. Align and carefully turn (E) onto the male post of (A). Turn (E) clockwise till (E) is secured on the seat post. Do not turn (E) to the very bottom of the male post. Make sure you leave enough space for installing (D) on the next step.

將坐墊(E)順時針轉入Motion 模組(A)上，請先不要轉至最底部以保留足夠距離安裝椅背(D)。

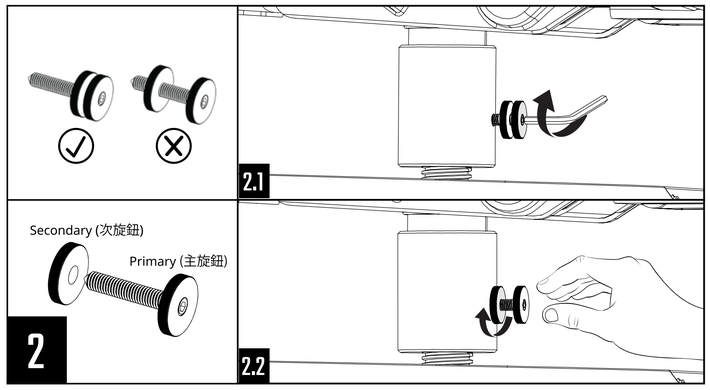


Spin the secondary knob to move it close to the primary knob. Use (K) to tighten (H) into the seat post. Grab the secondary knob and spin until it hits and pushes against the seat post.

使用六角板手(K)將固定旋鈕(H)鎖入金屬坐管中，並轉動次旋鈕直到碰觸坐管。

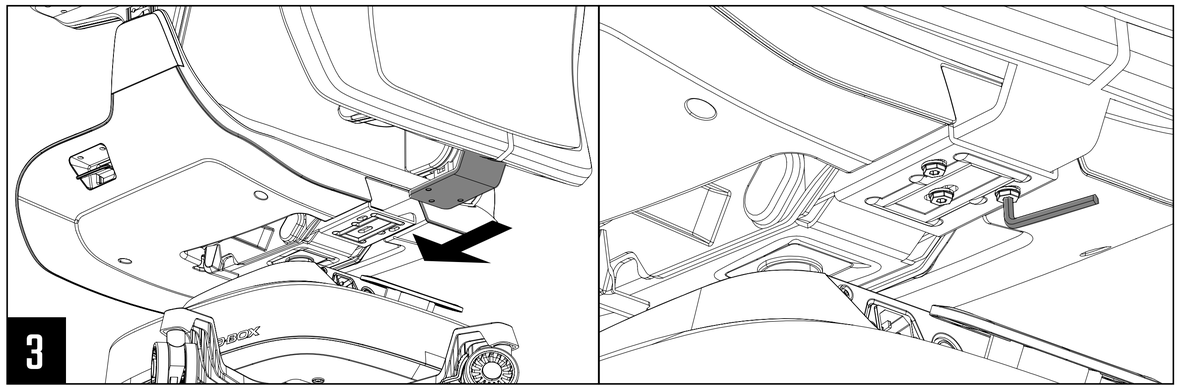


Mount (D) onto the seat's recliner. Use (J) to simultaneously tighten all screws in place while checking (D) is orientated and aligned with (E). If there is not enough room for (J) to work around, simply turn (E) counter-clockwise. Make sure (E) is still secured on the seat post and you have enough space to tighten those screws. Be careful not to turn (E) until it comes off from the seat post. This could potentially cause serious injury and damage.

使用六角板手(J) & M8螺絲(I)把椅背(D)組裝至坐墊(E)上。

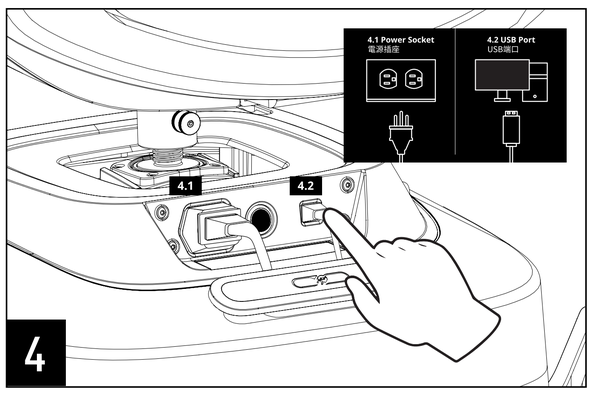


Connect (B) and (C) to (A). Wrap both cables a few rounds on the rear-mounted cable hook. Connect (B) to your AC power socket and (C) to your computer. Check to ensure all connections and cables are secured. Press the power button to turn on (A), then continue to **https://masterplus.coolermaster.com** as the installation process includes D-BOX MotionCore software. Once installation is complete, all software features are ready to use.

將電源線(B)及USB線材(C)接入Motion模組(A)上，同時將(B)及(C)另一頭分別接入插座和PC上，並善用模組後方的理線設計來整理線材，按壓電源按鈕來啟動Motion。
MasterPlus 軟體下載: https://masterplus.coolermaster.com

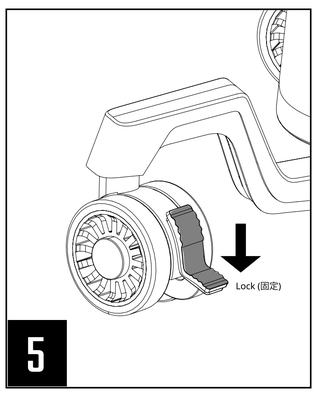


There is a lock function on the caster wheels which you can use when experiencing the Motion 1.

體驗Motion 1時建議您將輪子固定住。

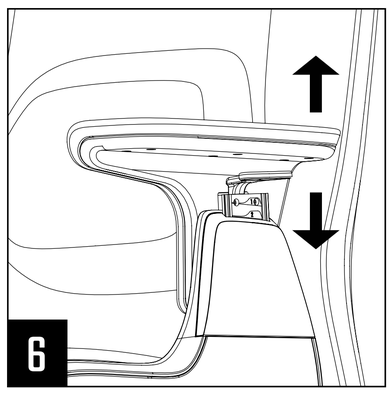


To adjust the height of armrest, simply use the trigger on both sides of armrest to lock/unlock the height adjustment.

扶手可以依據喜好調整高低。

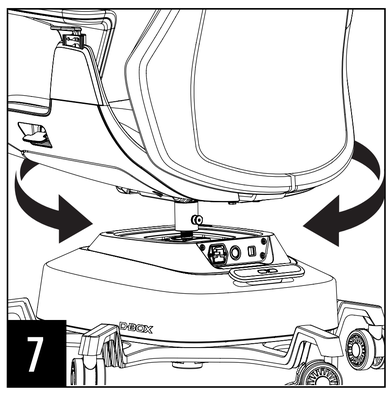


The seat height can be adjusted. Turn (E) clockwise or counter-clockwise to adjust the height. When you finish the adjustment, make sure (E) faces towards the front and (H) is used to prevent (E) from rotating and rocking.

坐墊高低可以依據喜好做調整, 當您調整完畢後請記得將固定旋鈕 (H) 鎖入坐墊底部金屬坐管中 。

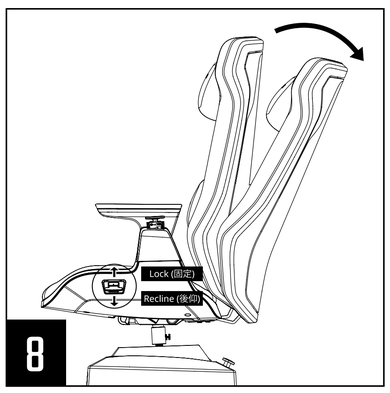

Backrest adjustment (90°~120°)

椅背後仰角度調整 (90°~120°)

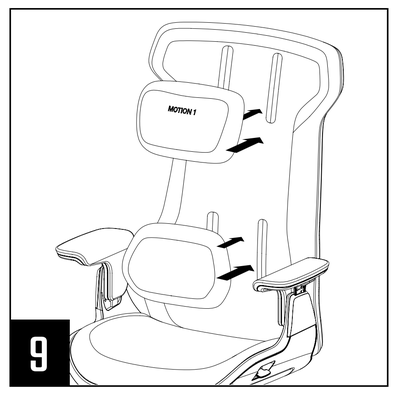

(F) and (G) use magnets to secure them in place. Place them on the backrest wherever you feel the most comfortable.

頭枕與腰靠是磁吸式的, 可以依據個人喜好調整。