291.00 mm

97.00 mm

142.00 mm

fifine | AMPLITANK

TANK1 USER'S GUIDE



AS Version:24-V1


CONTENT

Product Description 1
Guidelines for Use 2-3
Frequency Response Adjustment 3-4
Specification 4

WHAT'S IN THE BOX


1 x XLR Dynamic Microphone
1 x User's Manual

PRODUCT DESCRIPTION

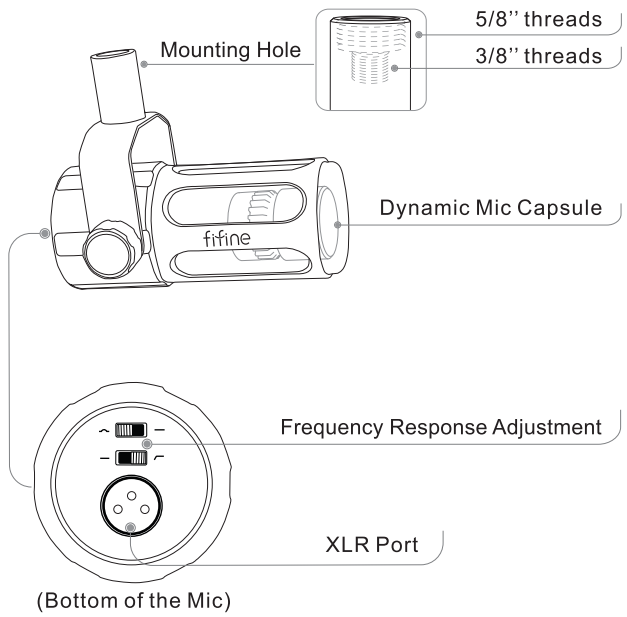


GUDIELINES FOR USE


1. Mic-Stand Installation - The mounting hole of Tank1 has both 3/8" and 5/8" threads which can be connected to most type of mic-stands without using adapter.
   Attach the mounting hole to the mic-stand, and tighten the screw until they are firmly connected.

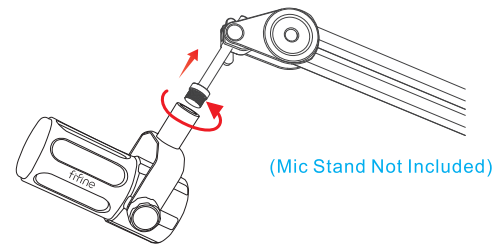

2. Connect Tank1 to an audio interface via an XLR cable (Not Included), then the microphone volume and mute status can be controlled by audio interface.

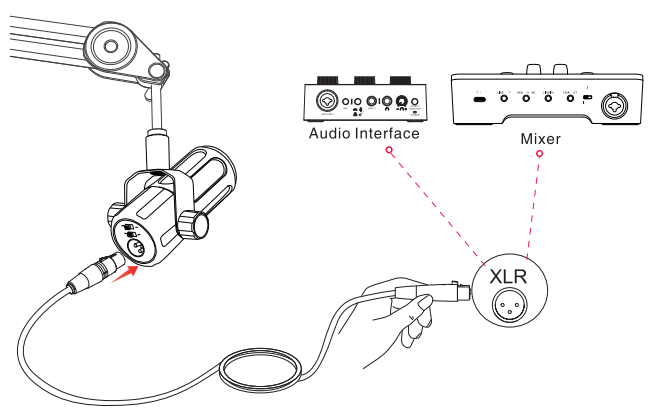


3. Please keep the audio source facing the top of Tank1 like the picture below to fully use the cardioid directional mic capsule when using the microphone.
   The most recommended usage range is within 2-6 inches to the top of the microphone.

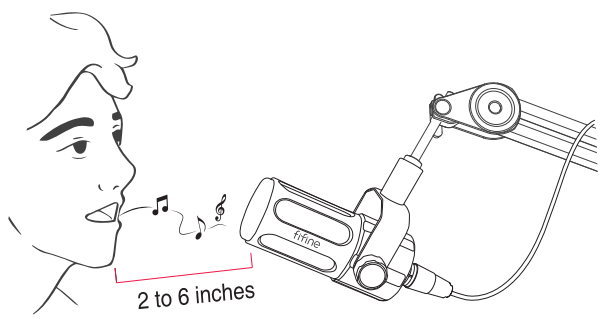


FREQUENCY RESPONSE ADJUSTMENT

▶ Mid-Boost

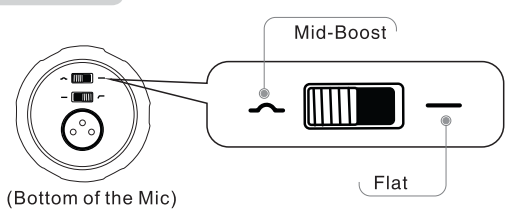

When switched to ⁓, the microphone will be more responsive to the mid-range frequency, which allow vocals to be highlighted by default.
When switched to —, the audio at all frequency range that goes through the microphone will remain at the same volume.

▶ Low-Cut Filter

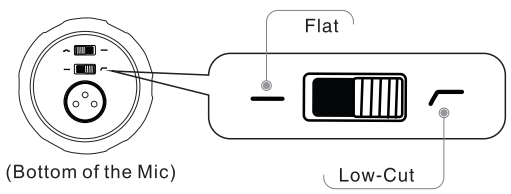

When switched to ⌐, the microphone will automatically cuts off the ambient noise at low frequency range to get a clearer audio.
When switched to —, the audio at all frequency range that goes through the microphone will remain at the same volume.

Tips:
1. There is no XLR cable included.
2. Tank1 dynamic mic does not need phantom power.
3. Connect the mic to audio interface/mixer for use. Adjust the sound (like mic gain/mic mute/monitoring) on the audio interface/mixer.
4. Always keep the sound source facing the top of the microphone. It is suggested that speak into the mic within about 2-6in.

SPECIFICATION

Model Number: TANK1
Connection: XLR
Element: Dynamic
Polar Pattern: Cardioid
Sensitivity: -59±3dB
Frequency Range: 50Hz-15KHz
Output Impedance: 140Ω±30% at 1KHz

WARRANTY

Every Fifine product comes with a Limited Warranty that in normal use of product will be free of any defects in material or workmanship for a period of one year from its original date of purchase. For detailed warranty info, please refer to the warranty policy on our website, or contact us directly.

CERTIFICATION

Eligible to bear CE Marking.

Authorized European Representative:

Name: AOCE INFORMATION TECHNOLOGY

Address: 61 rue de Lyon 75012 Paris France

Tel: +33-633297410

Authorized British Representative:

Name: AOCE LIMITED

Address: Office Suite 29a 3/F 23 Wharf Street, London, England, SE8 3GG

Tel: +44-759 7659 775