EVATW01
EVATW02
EVATW06

User's Manual
取扱説明書
使用说明书

final

SNEXT Co., Ltd.
3-12-7 Kitakase, Saiwai-ku,
Kawasaki-shi, Kanagawa
212-0057, Japan

©カラー

EN


Package contents




Main units



Charging case



User's manual
(warranty card included)





5 size ear tips
(designed for truly wireless earphones)



USB Type-C
charging cable

Part name




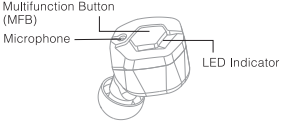

Power/Charging

Charging the charging case:


Connect the accessory USB charging cable (C) connector to the USB port on the charging case and connect the USB (A) connector to an electrical appliance or adapter with the same shape of connector and the internal battery within the charging case will begin to charge. While charging, the LED indicator light will flash.



LED	Battery Remaining
● ○ ○ ○	0%-25%
● ● ○ ○	25%-50%
● ● ● ○	50%-75%
● ● ● ●	75%-100%

Charging the earphones:

Insert the earphone units into the charging case and they will begin to charge.




	Charging the charging case	Charging the earphones
Charging	White LED flashes	Orange LED lights up
Charging completed	All LEDs light up	Orange LED turns off

Turning on the earphones

After charging, remove the earphones from the charging case and the power will automatically switch ON. (When the LED indicator lights up for 1 second, the power is ON.)


When the power is OFF, press the MFB button one time to switch the power ON.

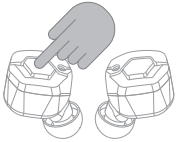

Turning off the earphones

Continuously press the MFB button for about 3 seconds until two types of beep sound emanate, and the power will switch OFF.

When the charging case is adequately charged, returning the earphones to the charging case will automatically switch the power OFF and charging will begin.



Performing device pairing

To connect to your smartphone or other device initially, it is necessary to perform pairing.
For devices which have already completed pairing, a connection will automatically be established the next time the power is switched ON.



The first time the earphones are used:

1. Remove the left and right earphones from the charging case, and they will automatically be in pairing mode. (The LED indicator at left flashes between orange and white.)
2. Switch the Bluetooth function on the smartphone or other device ON and select [EVATW01_L] *1 once it appears on the display.
3. A [Bluetooth pairing request] from the other side earphone will appear on the display, so please select [pairing] or [OK]. (The display varies depending on the smartphone or other device to which it is connected.) When the following appears on the display of the device being connected, left/right pairing has been completed.

*1: In the case of EVATW02, [EVATW02_L], in the case of EVATW06, [EVATW06_L] will be displayed.

EVATW01	
EVATW01_L	Connected
EVATW01_R	Not connected

EVATW02	
EVATW02_L	Connected
EVATW02_R	Not connected

EVATW06	
EVATW06_L	Connected
EVATW06_R	Not connected

* If Connected is displayed for either side, pairing has succeeded.

* The side for which connected is displayed is the parent earphone.

Performing device pairing

To reestablish pairing or to perform pairing with a second or later device:

1. Remove the earphones from the charging case and the LED indicator will light up white for 1 second as the power automatically switches ON.
2. Press the MFB button on one side of the earphones to switch to pairing mode. (LED indicator flashes between orange and white.)
3. Switch the Bluetooth function on the smartphone or other device ON, and select either [EVATW01_L] or [EVATW01_R] *2 once it appears on the display.
4. A [Bluetooth Pairing Request] from the other side earphone will appear on the display, so please select [Pairing] or [OK]. (Varies depending on the smartphone or other device to which it is being connected.) Left and right pairing has been completed when any of the messages below have been displayed.

*2: In the case of EVATW02, either [EVATW02_L] or [EVATW02_R]; in the case of EVATW06, either [EVATW06_L] or [EVATW06_R] is displayed.

EVATW01	
EVATW01_L	Connected
EVATW01_R	Not connected

EVATW02	
EVATW02_L	Connected
EVATW02_R	Not connected

EVATW06	
EVATW06_L	Connected
EVATW06_R	Not connected

* If Connected is displayed for either side, pairing has succeeded.
* The side for which connected is displayed is the parent earphone.
* Before performing pairing with a new device, please disconnect the device to which it has already been paired or switch the Bluetooth function OFF on the device to which it has already been paired.

When pairing has not been successfully completed (Reset Method):

1. Insert the left and right earphones into an adequately charged charging case and press the MFB button on both sides simultaneously for 10 or more seconds and the LED indicator will first turn off, then light up in orange.

Performing device pairing

2. Next, remove the left and right earphones, and the LED indicator will flash white as pairing is performed between the left and right earphones.
3. After a certain amount of time, the earphones will automatically switch to pairing mode with the smartphone or other device. In this situation, the reset has been completed. Once the reset has been completed, please attempt another pairing operation.

Operation of the MFB Button

		L	R
Music	Playback	Press Once	
	Pause	Press Once	
	Next Track	—	Press until beep sound emanates once, then release
	Previous Track	Press until beep sound emanates once, then release	—
	Raise Sound Volume	Press Twice	—
	Lower Sound Volume	—	Press Twice
Incoming Calls	Receive Call	Press Once	
	End Call	Press Once or insert into charging case	
	Refuse Call	Press Twice	
Siri/ Google Assistant	Initialize	Press Twice (Parent earphone, only while music is stopped)*	

* Depending on the device to which connected, this function may not be available.

Voice guidance

Situation in which Voice Guidance is provided	Japanese	English
When power to the earphones is switched ON	Shisutemu kidoushimasu	Entry system start
When power to the earphones is switched OFF	Shisutemu shuryoshimasu	Entry system over
When pairing mode is initiated	Shinkuro kaishishimasu	Pairing start
When pairing has been successfully completed	Shinkuro kanryoshimashita	Pairing all green
When pairing is complete and usage becomes possible	Setsuzoku saremashita	System connected
When pairing has been disconnected	Kaijo saremashita	System disconnected

Changing voice guidance language (Japanese / English):

1. Please disconnect pairing of this product to smartphone or other devices.
2. After removing the left and right earphones from the charging case, pressing the MFB button on either side earphone continuously for 15 seconds until 4 types of beep sound emanate switches the language of the voice guidance. Once switching the voice guidance on one side has been completed, the other side will automatically switch as well.

About the ear tips

When bass is difficult to hear and high range sound jars the ear, there is a possibility that the ear tip fit is not appropriate. In order to enjoy music in accordance with the design of the earphone, it is important that the ear tip fits properly and there is a means of sealing the ear canal. In order to achieve the proper fit, please try the following method:

- Please try various sizes, not just M size.
- In case of small ears, please try not just S and SS size, conversely try larger sizes as well.
- Even if the size of the ear canal is the same, the left and right ears may be different, so please also try different sizes for left and right.

Points of Caution

- There is a risk of permanent hearing loss from extended use at excessive sound volumes. Please do not exceed 40 hours use per week at a sound volume of 80 dB(A) or 5 hours per week at a volume of 89 dB(A).
- To avoid electromagnetic interference, please refrain from use in places in which the use of electronic devices is prohibited.
- If you are using a pacemaker or other electronic medical device, please consult your physician before using this product.
- This product contains small parts that may be hazardous to children, so please store in a place that is out of the reach of children.
- Please do not subject to strong shocks or apply excessive force. Damage from abnormal use is not covered by the warranty. To prevent damage, please store the earphones inside the case in an appropriate location.
- Causing damage to the circuits may result in fire or electrical shock, so please do not attempt to disassemble this product.
- Please keep this product away from water or other liquids that may cause shorts or other damage.
- Always keep the charging terminals clean. Dirt and dust adhered to the metal charging points of the earphones or the pins of the charging case might cause short-circuit, burn, or fire.
- Please do not attempt to repair this product yourself as unauthorized attempts at repair may void the product warranty.
- Never use earphones when operating a bicycle, automobile, motorcycle or other motor vehicle as this is a cause of traffic accidents and there is a risk of serious consequences. Even when not driving, please do not use at railroad crossings, traffic intersections and other environments where there is a danger in the inability to hear surrounding sounds.
- This product may be damaged if it is placed in locations where the environment is subject to excessive direct sunlight, humidity, dust and other contaminants.

Problem	Cause	Remedy
Earphones will not turn ON.	(Immediately after purchasing) Battery charge is low.	For safety of transportation from overseas, laws and regulations do not allow the internal battery to be fully charged at the time of shipping. For that reason, voltage may fall below the level required for operation at the time the customer opens the package. Fully charging the battery before use may relieve this inconvenience. Please refer to “Power/Charging” on P.3 regarding the method for charging.
	Earphone batteries are depleted.	Please place the earphones in the charging case and charge them. (In case the charge in the charging case has run out, first charge the charging case.) Please refer to “Power/Charging” on P.3 regarding the method for charging.
	MFB has not been pressed for adequate time.	Please press the MFB button long enough for the earphone to turn ON. Please refer to “Turning on the earphones” on P.4 regarding the method for turning the earphones ON.
Earphones will not turn OFF.	An error has occurred due to improper operation.	In some cases, performing a reset operation may fix the problem. Please refer to “When pairing has not been successfully completed (Reset Method)” on P.6 regarding the reset method.
	MFB has not been pressed for adequate time.	Please press the MFB button long enough for the earphone to turn OFF. Please refer to “Turning off the earphones” on P.4 regarding the method for turning the earphones OFF.


Problem	Cause	Remedy
Earphones will not turn OFF.	Charging case battery charge is low.	In some cases, the battery remaining in the charging case drops before you notice. After once charging the charging case, place the earphones in the charging case and check that the LED indicator illuminates. Please refer to “Power/Charging” on P.3 regarding the method for charging.
	Using ear tips other than those included as accessories.	When ear tips other than those included as accessories are used, there are cases in which they may interfere with the charging case and make satisfactory charging impossible. Please check to see whether proper charging is possible using original ear tips.
Earphones cannot be charged.	Metal contact on earphone is not touching the pins on the charging case.	Please check that there is adequate contact between the metal contacts and the pins on the charging case.
	Charging case battery charge is low.	In some cases, the battery remaining in the charging case drops before you notice. After once charging the charging case, place the earphones in the charging case and check that the LED indicator illuminates. Please refer to “Power/Charging” on P.3 regarding the method for charging.
	Using ear tips other than an accessory.	When ear tips other than those included as accessories are used, there are cases in which they may interfere with the charging case and make satisfactory charging impossible. Please check to see whether proper charging is possible using original ear tips.

Problem	Cause	Remedy
Earphones cannot be detected / paired.	Earphones are not in the pairing mode.	In some cases, performing a reset operation may fix the problem. Please refer to “Performing device pairing (When pairing has not been successfully completed (reset method))” on P.6.
	(Once pairing has been performed) Has automatically been connected to a previously connected device.	Please try performing the pairing operation again after having deleted the pairing information from a previously paired device.
While playing music, sound (connection) is interrupted.	Receives interference from external factor, and an impact on the connection status results.	Bluetooth communicates using the 2.4GHz band. This band is used by other wireless standards such as Wi-Fi, etc., and so there is a possibility of receiving interference. Moreover, this 2.4GHz band does not penetrate liquids. There is impact from humidity and rain, and the human body also contains liquid, so there are individual differences in connectivity. Furthermore, it depends on the specifications of smart phones and other devices. For that reason, switching OFF unused Wi-Fi/Bluetooth settings on surrounding devices, etc. is a countermeasure. While outside, there is a possibility that moving a smartphone from inside a bag to a breast pocket, etc. or otherwise reducing the distance between devices may improve the connection status.

Problem	Cause	Remedy
Sound only comes out from one side.	The left/right earphone pairing has been released.	In some cases, performing a reset operation may fix the problem. Please refer to “Performing device pairing (When pairing has not been successfully completed (reset method))” on P.6.
	The battery of one side of the earphones has depleted.	Please place the earphones in an adequately charged charging case and charge the earphones. Please refer to “Power/Charging” on P.3 regarding the method for charging.
In case it takes time to charge	The output of the USB adapter being used for charging is low.	In case you are using the USB port on a PC, etc., there are cases in which the output is low and it may take more time to charge than the publicly listed value. As such, please use a 5V/1A USB adapter when charging this product.
Battery consumption is fast for one side of the earphones only.	Based on the design specification, one side is the parent and the other side is the child, so the burden between left and right is different.	Under the specification for Bluetooth earphones, communication generally takes place with one side as the parent and the other as the child. As such, the child only communicates with the parent, but the parent communicates with the smartphone or other device and communicates with the child as well, and so there is a difference in the level of burden borne by the left and right earphone. As a result, a difference in the battery consumption between the left and right may occur.

Maintenance

Gently remove any build-up from the mesh filter with the tip of a toothpick. Please take care to ensure that no foreign particles fall inside when doing so.



Warranty and after service

The warranty for this product is valid for 1 year from the day of purchase. During the warranty period, we will repair the product based on the provisions below. The warranty is only valid in the country in which the product was purchased. Please contact the store you purchased the product from regarding questions pertaining to repairs. For products purchased outside your country of residence and for support after the warranty period, please contact us using the Contact Form on our website.

1. During the warranty period, we will repair the product free of charge if the product failed even though it was used in accordance with the instructions in the user's manual and the point of caution sections.
2. In the following cases, repairs to the product will be subject to a fee even during the warranty period:

(1) The necessary documentation noted in the warranty card is not complete.

(2) The product is identified to be modified, disassembled, or repaired by a third party or customer other than our company or our authorized organizations.

(3) The earphones were subjected to a strong impact or were allowed to get wet. Product failure resulting from an excessive use of force on the product.

(4) Failure of the product or damage caused as a result of fire, earthquake, storm or flood damage, lightning strike or other natural disaster.

(5) Repair of scratches on the surface of the housing or repair of the housing itself.

Contacting us

Please contact us regarding inquiries using the Contact Form on our website:
www.snext-final.com

SNEXT Co., Ltd.
3-12-7 Kitakase, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0057, Japan

* There is a possibility of a change in the specification, so please check our website for the latest user's manual.

WARRANTY CARD

final

This card is necessary in the event that the warranty is utilized. Please store this card along with a receipt or other documentation showing the date of purchase in a safe place to be produced in the event that the warranty is utilized. Please refer to the manual for the provisions of the warranty.

JP

同梱品




イヤホン本体



充電ケース



取扱説明書
（保証書付）





イヤーピース５サイズ
（ワイヤレス専用仕様）



USBタイプC
充電用ケーブル

各部の名称

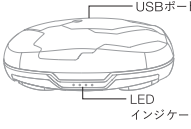


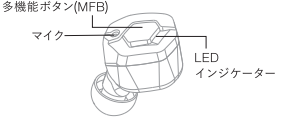

充電する

充電ケースを充電する：


付属の充電用ケーブルUSB(C)コネクタを充電ケースのUSBポートに接続し、USB(A)コネクタを同形状のコネクタを有する電子機器やアダプターに接続すると充電ケース内蔵バッテリーの充電が開始されます。充電中はLEDインジケーターが点滅します。



LED	電池残量
● ○ ○ ○	0%-25%
● ● ○ ○	25%-50%
● ● ● ○	50%-75%
● ● ● ●	75%-100%

イヤホンの充電をする：

充電ケースに本機を装着すると充電が開始されます。




	充電ケースの充電	イヤホンの充電
充電中	白いLEDが点滅	オレンジのLEDが点灯
充電完了	全てのLEDが点灯	オレンジのLEDが消灯

電源をONする

充電後、イヤホンを充電ケースから取り出すと、自動的に電源がONになります。(LEDインジケーターが白く1秒点灯すると電源がONになっています。)


電源がOFFになっている場合、MFBボタンを1回押すと電源がONになります。

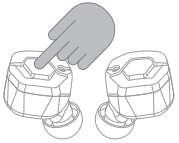

電源をOFFする


MFBボタンを約3秒間、2種類の電子音が鳴るまで押し続けると、電源がOFFになります。

充電ケースの充電量が十分な場合、イヤホンを充電ケースに戻すと、自動で電源がOFFになり、充電が開始されます。



ペアリングする

お手持ちのスマートホン等の機器と初めて接続する場合は、ペアリングを行なう必要があります。ペアリングが完了した機器同士は、次回からイヤホンの電源をONするだけで自動的に接続できます。



本機を初めてご使用になる場合:

1. 充電ケースから左右のイヤホンを取り出すと、自動的にペアリングモードになります。(左側のLEDインジケーターがオレンジ・白に交互点滅します。)
2. スマートホン等の機器のBluetooth機能をONにし、画面に「EVATW01_L」※1が表示されたら選択します。
3. 画面にもう片方のイヤホンの「Bluetooth ペアリングの要求」のポップアップが表示されますので、「ペアリング」もしくは「OK」を選択します。(接続するスマートホン等の機器によって表示が異なります。)接続する機器の画面に、下記のように表示されましたら左右のペアリングは完了です。

※1:EVATW02の場合は「EVATW02_L」、EVATW06の場合は「EVATW06_L」と表示されます。

EVATW01の場合	
EVATW01_L	接続済
EVATW01_R	未接続

EVATW02の場合	
EVATW02_L	接続済
EVATW02_R	未接続

EVATW06の場合	
EVATW06_L	接続済
EVATW06_R	未接続

※どちらかに接続済と表示されればペアリング成功です。

※接続済と表示される側が親イヤホンです。

ペアリングする

ペアリングをやり直す場合・2台目以降の機器とペアリングする場合：

1. 充電ケースからイヤホンを取り出すと、LEDインジケーターが白く1秒点灯して、電源は自動的にONになります。
2. 片側のイヤホンのMFBボタンを2回押すと、ペアリングモードに移行します。(LEDインジケーターがオレンジ・白に交互点滅します。)
3. スマートホン等の機器のBluetooth機能をONにし、画面に「EVATW01_L」もしくは「EVATW01_R」※2のどちらかが表示されたら選択します。
4. 画面にもう片方のイヤホンの「Bluetooth ペアリングの要求」のポップアップが表示されますので、「ペアリング」もしくは「OK」を選択します。(接続するスマートホン等の機器によって表示が異なります。)接続する機器の画面に、下記のように表示されましたら左右のペアリングは完了です。

※2：EVATW02の場合は「EVATW02_L」もしくは 「EVATW02_R」、EVATW06の場合は「EVATW06_L」もしくは「EVATW06_R」と表示されます。

EVATW01の場合	
EVATW01_L	接続済
EVATW01_R	未接続

EVATW02の場合	
EVATW02_L	接続済
EVATW02_R	未接続

EVATW06の場合	
EVATW06_L	接続済
EVATW06_R	未接続

※どちらかに接続済と表示されればペアリング成功です。

※接続済と表示される側が親イヤホンです。

※新しいデバイスとのペアリングを行う前に、既にペアリングされているデバイスとの接続をお切りいただくか、既にペアリングされているデバイスのBluetooth機能をOFFにしてください。

ペアリングがうまくいかなかった場合(リセット方法)：

1. 電池残量が十分な充電ケースに左右のイヤホンを入れた状態で両側のイヤホンのMFBボタンを同時に10秒以上長押しすると、LEDインジケーターが一度消灯した後にオレンジの色に点灯します。
2. その後、左右のイヤホンをケースから取り出すと、LEDインジケーターが白色に点滅して左右のイヤホン同士のペアリングが行われます。

ペアリングする

3. 一定時間経つと自動的にスマートホン等の機器とのペアリングモードに移行します。LEDインジケーターはオレンジと白に交互点滅します。この状態でリセットが完了です。
   リセット完了後、再度ペアリング操作をお試しください。

MFB ボタン操作

		L	R
音楽	再生	1回押す	
	一時停止	1回押す	
	次の曲へ	—	電子音が1回鳴るまで長押ししてから離す
	前の曲へ	電子音が1回鳴るまで長押ししてから離す	—
	音量を上げる	2回押す	—
	音量を下げる	—	2回押す
着信	着信受話	1回押す	
	通話終了	1回押す、または充電ケースに入れる	
	着信拒否	2回押す	
Siri/Googleアシスタント	起動する	2回押す(親イヤホン・音楽停止状態のみ)※	

※接続する機器によっては、機能しない場合があります。

音声ガイダンス

音声ガイダンスが流れる場面	日本語	英語
イヤホンの電源をONにした時	システム起動します	Entry system start
イヤホンの電源をOFFにした時	システム終了します	Entry system over
ペアリングモードにした時	シンクロ開始します	Pairing start
ペアリングが成功した時	シンクロ完了しました	Pairing all green
ペアリングが完了し、使用可能状態になった時	接続されました	System connected
ペアリングが解除された時	解除されました	System disconnected

音声ガイダンスの言語（日本語 / 英語）を切り替える場合：

1. スマートホン等の機器から本製品のペアリング状態を解除してください。
2. 充電ケースから取り出した状態で左右のどちらかのイヤホンのMFBボタンを4種類の効果音が鳴り終わるまで離さず15秒間長押しすると音声ガイダンスの言語が切り替わります。
   片側の音声ガイダンスの切替が完了すると、もう片方のイヤホンも自動的に切り替わります。

イヤーピースについて

低音を感じにくい、高い音が耳障りに感じる場合は、イヤーピースの装着が合っていない可能性があります。イヤホンを設計通りの音質で楽しむためには、イヤーピースを正しく装着し、耳道内が密閉された状態で使用することが重要です。正しく装着するために下記の方法をお試しください。

・Mサイズだけでなく、様々なサイズで試してみる。
・耳が小さい場合には、SやSSサイズを試すだけでなく、逆に大きめのサイズも試してみる。
・耳道の大きさは同じ人でも左右で異なりますので、左右で異なるサイズのイヤーピースを試してみる。

注意事項

・長期にわたる過剰な音量での使用は永久的な難聴を招く恐れがあります。80dB(A)の音量で40時間/週、89dB(A)の音量で5時間/週を超えないようにしてください。
・電磁妨害を防ぐために、電子機器の使用が禁止されている場所での使用は避けてください。
・ペースメーカー等電子医療機器を使用している場合、本製品を使用する前に医師にご相談ください。
・本製品には小さな部品があり、子供に危険を及ぼす可能性があるため、子供の手の届かないところで保管してください。
・強い衝撃を与えたり、無理な力を加えたりしないでください。異常な使用状況下での故障は保証の対象外となります。破損を防ぐために、ケースの適切な位置にイヤホンを収納してください。
・回路故障を引き起こし、火災や感電の原因になりますので、本製品を分解しないでください。
・ショートや故障の原因となりますので、水などの液体に濡らさないでください。
・イヤホンの金属接点及び充電ケースのピンの汚れやホコリ等を定期的に取り除き、異物が付着することのないようにしてください。感電や本体の異常な発熱の恐れがあります。
・ご自分で本製品を修理しないでください。不正な修理がなされた場合、製品保証が無効になる可能性があります。
・自転車や自動車、オートバイなどを運転しながらのイヤホンの使用は絶対に避けてください。交通事故を引き起こす原因となり、重大な結果を引き起こす恐れがあります。運転以外であっても、踏切や交差点他、周囲の音が聞こえないと危険な環境では、ご使用にならないでください。
・直射日光の当たる場所、湿気、埃等の多い環境に放置すると、故障の原因となります。

問題点	原因	対処法
イヤホンの電源がONにならない	(ご購入直後の場合) 電池残量が少ない	内蔵バッテリーは、海外からの輸送の安全のため、法令に基づき工場出荷時にフル充電にすることができません。そのため、お客様が開封された際に動作に必要な電圧を下回ることがございます。 ご使用の前にフル充電してください。 充電方法については、P.17の「充電する」をご確認ください。
	イヤホンの電池切れ	イヤホンを充電ケースに入れて充電してください。(充電ケースも充電切れの場合、まずは充電ケースを充電してください) 充電方法については、P.17の「充電する」をご確認ください。
	MFBボタンを十分な時間押していない	MFBボタンを電源がONになるまで長押ししてください。 電源をONにする方法については、P.18の「電源をONする」をご確認ください。
イヤホンの電源がOFFにならない	誤操作のためエラーが発生している	リセット操作を行なうことで改善する場合がございます。 リセット方法については、P.20の「リセット方法」をご確認ください。
	MFBボタンを十分な時間押していない	MFBボタンを電源がOFFになるまで長押ししてください。 電源をOFFにする方法については、P.18の「電源をOFFする」をご確認ください。


問題点	原因	対処法
イヤホンの電源がOFFにならない	充電ケースの 電池残量が少ない	気付かないうちに充電ケースの電池残量が少なくなっている場合がございます。充電ケースを一度充電した後に、イヤホンをケースに収納してLEDインジケーターが点灯するかご確認ください。 充電方法については、P.17の「充電する」をご確認ください。
	付属品以外のイヤーピースを使用している	付属品以外のイヤーピースをご使用の場合、充電ケースに干渉して充電が満足にできない場合がございますので、付属品のイヤーピースで正常に充電が出来るかご確認ください。
イヤホンが充電できない	イヤホンの金属接点が充電ケースのピンと接触していない	金属接点と充電ケースのピンとの接触具合が十分であることをご確認ください。
	充電ケースの 電池残量が少ない	気付かないうちに充電ケースの電池残量が少なくなっている場合がございます。充電ケースを一度充電した後に、イヤホンをケースに収納してLEDインジケーターが点灯するかご確認ください。 充電方法については、P.17の「充電する」をご確認ください。
	付属品以外のイヤーピースを使用している	付属品以外のイヤーピースをご使用の場合、充電ケースに干渉して充電が満足にできない場合がございますので、付属品のイヤーピースで正常に充電が出来るかご確認ください。

問題点	原因	対処法
イヤホンの検索/ペアリングができない	イヤホンがペアリング状態にならない	リセット操作を行なうことで改善する場合がございます。 リセット方法については、P.20の「リセット方法」をご確認ください。
	(一度ペアリングを行なった場合) 以前接続した機器に自動的に接続されている	以前ペアリングされた機器のペアリング情報を削除してから、再度ペアリング操作を行なってください。
音楽再生中に音(接続)が途切れる	外的要因により干渉を受け、接続状況に影響が出ている。	Bluetoothは、2.4GHzの帯域を使って通信を行なっております。 この帯域は、Wi-Fiなどさまざまな無線規格で使われておりますので、それらの干渉を受ける可能性がございます。 また、この2.4GHz帯は水分を貫通しません。湿度や雨天による影響や、人体も水分ですので、接続性に個人差がございます。さらにスマートホン等の機器のスペックにも依存いたします。 そのため、ご自宅では周囲の使用していないWi-Fi/Bluetoothの設定をOFFにする等が対策です。外出中であれば、鞄のスマートホン等を胸ポケットに移動させる等、機器同士の距離を近づけることで接続状況が改善される可能性がございます。

問題点	原因	対処法
片側しか音が出ない	左右間のイヤホンのペアリングが解除されている	リセット操作を行なうことで改善する場合がございます。 リセット方法については、P.20の「リセット方法」をご確認ください。
	片側のイヤホンの電池が切れている	電池残量が十分な充電ケースにイヤホンを収納してイヤホン本体を充電してください。 充電方法については、P.17の「充電する」をご確認ください。
充電に時間が掛かる	充電に使用しているUSBアダプターの出力が低い	PC等のUSBポートをご使用いただいている場合、出力が低く、公称値よりも充電に時間が掛かる場合がございます。 そのため、本製品を充電される際には、5V/1AのUSBアダプターをご使用ください。
イヤホンの片側だけ電池消費が早い	仕様上、片方が親機、もう一方が子機となり、左右間で負荷が異なる	Bluetoothイヤホンはその仕様上、一般的に片側が親機、もう一方が子機となり通信を行ないます。 そのため、子機側のイヤホンは親機との通信のみ行ないますが、親機側はスマートホン等の機器に加え、子機側のイヤホンとも通信を行なうため、左右で掛かる負荷量に違いが生じます。それにより、左右間で電池消費に差が生じる場合がございます。

メンテナンス

メッシュフィルターに付着したゴミは、爪楊枝の先端にゴミを付着させる形でやさしく取り除いてください。内部にゴミが落下しないように、気をつけて作業してください。



保証とアフターサービス

本製品の保証期間はお買い上げ日より1年間です。保証期間中は以下の保証規定に基づき修理致します。保証はご購入頂いた国でのみ有効です。修理のお申込は弊社WEBサイトの「CONTACT」ページの「修理申込フォーム」より行なってください。居住国以外の国でご購入の場合や保証期間後のサポートについては、弊社WEBサイトの「CONTACT」ページの「お問い合わせフォーム」よりお問い合わせください。

1. 保証期間内に、取扱説明書に記載の警告、注意書きに従った使用状態で故障した場合には、無償修理させていただきます。

2. 保証期間内でも次の場合には、有償で修理させていただきます。

(1) 保証書に記載の必要書類が揃っていない場合。

(2) 弊社および弊社が指定する機関以外の第三者やお客様により改造、分解、修理がなされた場合。

(3) 強い衝撃を与えたり、水に濡らした場合。無理な力がかかるような状況下で起こった故障。

(4) 火災、地震、風水害、落雷、その他天変地異などによる故障。

(5) 筐体表面の傷の修理、筐体自体の修理。

お問い合わせ

弊社WEBサイトの「CONTACT」ページの「お問い合わせフォーム」よりお問い合わせください。

www.snext-final.com

SNEXT 株式会社
〒212-0057 神奈川県川崎市幸区北加瀬 3-12-7

※仕様変更の可能性がございますので、最新の取扱説明書は弊社WEBサイト「DOWNLOAD」ページをご確認ください。

WARRANTY CARD

final

このカードは保証をお受けになる際に必要になります。
レシート等、購入日を証明するものと一緒に保管し、保証を受けられる際はご提示ください。
保証規定はマニュアルをご参照ください。

CH

内容物



耳机本体



充电盒



使用说明书
（附保证书）





耳胶 5 种尺寸
（无线耳机专用规格）



C 型 USB
充电用电线

各部位名称




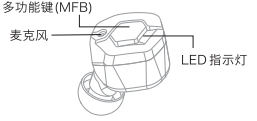

充电方式

对充电盒进行充电：


将配件的充电用电线 USB-C 型连接头与充电盒上的 USB-C 型插槽接上，然后再将电线另一端的 USB-A 型连接头与含 USB-A 型插槽的充电器或转换器连接后，即可为充电盒内的电池进行充电。充电中 LED 指示灯会闪烁显示。



LED	电池残余量
● ○ ○ ○	0%-25%
● ● ○ ○	25%-50%
● ● ● ○	50%-75%
● ● ● ●	75%-100%

对耳机进行充电：


将耳机本体安置在充电盒中专属位置上，即可进行充电。



	充电盒的充电状态	耳机的充电状态
充电中	白色 LED 灯闪烁	橙色 LED 灯亮起
充满电	全部的 LED 灯闪烁	橙色 LED 灯熄灭


启动耳机

充电后将耳机本体从充电盒中取出，耳机本体会自动启动电源。(白色 LED 指示灯长亮约 1 秒即表示电源已经启动。)
关机状态中的耳机可以通过按压 MFB 多功能键 1 次来进行重启。

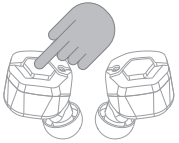


关闭耳机

MFB 多功能键持续长按约 3 秒，直到 2 次电子提示音效响起为止，电源即被关闭。
充电盒仍有电量的情况下，将耳机本体放回充电盒专属位置后，会自动切断电源进入充电模式。



进行连线配对

手边的智能手机或其它待连线机器在初次连线状况下需要连线配对。一旦完成连线配对的机器产品，当下次耳机电源启动时会自动与先前已连线产品进行连线。



初次使用本机时：

1. 从充电盒中将左右耳机取出，耳机会自动切换成连线配对模式。(左边的 LED 指示灯会呈现橙色及白色信号交相闪烁的状态。)
2. 将智能手机或待接机器的蓝牙功能开启，从选单中选取「EVATW01_L」※1 的名称选项。
3. 画面会跳出另一边耳机「要求蓝牙连线配对」的讯息，此时选取「连线」或「OK」的选项。(根据待连线智能手机或机器的机型不同，会有不同的描述内容。) 待连线机器的画面有显示以下的情况，表示左右连线配对完成。

※1：EVATW02 的机型会显示「EVATW02_L」，EVATW06 的机型会显示「EVATW06_L」。

EVATW01的情况	
EVATW01_L	连线完成
EVATW01_R	未连线

EVATW02的情况	
EVATW02_L	连线完成
EVATW02_R	未连线

EVATW06的情况	
EVATW06_L	连线完成
EVATW06_R	未连线

※左右任一边显示连线完成即表示成功连线配对。
※显示连线完成的单边耳机为主耳机。

进行连线配对

连线配对重置的情况・第２台机器进行连线配对的情况：

1. 从充电盒中取出耳机本体后，白色 LED 指示灯会长亮约 1 秒并自动启动电源。
2. 连按单边无线耳机的 MFB 多功能键 2 次，即切入连线配对模式。（LED 指示灯会呈现橙色及白色信号交相闪烁的状态。）
3. 将智能手机或待接机器的蓝牙功能开启，从选单中选取「EVATW01_L」或「EVATW01_R」※2 依所持的机种选取适当的选项。
4. 画面会跳出另一边耳机「要求蓝牙连线配对」的讯息，此时选取「连线」或「OK」的选项。（根据待连线智能手机或机器的机型不同，会有不同的描述内容。）待连线机器的画面有显示以下的情况，表示左右完成连线配对。

※2：EVATW02 的机种是显示「EVATW02_L」或「EVATW02_R」，EVATW06 的机种是显示「EVATW06_L」或「EVATW06_R」。

EVATW01的情况	
EVATW01_L	连线完成
EVATW01_R	未连线

EVATW02的情况	
EVATW02_L	连线完成
EVATW02_R	未连线

EVATW06的情况	
EVATW06_L	连线完成
EVATW06_R	未连线

※任一边显示连线完成即表示成功连线配对。

※显示连线完成的单边耳机为主耳机。

※新装置进行连线配对前，请解除现有装置的连线或将已经连线配对成功的装置蓝牙功能部分进行关闭。

连线配对不成功时（重置方法）：

1. 将左右无线蓝牙耳机置入电池残余量足够的充电盒中，两边耳机的 MFB 多功能键同时长按约 10 秒以上，直到 LED 指示灯一度熄灭后亮起橙色灯为止。

进行连线配对

2. 之后，将左右耳机从充电盒中取出，耳机的白色 LED 指示灯在闪烁的同时，耳机会自动进行左右连线配对。
3. 一定时间后会自动切换成与智能手机或待连接线机器进行连线配对模式。LED 指示灯会呈现橙色及白色交相闪烁的状态。此时表示重置作业完成。重置完成后，请再度进行连线配对的操作。

MFB 多功能键的操作

		L	R
音乐	播放	按 1 次	
	暂停	按 1 次	
	下一曲	—	长按直到听到电子提示音效响起才放开
	上一曲	长按直到听到电子提示音效响起才放开	—
	音量上升	连按 2 次	—
	音量下降	—	连按 2 次
来电	接听来电	按 1 次	
	结束通话	按 1 次或直接放回充电盒	
	拒接来电	连按 2 次	
Siri/Google 语音助理	启动	连按 2 次（仅限于主耳机・非音乐模式状态）※	

※因连线机种而异，有可能不支援该项功能。

语音提示

语音提示播放的时机	日文	英文
耳机电源开启时	システム起動します Shisutemu kidoushimasu	Entry system start
耳机电源关闭时	システム終了します Shisutemu shuryoshimasu	Entry system over
进入连线配对模式时	シンクロ開始します Shinkuro kaishishimasu	Pairing start
完成连线配对时	シンクロ完了しました Shinkuro kanryoshimashita	Pairing all green
完成连线配对、使用可能状态下	接続されました Setsuzoku saremashita	System connected
连线配对解除时	解除されました Kaijo saremashita	System disconnected

语音提示声道(日文 / 英文)的切换方式:

1. 请解除智能手机等机器与本产品的连线状态。
2. 在耳机从充电盒中取出的状态，左右边耳机任一方的 MFB 多功能键长按至 4 种音效响完为止，大约 15 秒左右，即完成语音提示声道的切换。一边的语音提示声道切换完成后，另一边耳机会自行切换。

关于耳胶

如果有发现低音的呈现不良或高音刺耳的情况，这有可能是耳胶的着装不适当所引起。为了能愉快的体验耳机本身所设计的音质，耳胶的正确的着装，以及选择能维持耳道内密闭装态的耳胶尺寸十分重要。为了达到以上条件最佳的情况，请参考下面的调整方式。

- 请多尝试各种尺寸，不要只用 M 尺寸。
- 耳孔比较小的情况，请不要只尝试使用 S 或 SS 尺寸，相反的较大尺寸的耳胶也可以尝试使用看看。
- 同一个人也是可能有左右耳道尺寸不对称的情况，所以请尝试看看在左右耳使用不同尺寸的耳胶。

注意事项

- 长时间过大音量下使用，有可能会造成永久性的听觉受损。80 dB(A) 的音量使用情况下建议每周请不要超过 40 小时，89 dB(A) 的音量使用情况下建议每周请不要超过 5 小时。
- 为了防范电磁波所造成的影响，电子仪器使用禁止的区域，请不要使用。
- 心律调节器等电子医疗仪器佩戴使用中的人，使用本产品前请先与医生讨论及确认。
- 本产品体积较小，为了防范对儿童可能造成的危险，请保管于儿童无法触及的地方。
- 请避免让产品承受强力的冲击或不当外力的负荷。被认定为不正常使用下所产生的损坏，产品将丧失保修。为了避免破损，请将耳机妥善保存于充电盒内规划的位置中。
- 请不要分解本产品，以避免因电路故障所引起的火灾或触电问题。
- 请注意不要让产品受潮或沾到水及液体，以避免短路或故障的发生。
- 耳机金属充电端子及充电盒中的充电顶针上，脏污及灰尘请定期进行清理、维持清洁不让异物附着。以防范触电或耳机本体异常发热的情况发生。
- 请不要尝试自行修理本产品。不当修理的情况下，有可能造成产品保修失效。
- 在驾驶自行车，汽机车等交通工具时，绝对避免同时使用耳机产品，以防范造成交通方面等相关事故发生的严重后果。即使在非驾驶的情况下，也请不要在听不到周围环境声音而容易导致危险的地方使用，如平交道或十字路口等。
- 为了避免造成产品的故障，请不要将产品保存于阳光直射，湿气重或尘埃多的环境下。

状况	原因	对应方式
耳机电源无法开启	(产品购入第一次使用时) 产品内含电力不足	内藏电池的产品，为了能确保海外运输上的安全性，基于法条规定，不能在满电的状态下进行运送。 为此，在客人产品开封时，产品内电池含量有可能会低于产品作动所需的电量。使用前如果先将产品充满电后再使用，则有可能让该问题得以解决。 关于充电方式，请参阅使用说明书第 31 页的「充电方式」内容。
	耳机电池没电	请将耳机放入充电盒中进行充电。(充电盒电源用尽的情况，请先将充电盒充电。) 关于充电方式，请参阅使用说明书第 31 页的「充电方式」内容。
	MFB 多功能键按压时间不够长	请长按 MFB 多功能键直到电源开启为止。 关于电源的开启方式，请参阅使用说明书第 32 页的「启动耳机」内容。
耳机电源无法关闭	错误操作所引发的故障情况	有可能经由进行重置设定使问题得以改善。 关于重置设定的方法，请参阅使用说明书第 34 页「连线配对不成功时(重置方法)」的内容。
	MFB 多功能键按压时间不够长	请长按 MFB 多功能键直到电源关闭为止。 关于电源的关闭方式，请参阅使用说明书第 32 页的「关闭耳机」内容。


状况	原因	对应方式
耳机电源无法关闭	充电盒内的电池电量不足	这很有可能是在不自觉的情况下将电源使用怠尽所造成的。请对充电盒进行充电后，将耳机放回充电盒，同时确认 LED 指示灯是否会亮起。 关于充电方法，请参阅使用说明书第 31 页的「充电方式」内容。
	使用 (配件/原厂) 以外的耳胶	使用 (配件/原厂) 以外的耳胶时，充电盒的充电功能可能会受到阻扰，有可能造成充电不足的情况。请将耳胶更换成 (配件/原厂) 产品后，再确认是否能正常充电。
耳机无法充电	耳机的金属充电端子与充电盒中的充电顶针无法接触	请确认耳机金属充电端子与充电盒中的充电顶针接触情况是否稳合。
	充电盒的电池电量不足	这很有可能是在不自觉的情况下将电源使用怠尽所造成的。请对充电盒进行充电后，将耳机放回充电盒，同时确认 LED 指示灯是否会亮起。 关于充电方法，请参阅使用说明书第 31 页的「充电方式」内容。
	使用 (配件/原厂) 以外的耳胶	使用 (配件/原厂) 以外的耳胶时，充电盒的充电功能可能会受到阻扰，有可能造成充电不足的情况。请将耳胶更换成 (配件/原厂) 产品后，再确认是否能正常充电。

状况	原因	对应方式
耳机无法 正常被搜寻 / 无法连线配对	耳机无法连线配对	有可能经由重置设定使问题得以改善。 关于重置设定的方法，请参阅使用说明书第 34 页「连线配对不成功时（重置方法）」的内容。
	(经过一次连线配对后) 与先前成功连线配对 的机器自行连线	请将机器中先前成功连线配对的资料消除后，再度进行连线配对。
音乐播放中 讯号接收不良	受到外在因素的干扰， 导至影响收讯品质	本机的蓝牙通信设定所使用的频道是在 2.4GHz。该频道广为 Wi-Fi 及许多无线产品使用，可能造成频道中各机器讯号间相互的干扰。 另外 2.4GHz 频道无法穿透水分，会因湿度或雨天等情形下受到影响，另外人体中也富含水分，信号接受能力也会因人而异。再者讯号接收也仰赖智能手机等机器的晶片性能。 因此，在自家环境下，可以尝试将周围未使用的 Wi-Fi / 蓝牙等设定关闭。 在外出的情况下，将包中的智能手机移动到胸前的口袋等位置，可能经由缩短机器间的距离，而改善收讯的情况。

状况	原因	对应方式
只有单边有声响	左右耳机间的连线 遭到解除	有可能经由重置设定使问题得以改善。 关于重置设定的方法，请参阅使用说明书第 34 页「连线配对不成功时（重置方法）」的内容。
	单边耳机的电池没电	请将耳机安置在电力足够的充电盒中，以便对耳机本体进行充电。 关于充电方法，请参阅使用说明书第 31 页的「充电方式」内容。
需长时间才能 完成充电的 情况下	充电时所使用的 USB 变电器功率低弱	当利用 PC 等的 USB 连接埠进行充电时、有可能因为输出电力功率不足，而拉长了产品充电所需时间。 因此，在对本产品进行充电时，请选用 5V/1A 规格的 USB 变电器。
单边耳机的电力 消耗速度较快	规格上单边耳机为主机， 另一边则成为子机， 左右耳机间的负荷量 不大相同	蓝牙耳机的规格上，一般来说会有一单边为主机，而另一边则成为子机的状态下来进行通讯。 为此，子机端的耳机只要跟主机端的耳机进行通讯连线，而主机端的耳机则不仅仅要跟智能手机等机器进行连线通讯，还需要与子机端耳机保持通讯连线，因此左右耳机承受的通讯负荷量自然会有所不同。并可能造成左右耳机在电力消耗上的不同。

耳机保养

清理残留在滤音网的异物时请使用牙签轻轻挑取。请注意别让异物掉入耳机内部。



保修以及售后服务

敝社产品的保修期自购买日起一年内有效。保修期内将按照敝社的保修条款提供维修服务。保修对象仅对该产品的购买国家有效。有关商品的具体的维修事宜，请直接与授权经销商联系。凡是于居住国以外的国家购买的产品，请通过敝社官方网站的「连络」页面咨询维修事宜。

1. 商品在保修期内，且遵守使用说明，仍产生故障，敝社将免费提供维修服务。
2. 商品在保修期内，但出现以下情况，敝社将酌情收取维修费用：

（1）无法出示保证书中记载之必要凭证资料时。

（2）敝社及敝社所认可特定机关以外的第三方或是客人自身所进行的改造，分解，修理等情况。

（3）商品在使用过程中受到外力压迫、进水等情况。故障因受到不合理外力而致使断裂的状况。

（4）火灾、地震、风水灾害、落雷等自然灾害而造成的故障。

（5）表面痕迹清除、单独腔体维修。

客服与连系

详细资讯请与敝社官方网站「连络」页面中「连络表格」处联络

www.snext-final.com

SNEXT Co., Ltd.
3-12-7 Kitakase, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0057, Japan

※因为有规格更动的可能性，最新版本的使用说明书请于敝社网页确认。

WARRANTY CARD

final

本卡片为利用保修服务时所需要的认证卡片。
请将此卡片与能证明购买日期的凭证资料（如：购买收据）
一同保管并于接受保修服务时一并提示。